

GENERAL MOTORS

Chevrolet
GMC

FUSES & CIRCUIT BREAKERS

FUSE PANEL

GMC Motor Home – Fuse panel is located behind an access cover in the glove compartment.

All Other Models – Fuse panel is located on left side of firewall in passenger compartment.

CIRCUIT BREAKERS

All Models – Included in light switch as protection for headlight and parking light circuit. Another circuit breaker is included to protect wiring for Eaton 2-Speed axle (when equipped).

IN-LINE FUSES

GMC Motor Home – In-line fuse protects heater blower motor and is located behind right access door near blower motor.

"G" Models – In-line fuses protect the ammeter and auxiliary heater circuits.

"C", "K" & "P" Models – In-line fuses protect auxiliary heater circuits, underhood lamp, front and rear air conditioning circuits.

FUSIBLE LINKS

All Models – Used to provide increased protection for all circuits except starting motor circuit.

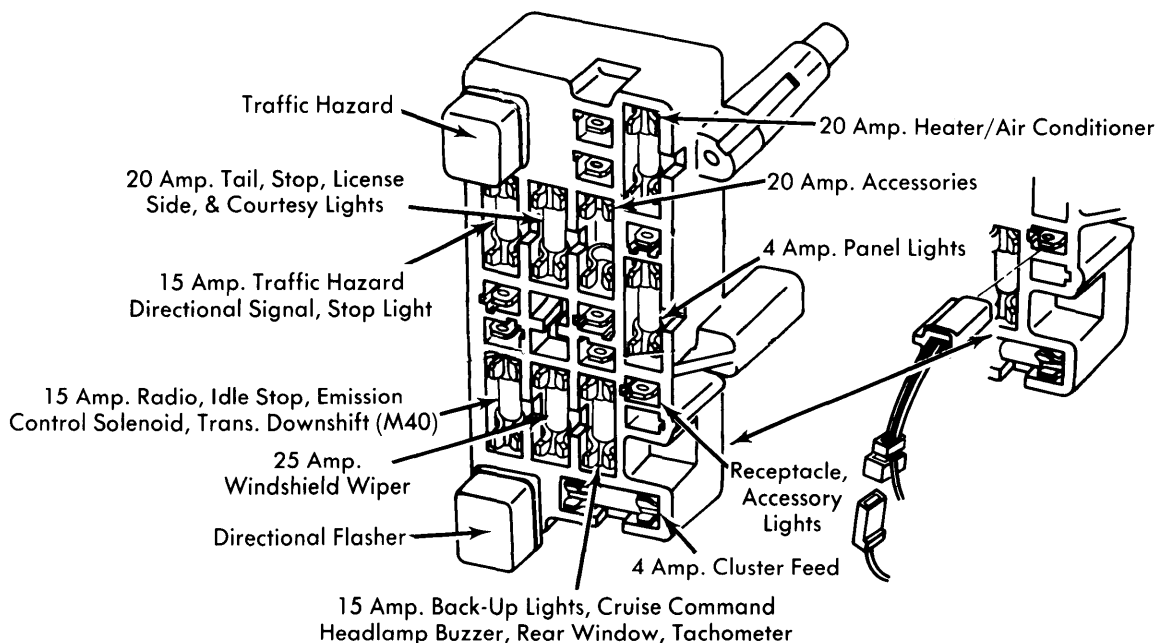


Fig. 1 Fuse Block for "C" and "K" Models

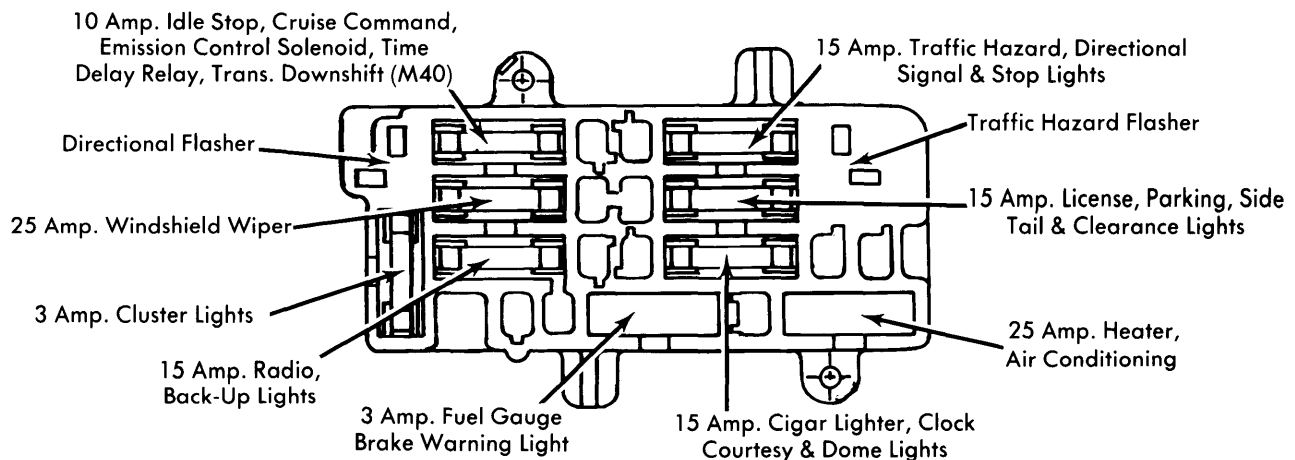


Fig. 2 Fuse Block for "P" Models

Fuses & Circuit Breakers

GENERAL MOTORS (Cont.)

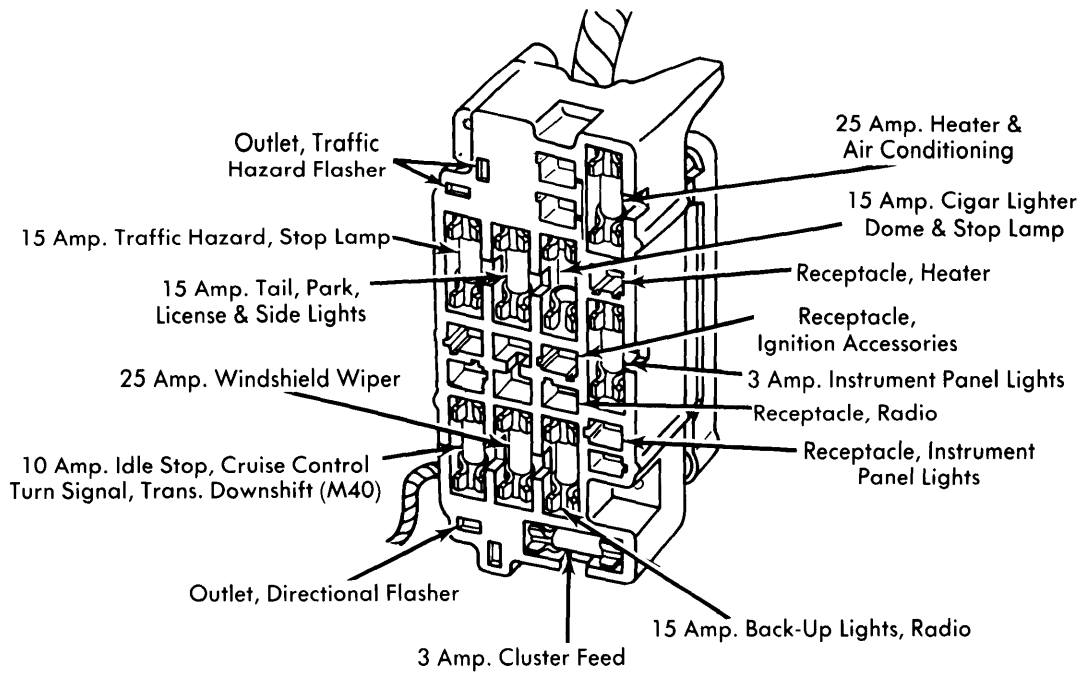


Fig. 3 Fuse Block for "G" Models

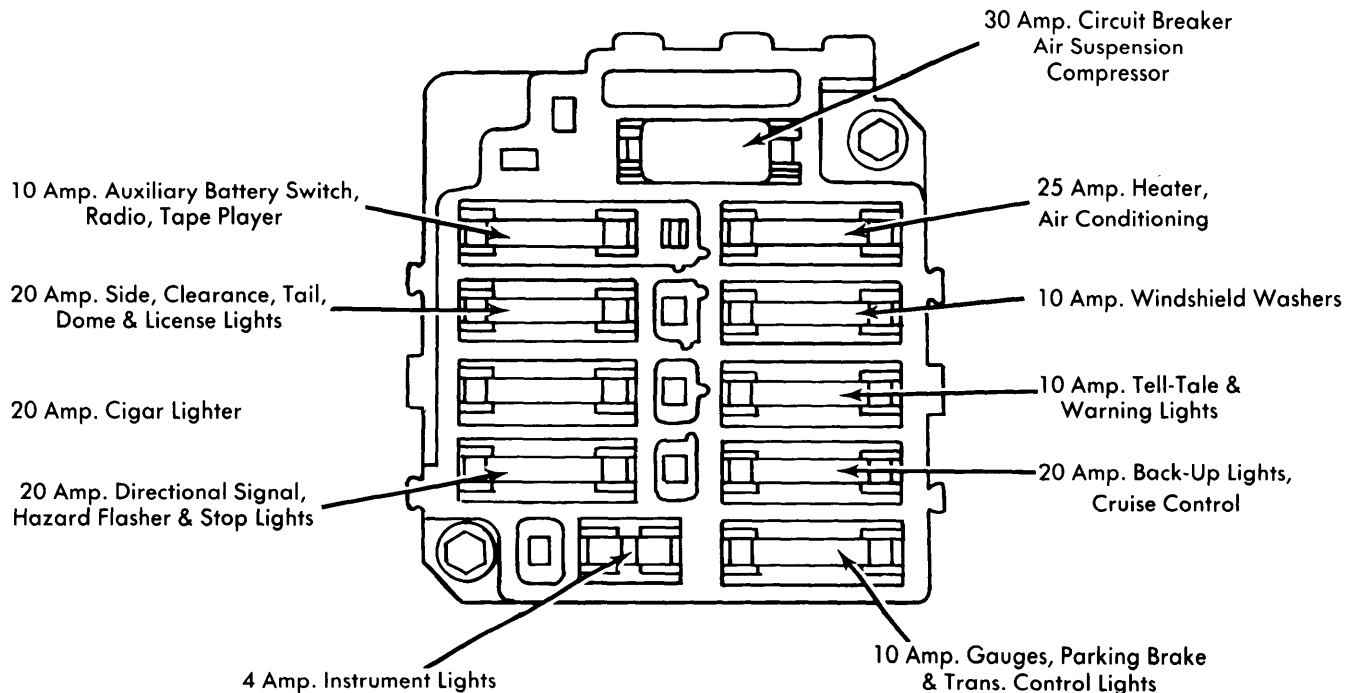


Fig. 4 Fuse Block for GMC Motor Home