

INTERNATIONAL HARVESTER CORP.

International Harvester

FUSE PANEL

Scout II, Terra & Traveler – Fuse panel is located under lower edge of instrument panel to left of the steering column.

150 & 200 Models – Fuse panel is located in the left corner of glove compartment and covered by the glove compartment door.

MS1210 – Fuse panel is located under hood assembly.

CIRCUIT BREAKERS

Scout II, Terra & Traveler – Included in headlight switch as protection for lighting circuit, integral with windshield wiper motor circuit, and included in air conditioning switch (if equipped).

All Other Models – Included in headlight switch as protection for lighting circuit, integral with windshield wiper motor circuit.

FUSIBLE LINKS

Scout II, Terra & Traveler – Fusible link is between starter solenoid switch and dash connector.

150 & 200 Models – Fusible link is between starter solenoid switch and dash connector. On models equipped with electric rear window an additional fusible link is included in circuit from window motor to dash.

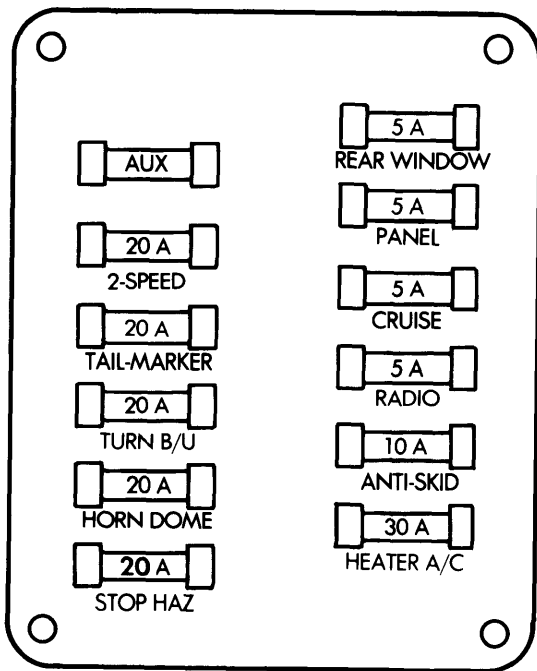


Fig. 1 150 & 200 Models Fuse Panel

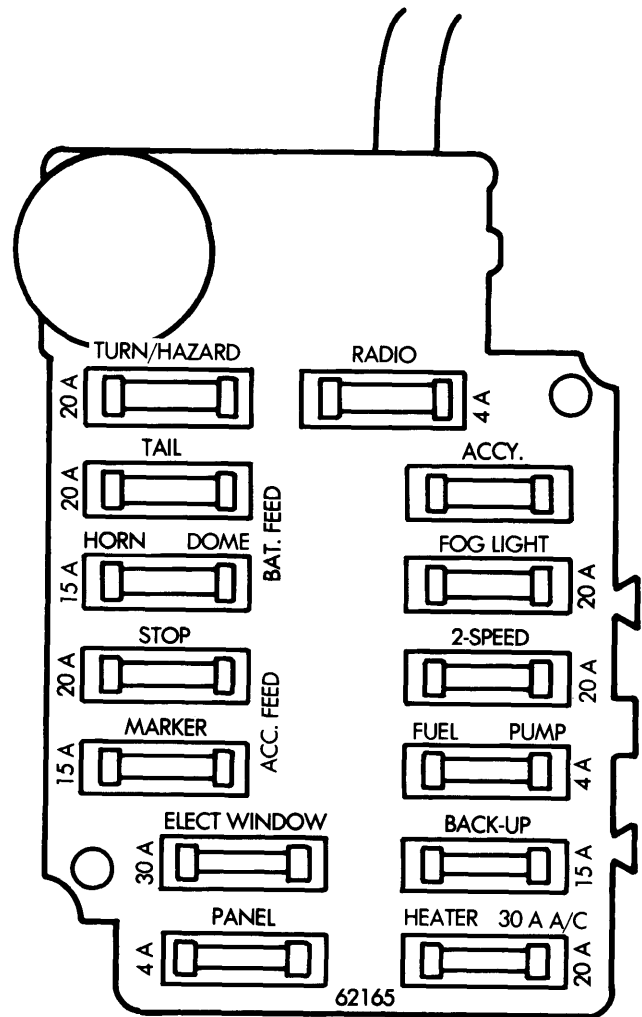


Fig. 2 Scout II, Terra & Traveler Fuse Panel