

INTERNATIONAL HARVESTER CORP.

International Harvester

REMOVAL & INSTALLATION

SPEEDOMETER & GAUGES

All Models – Instrument panel must be removed to gain access to speedometer and gauges for repair or replacement.

INSTRUMENT CLUSTER

All Models (Exc. Motor Home) – Remove faceplate retaining screws, then remove radio control knobs. Remove screws from each cluster. Disconnect speedometer cable and all wiring, then remove cluster from vehicle. To install, reverse removal procedures.

PRINTED CIRCUITS

All Models – Remove instrument cluster. Printed circuit board is removed by disconnecting all snap connectors and light sockets. Remove four attaching screws securing board to dash panel. Remove printed circuit board from vehicle. To install, reverse removal procedures.

HEADLIGHT SWITCH

Light Switch Without Fuse & With Circuit Breaker – Pull headlight switch out to ON position, then loosen Allen screw in knob and remove knob from shaft. Remove ferrule nut and

disconnect all wires from switch while noting positions of wires to aid in installation. Remove switch from vehicle. To install, reverse removal procedures.

All Other Headlight Switches – Pull headlight switch out to ON position, then depress shaft release button on switch body and pull knob and shaft out of switch body. Remove ferrule nut and disconnect all wires from switch while noting positions of wires to aid in installation. Remove switch from vehicle. To install, reverse removal procedures.

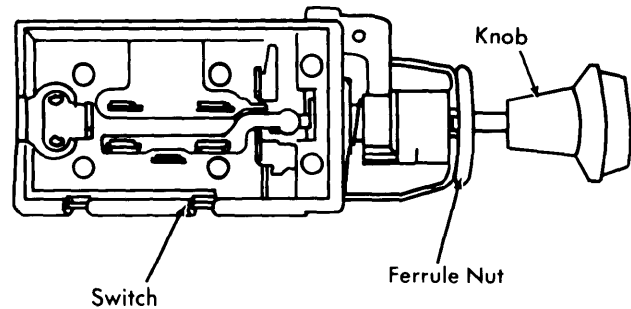


Fig. 2 Headlight Switch (Less Fuse & Circuit Breaker)

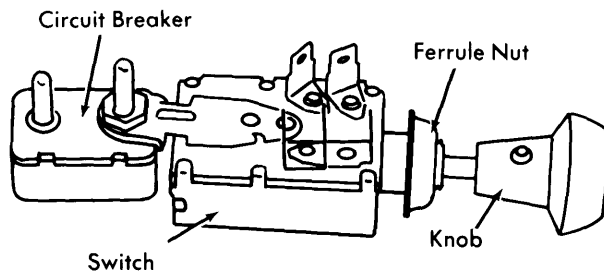


Fig. 1 Headlight Switch (Less Fuse, with Circuit Breaker)

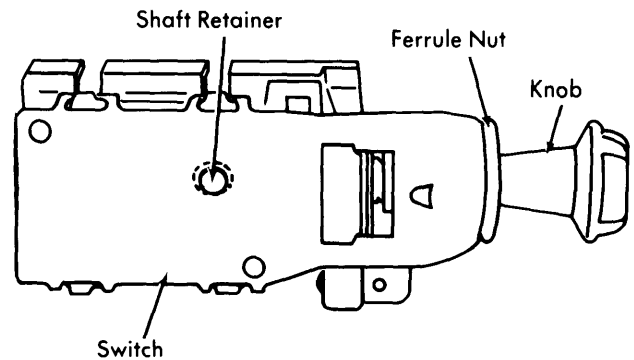


Fig. 3 Headlight Switch (with Fuse & Circuit Breaker)