

RABBIT (GASOLINE), SCIROCCO & DASHER 4 CYLINDER

ENGINE CODING

ENGINE IDENTIFICATION

Engine identification number is stamped on left side of engine block near ignition distributor.

Engine Codes

| Application | Code |
|-------------------|------|
| Rabbit/Scirocco | |
| Man. Trans. | EE |
| Auto. Trans. | EF |
| Dasher | |
| Man. Trans. | YG |
| Auto. Trans. | YH |

ENGINE, CYLINDER HEAD & MANIFOLDS

ENGINE

NOTE — On Rabbit and Scirocco models only, engine and transaxle must be removed as an assembly.

Removal, Rabbit & Scirocco with Man. Trans. — 1) Disconnect battery ground cable. Drain coolant and remove radiator with air ducts and fan. If equipped with A/C, remove compressor and condenser and set aside without disconnecting hoses.

2) Remove fuel injectors from manifold tubes of intake distributor. Disconnect all fuel lines except injector lines from fuel distributor. Remove injection control unit, air ducting and air cleaner.

3) Disconnect electrical wiring from the following: Ignition coil, oil pressure switch, distributor, temperature sending unit, alternator, fuel injection, starter and transmission.

4) Disconnect coolant hoses, accelerator cable, speedometer cable and clutch cable. Remove engine/transaxle front mount. Remove right side headlight cap.

5) Disconnect axle drive shafts and support with wire. Disconnect exhaust pipe from manifold and remove exhaust pipe support. Remove transmission rear mount and ground strap from body to transmission. Remove gear shift linkage.

6) Attach hoist to mount, cast at rear of cylinder head and lower alternator mount in front of engine. Disconnect engine carrier from body and remove left transmission mount. Lift engine and transmission out of vehicle.

7) Using suitable wrench (US 4463), remove TDC sensor (part of analysis system) from clutch housing. To separate transaxle from engine, turn flywheel until mark on flywheel aligns with mark on clutch housing. Remove drive shaft flange cover plate. Then, remove engine-to-transaxle bolts.

Installation — To install engine/transaxle assembly, reverse removal procedure and note the following: When attaching

engine to transaxle, align recess (window) in flywheel level with drive shaft flange. Lift assembly into vehicle. Loosely install right engine mount bolt and loosely attach left transaxle mount to transaxle. Align assembly and loosely attach remaining mounts. Tighten mounts.

NOTE — Mounts must be properly aligned and free of tension before tightening.

Removal, Rabbit & Scirocco with Auto. Trans. — 1) Disconnect battery. Drain coolant and remove radiator with air ducts and fan. If equipped with A/C, remove compressor and condenser and set aside without disconnecting hoses. Remove fuel injectors from manifold tubes of intake distributor. Disconnect all fuel lines except injector lines from fuel distributor.

2) Remove mixture control unit, air cleaner, and intake air duct. Disconnect fuel return line. Disconnect electrical plug from control pressure regulator. Disconnect throttle housing assembly. Disconnect all engine electrical wires. Make sure wire plug at auxiliary air regulator is disconnected.

3) Disconnect speedometer cable. Disconnect selector lever cable at transaxle. Disconnect throttle cable ball socket from lever and unhook accelerator cable from lever. On Scirocco models, remove right side headlight cap.

4) Disconnect axle drive shafts and support with wire. Disconnect exhaust pipe at manifold flange. Remove engine/transaxle rear mount. Remove cover from engine end of clutch housing. Remove torque converter from drive plate.

5) Fit engine hoist to eyes on cylinder head and slightly raise engine. Remove alternator if necessary. Remove front and left transaxle mounts. Remove right engine mount. Engine is free for removal.

6) Separate engine and transaxle. Make sure drive plate pulls cleanly away from converter and does not move cover off support.

Installation — To install engine/transaxle assembly, reverse removal procedure and note the following: After lifting assembly into vehicle, loosely install right engine mount bolt and loosely attach left transaxle mount to transaxle. Align assembly and loosely attach remaining mounts. Tighten mounts.

NOTE — Mounts must be properly aligned and free of tension before tightening.

Removal, Dasher — 1) Disconnect battery. Drain oil. Remove air cleaner. Disconnect clutch operating lever. Disengage cable housing from bracket on engine mount. Disconnect fuel inlet hose and plug.

2) Remove fuse block mounting screws and bend open wiring harness clip. Tie fuel hose, clutch cable and fuse block out of way. Disconnect heater control cable. Remove front engine mount and mount support.

3) Disconnect coil and any engine electrical items that might hinder engine removal. Disconnect all wires from fuel injection components. If equipped with A/C, remove compressor and condenser and set aside without disconnecting hoses. Drain coolant. Remove radiator.

RABBIT (GASOLINE), SCIROCCO & DASHER 4 CYLINDER (Cont.)

4) Work under vehicle and disconnect electrical wires from starter. Remove starter. Disconnect exhaust pipe at manifold. Remove converter bolts through hole left by starter removal. Remove lower bolts that mount engine to transaxle.

5) Attach engine hoist. Raise engine until assembly hits steering rack housing. Support transaxle. Remove upper bolts mounting engine to transaxle. Pry engine from transaxle. Remove intermediate plate. Make sure torque converter is supported.

Installation — To install engine, reverse removal procedure. Make sure all fluid levels are correct. Adjust any cables removed.

CYLINDER HEAD & MANIFOLDS

Removal — 1) Disconnect duct connecting throttle valve housing with mixture control unit. Drain coolant. Remove camshaft drive belt.

NOTE — Some California models are equipped with A.I.R. which must be disconnected.

2) Disconnect exhaust pipe. Remove nuts and bolts that hold exhaust manifold and intake manifold (air intake distributor) to head. Remove manifolds. Remove upper alternator bolt and adjusting bracket. Disconnect all coolant hoses and temperature gauge wire. Remove spark plugs.

3) Remove valve cover. Remove head bolts. Start at either end and work toward center. If head is stuck, insert block of wood in each outboard exhaust port and pry head free.

Installation — To install, reverse removal procedure and note the following: Make sure head gasket is positioned with "OBEN" mark facing up. Tighten head bolts in sequence and steps shown.

NOTE — Late 1977 models are equipped with polygon head cylinder head bolts. Cold torque is 55 ft. lbs. plus ¼ turn beyond that figure.

Cylinder Head Tightening Steps

| Application | Ft. Lbs. (mkg) |
|--------------------------------|----------------|
| Step One | 22 (3.0) |
| Step Two | 43 (6.0) |
| Step Three | 54 (7.5) |
| Cylinder Head Hot Torque | 61 (8.5) |

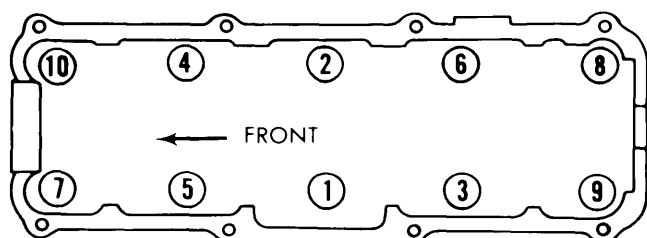


Fig. 1 Cylinder Head Tightening Sequence

Valves

VALVE ARRANGEMENT

E-I-E-I-I-E-I-E (front to rear).

VALVE GUIDE SERVICING

1) Clean valve guides before making measurements. To measure guide, attach a suitable mounting device with a dial gauge (VW689/1) to mounting surface of cylinder head. Insert a new valve until end of stem is flush with end of valve guide.

2) Rock valve head against dial indicator and check amount of rock recorded. Maximum allowable rock is .039" (1 mm) for intake valves and .051" (1.3 mm) for exhaust valves. Proper valve guide diameter is .315"-.316" (8.01-8.04 mm).

3) Use a press and suitable adaptor (10-206) to remove and install valve guides. To remove guides, press out from combustion chamber side of head.

CAUTION Do not use more than one ton pressure once guide shoulder is seated or shoulder may break.

4) Coat new valve guides with engine oil. Press new guides into cold head from camshaft side. Make sure shoulder of guide firmly meets with top of cylinder head.

VALVE STEM OIL SEALS

With tappet, adjuster pad, keepers, springs, and spring seats removed, extract valve stem oil seal. When installing new seal, first position protective plastic sleeve on valve stem, lubricate seal, and use a suitable mandrel (10-204) to push seal onto valve guide.

VALVE SPRINGS

Removal — Remove camshaft and cam followers (tappets). Remove cylinder head from engine. Using suitable spring compressor (VW541), compress spring enough to remove split keeper. Release tool. Take out retainer and valve springs.

Installation — Check springs on spring tester and inspect for cracks or distortion. Reverse removal procedure and note the following: Lower edge of valve spring retainer should be chamfered to prevent valve stem scoring. If necessary, grind a chamfer using stone or other suitable tool. When installing the springs, make sure closely spaced coils of outer springs are against spring seats.

VALVE CLEARANCE ADJUSTMENT

1) Adjust valves with engine at normal operating temperature. Clearance adjustments are to be checked and made according to firing order sequence (1-3-4-2). Rotate crankshaft until No. 4 cylinder valves overlap, then measure valve clearances of No. 1 cylinder.

2) If adjustment is necessary, use special tools 10-208 (disc removal tool) and VW546 (tappet depressing tool) to remove and install adjusting discs. Rotate camshaft until cam lobes no longer rest on adjusting discs of cylinder to be adjusted. Turn

RABBIT (GASOLINE), SCIROCCO & DASHER 4 CYLINDER (Cont.)

tappet until notches are at 90° to camshaft. Insert tool VW546 and depress tappet. Using tool 10-208, grasp tappet disc and rotate it out from under camshaft.

3) Thickness is stamped on bottom side of discs. Using clearance measurement, determine thickness of adjusting disc necessary to bring valve clearances within specifications. Discs are available in .0019" (.05 mm) increments from .1181" (3.0 mm) to .1673" (4.25 mm). Reverse removal procedure to install proper disc. Repeat procedure as required for remaining valves.

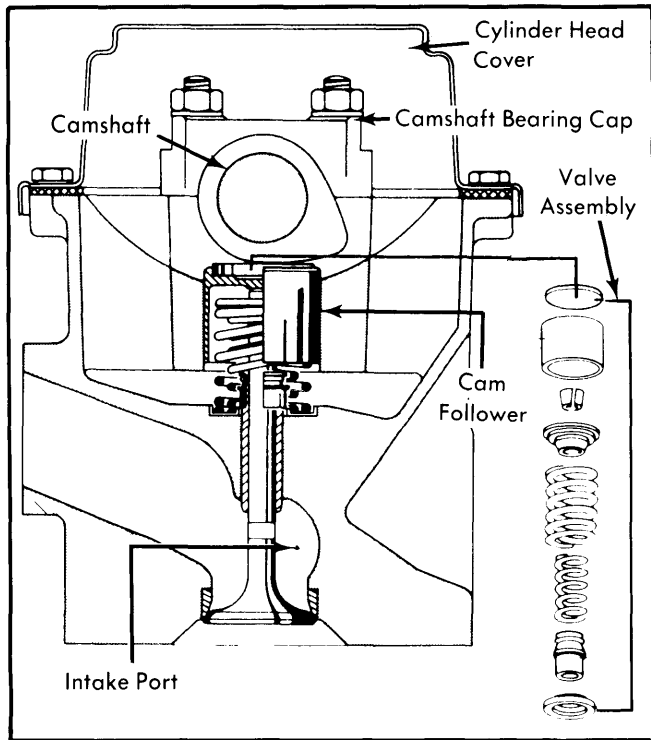


Fig. 2 Assembled View of Valve and Camshaft

Valve Clearance Specifications

| Application | In. (mm) |
|-------------|---------------------|
| Intake | |
| Hot | .008-.012 (.20-.30) |
| Cold | .006-.010 (.15-.25) |
| Exhaust | |
| Hot | .016-.020 (.40-.50) |
| Cold | .014-.018 (.35-.45) |

NOTE — Cold settings are given for reference as initial settings to be used during cylinder head rework. Final adjustments are to be made with engine at normal operating temperature. After head repairs, recheck valve clearances after 600 miles.

PISTONS, PINS & RINGS

OIL PAN

Removal — Drain oil. Remove nuts mounting engine mounts on subframe. Remove four bolts holding subframe to body.

Pull subframe downward to separate engine mounts and body. Remove pan.

Installation — To install, reverse removal procedure. Make sure gasket surfaces are clean before installing new gaskets.

PISTON & ROD ASSEMBLY

NOTE — Piston and rod assemblies can be removed with engine in vehicle. Manufacturer recommends engine removal for extensive overhaul work.

Removal — Mark cylinder number on crown of each piston. If necessary, mark arrows pointing toward front of block on piston crowns. Remove rod cap bolts and force piston out top of cylinder. Use wooden hammer handle for this operation. Mark connecting rods and bearing caps for proper reinstallation.

NOTE — If a ridge at top of cylinder prevents piston removal, use a ridge reamer to cut down the ridge. DO NOT force piston out of cylinder.

Installation — Turn crankshaft so No. 1 journal is at BDC. Install piston connecting rod assembly until ring compressor contacts block. Use a wood handle to push piston into cylinder. Install No. 4 Piston and rod assembly. Ensure tabs on bearing halves engage notch in rod and cap. Install and tighten caps on rods 1 and 4. Turn crankshaft 180° and install No. 2 and 3 rod assemblies and rod caps.

PISTON PINS

Removal — Use needle-nosed pliers to remove pin circlips. Press out pin and remove piston from rod. For installation purposes, note direction piston is fitted to rod.

Installation — 1) Check pin fit in each piston. Piston pin must be a thumb-push fit in piston. If correct fit is not obtained, replace both pin and piston.

2) Check pin fit in connecting rod. Wear limit is .0015" (.04 mm). Rebush connecting rod and hone bushing to obtain correct clearance.

FITTING PISTONS

1) Measure cylinder at three points: .39" (10 mm) from top and bottom, and at center of bore. Take measurements in line with thrust face and also at 90° to thrust face. Cylinder wear limit is .0028" (.07 mm) beyond standard dimensions; if this is exceeded, rebore cylinder and install oversize pistons.

2) Measure pistons at .63" (16 mm) from bottom of piston skirt (measuring 90° to pin bore). Combining this measurement with measurement of corresponding cylinder bore, note piston-to-cylinder clearance. If this exceeds .0028" (.07 mm), oversize pistons must be installed.

3) Place piston rings squarely in top of cylinder bore (above ring ridge) and measure end gap. Measure ring side clearance. Install rings on piston with end gaps 120° offset to each other (start with oil ring gap directly to the rear). Ensure stamp mark "TOP" on rings is facing upward.

RABBIT (GASOLINE), SCIROCCO & DASHER 4 CYLINDER (Cont.)

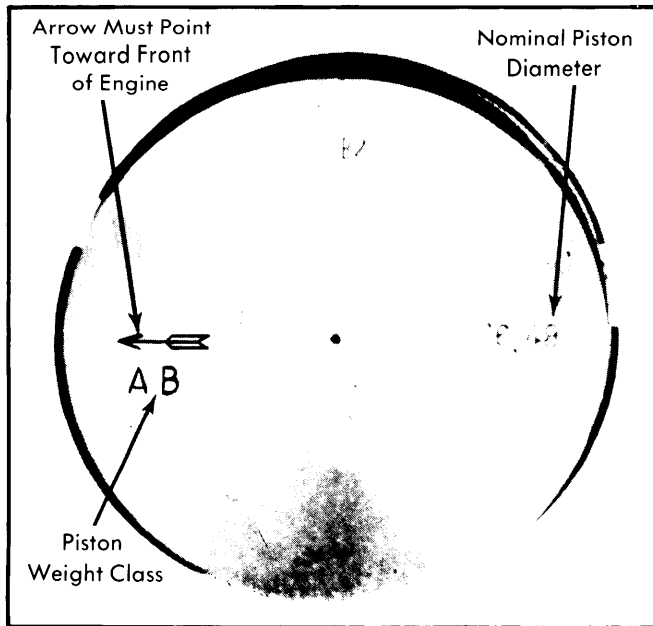


Fig. 3 Codes Stamped on Piston Head

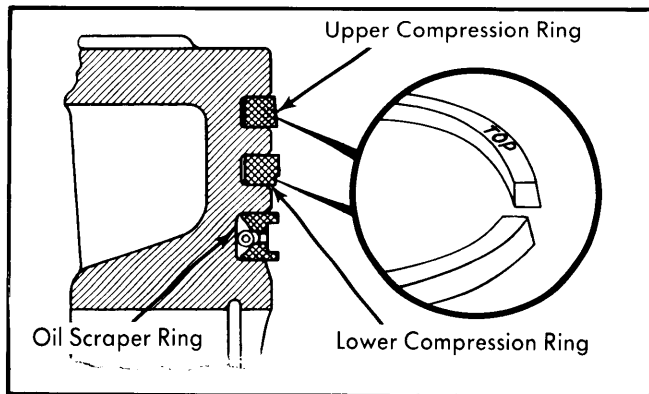


Fig. 4 Piston Ring Installation — Word TOP Must Face Piston Crown

CRANKSHAFT MAIN & CONNECTING ROD BEARINGS

MAIN & CONNECTING ROD BEARINGS

1) Push crankshaft toward one end and measure crankshaft end play at No. 3 (thrust) bearing. Main bearing caps are stamped "1" to "5" (front to rear), and must be returned to original positions upon reassembly. Measure end play (side play) of connecting rods. Remove all bearing caps and check bearing clearance using Plastigage method.

2) Measure crankshaft journals with a micrometer to determine if crankshaft is out-of-round. Maximum ovality permissible is .0012" (.03 mm). Install main inserts with bearing half having oil groove into block. Lubricate bearings and install caps.

Crankshaft Journal Diameters

| Size | Main Bearing In. (mm) | Con. Rod Bearing In. (mm) |
|----------------|--------------------------|------------------------------|
| Standard | 2.126 (54.00) | 1.81 (46.00) |
| 1st US | 2.116 (53.75) | 1.80 (45.75) |
| 2nd US | 2.106 (53.50) | 1.79 (45.50) |
| 3rd US | 2.096 (53.25) | 1.78 (45.25) |

REAR MAIN BEARING OIL SEAL

NOTE — Rear main bearing oil seal may be replaced with engine in vehicle. Transmission and flywheel must be removed.

Insert screwdriver between crankshaft flywheel flange and inside lip of oil seal. Pry oil seal out. Install seal guide sleeve tool 10-205 (or equivalent) over crankshaft flange. Start new oil seal into recess in carrier. Pull out guide sleeve. Fit drive plate 10-220 (or equivalent) and seat seal by tightening bolt in plate.

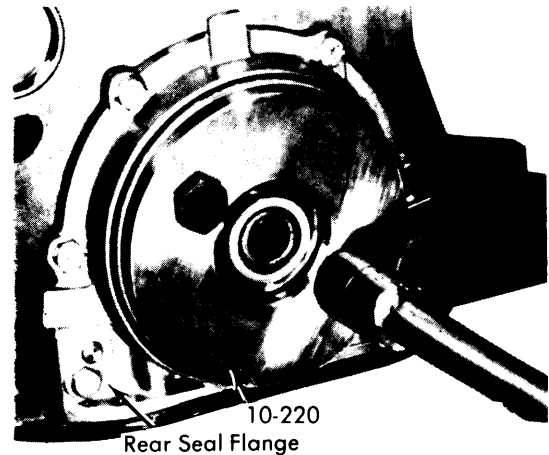


Fig. 5 Using Special Tool to Install Rear Main Oil Seal

FRONT MAIN BEARING OIL SEAL AND INTERMEDIATE SHAFT OIL SEAL

Remove camshaft belt. Remove crankshaft sprocket. Pry seal from seal carrier, being careful not to damage carrier. Use tool 10-219 (or equivalent) to remove seal (Fig. 6). Using suitable tool (10-203), press in new seal until flush with seal carrier. If tool 10-203 was used, remove it and use aluminum part of tool (or equivalent) to press seal in until recessed .080" (2 mm) from front of seal carrier.

NOTE — Same procedure applies to intermediate shaft oil seal except: Remove intermediate shaft sprocket. Only press new seal in until flush with seal carrier.

CAMSHAFT

TIMING BELT

NOTE — Sprockets DO NOT have to be removed to replace camshaft drive belt.

Removal — Remove A.I.R. pump belt and alternator belt. Remove water pump pulley. Remove camshaft belt cover. Loosen camshaft drive belt tensioner lock nut. Turn adjuster counterclockwise to release tension on belt. Work belt off sprockets.

RABBIT (GASOLINE), SCIROCCO & DASHER 4 CYLINDER (Cont.)



Fig. 6 Using Special Tool to Remove Front Oil Seal

Installation – 1) Rotate camshaft sprocket until index mark (punch mark) on camshaft sprocket is lined up with top surface of valve cover mounting flange. Make sure to align index marks on spark plug side.

2) Rotate crankshaft and intermediate shafts until index mark (punch mark) on intermediate shaft sprocket is positioned in "V" notch on crankshaft pulley.

NOTE – Make sure sprockets are not moved after belt has been removed.

3) Being careful not to move sprockets, fit belt from bottom first. Make sure there is no slack between sprockets. Tighten belt tensioner until belt can just be twisted 90°. Make twist half way between camshaft and intermediate sprockets. Tighten lock nut. Reverse removal procedure for remaining components.

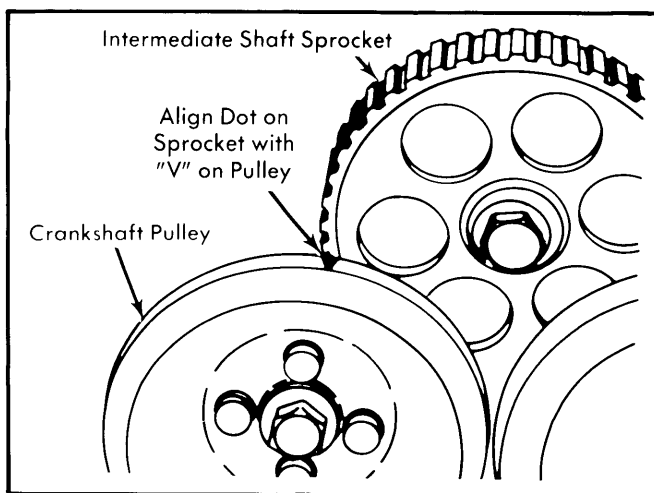


Fig. 7 Crankshaft and Intermediate Shaft Index Marks Aligned with Notch on Crankshaft Pulley

CAMSHAFT

Removal – 1) Remove camshaft cover. Loosen and remove bearing caps in following sequence: 5, 1, and 3, then loosen

bearing caps 2 and 4 diagonally. Bearing caps are numbered front to rear.

2) Check camshaft end play. Remove camshaft and lift out cam followers. Install camshaft using only bearing caps 1 and 5. Fit dial indicator so tip of gauge touches front of camshaft. Pry camshaft back and forth. Reading should not exceed .006" (.15 mm). If end play is beyond limits, replace either camshaft or cylinder head.

3) Check camshaft runout. Fit dial indicator so gauge pin is against camshaft center journal. Turn camshaft and record runout range. Runout must not exceed .0004" (.01 mm). Replace camshaft as necessary.

4) Inspect camshaft lobes for wear. Worn lobes usually indicate lack of lubrication. Check engine oiling passages to make sure they are not restricted. Replace worn camshafts and worn discs.

5) Inspect cam followers for signs of seizure or lack of lubrication. If any aluminum particles from head are found on cam followers, replace followers. Cylinder head must be replaced if any follower bores are worn or excessively rough.

Installation – Lightly lube cam follower bores, then fit followers in their original bores. Install adjusting discs. Place camshaft on cylinder head. Loosely attach No. 2 and No. 4 bearing caps. Gradually tighten caps. Fit No. 5 and No. 3 bearing caps. Install new oil seal in front of camshaft. Install No. 1 bearing cap. Make sure all caps are torqued to proper specifications.

VALVE TIMING

With timing belt removed as previously described, rotate crankshaft and intermediate shaft until index mark (punch mark) on intermediate shaft is positioned in "V" notch on crankshaft pulley (Fig. 7). This is firing point of No. 1 cylinder. Next, turn camshaft until marking on rear of camshaft sprocket is in line with cylinder head cover (Fig. 8). Replace timing belt.

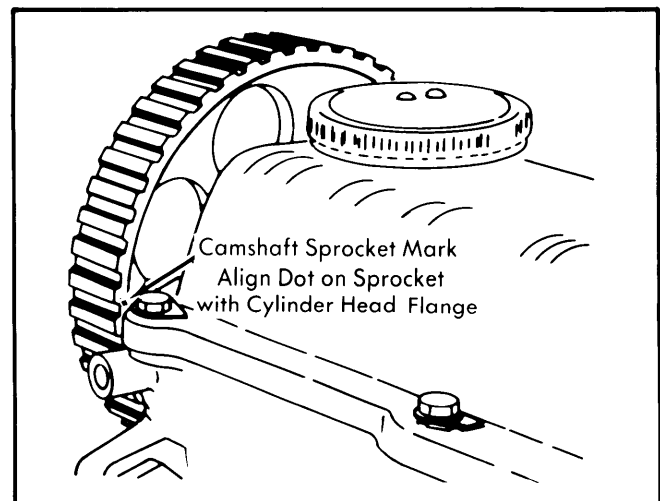


Fig. 8 Index Mark on Camshaft Sprocket Aligned with Cylinder Head Flange

Volkswagen Engines

RABBIT (GASOLINE), SCIROCCO & DASHER 4 CYLINDER (Cont.)

ENGINE OILING

Crankcase Capacity — On Rabbit and Scirocco models, 3.7 quarts with filter change. On Dasher models, 3.2 quarts with filter change.

Oil Filter — Replaceable spin-on type.

Normal Oil Pressure — 28 psi@2000 RPM (normal operating temperature).

ENGINE OILING SYSTEM

Oiling system is a pressure feed type. A gear oil pump lifts oil from pan and pressure feeds it to crankshaft journals, camshaft bearings, and intermediate shaft. Other parts of system receive oil mist or splash for lubrication.

OIL PUMP

Removal — 1) Drain oil. Remove nuts mounting engine mounts on subframe. Remove four bolts holding subframe to body. Pull subframe downward to separate engine mounts and body. Remove pan. Remove pump mounting nuts and remove pump with pickup tube attached.

2) Separate pickup tube from pump. Check oil pump gear backlash. Clearance should be between .002-.008" (.05-.20 mm). If specification is exceeded, replace gears or pump.

3) Measure oil pump gear end play. If end play exceeds .006" (.15 mm), replace pump.

Installation — To install, reverse removal procedure. Make sure all mating surfaces are clean before installing gaskets. Oil pump drive shaft must align with distributor drive gear.

ENGINE COOLING

Cooling System Capacity

| Application | Capacity |
|------------------------------|----------|
| Rabbit/Scirocco | 4.9 qts. |
| Dasher | |
| With Expansion Tank | 6.9 qts. |
| Without Expansion Tank | 6.4 qts. |

Thermostat — Begins to open at 176° F (80° C) and is fully open at 200° F (94° C).

WATER PUMP

NOTE — The front portion of water pump (shaft, seals, bearing, and housing) can be replaced separately. To do this

camshaft drive belt and sprockets must be removed. To avoid removing drive belt, remove water pump as an assembly.

Removal — Drain coolant. Remove alternator belt and alternator. On some Calif. models A.I.R. pump must be removed. Remove bolt holding camshaft belt cover to pump. Disconnect hoses from water pump. Remove water pump bolts.

Installation — To install, reverse removal procedure and make sure to use new "O" ring in recess in pump mounting flange.

NOTE — Do not use sealer between water pump mounting flange and engine block.

GENERAL SPECIFICATIONS

| Year | Displ. | | Carburetor | HP at RPM | Torque (Ft. Lbs. at RPM) | Compr. Ratio | Bore | | Stroke | |
|--------------------|----------|------|------------|------------|--------------------------|--------------|------|------|--------|----|
| | cu. ins. | cc | | | | | in. | mm | in. | mm |
| 1977 All Models | 96.9 | 1588 | Fuel Inj. | ⓪78 @ 5500 | ⓪84.1 @ 3200 | 8.0:1 | 3.13 | 79.5 | 3.15 | 80 |

⓪ — Calif. Models: 76 @ 5500 RPM.

⓪ — Calif. Models: 82.7 @ 3200 RPM.

VALVES

| Engine & Valve | Head Diam. In. (mm) | Face Angle | Seat Angle | Seat Width In. (mm) | Stem Diameter In. (mm) | Stem Clearance In. (mm) | Valve Lift In. (mm) |
|-------------------|---------------------|------------|------------|---------------------|------------------------|-------------------------|---------------------|
| 1588 cc Intake | 1.338 (33.9) | 45° | 45° | .079 (2.0) | .314 (7.98) | .001-.002 (.03-.05) | |
| Exhaust | 1.220 (31.0) | 45° | 45° | .095 (2.4) | .313 (7.95) | .002-.003 (.05-.07) | |

Volkswagen Engines

5-349

RABBIT (GASOLINE), SCIROCCO & DASHER 4 CYLINDER (Cont.)

| VALVE SPRINGS | | | |
|---------------|----------------------|-----------------------------------|------------|
| Engine | Free Length In. (mm) | PRESSURE Lbs. @ In. (kg @ mm) | |
| | | Valve Closed | Valve Open |
| 1588 cc Inner | | 46-51 @ .719 (21-23 @ 18.3) | |
| Outer | | 96-106 @ .916 (43.5-48 @ 22.3) | |

| CAMSHAFT | | | |
|----------|------------------------|-------------------------|--------------------|
| Engine | Journal Diam. In. (mm) | Clearance In. (mm)⓪ | Lobe Lift In. (mm) |
| 1588 cc | | .0008-.002 (.02-.05) | |

⓪ — End play .006" (.15 mm)

| PISTONS, PINS, RINGS | | | | | | |
|----------------------|--------------------|---------------------|--------------------------|-------|------------------------|-------------------------|
| Engine | PISTONS | | PINS | | RINGS | |
| | Clearance In. (mm) | Piston Fit In. (mm) | Rod Fit In. (mm) | Rings | End Gap In. (mm) | Side Clearance In. (mm) |
| 1588 cc | .0012 (.03) | Push Fit | .0004-.0008 (.01-.02) | Comp. | .012-.018 (.30-.45) | .0008-.002 (.02-.05) |
| | | | | Oil | .010-.016 (.25-.40) | .0008-.002 (.02-.05) |

| CRANKSHAFT MAIN & CONNECTING ROD BEARINGS | | | | | | | |
|---|------------------------|----------------------------|----------------|------------------------------|-------------------------|----------------------------|--------------------|
| Engine | MAIN BEARINGS | | | | CONNECTING ROD BEARINGS | | |
| | Journal Diam. In. (mm) | Clearance In. (mm) | Thrust Bearing | Crankshaft End Play In. (mm) | Journal Diam. In. (mm) | Clearance In. (mm) | Side Play In. (mm) |
| 1588 cc | 2.126 (54) | .0011-.0033 (.028-.088) | No. 3 | .003-.007 (.07-.17) | 1.81 (46) | .0011-.0033 (.028-.088) | ⓪.015 (.37) |

⓪ — Wear Limit.

TIGHTENING SPECIFICATIONS

| Application | Ft. Lbs. (mkg) |
|--------------------------------------|----------------|
| Timing Belt Tensioner Lock Nut | 33 (4.5) |
| Intermediate Sprocket Bolt | 58 (8.0) |
| Crankshaft Sprocket Bolt | 58 (8.0) |
| Water Pump Pulley Bolts | 14 (2.0) |
| Crankshaft Pulley Bolts | 14 (2.0) |
| Main Bearing Cap Bolts | 47 (6.5) |
| Flywheel-to-Crankshaft Bolts | 54 (7.5) |
| Connecting Rod Cap Bolts | 33 (4.5) |
| Camshaft Sprocket Bolt | 58 (8.0) |
| Camshaft Bearing Cap Nuts | 14 (2.0) |
| Cylinder Head Bolts | |
| Cold | 54 (7.5) |
| Hot | 61 (8.5) |
| Manifolds-to-Cylinder Head | 18 (2.5) |
| Oil Pump Mounting Bolts | |
| Socket Head Bolt | 14 (2.0) |
| Hex Head Bolt | 7 (1.0) |
| Oil Pan Bolts | 7 (1.0) |