

Peugeot Engines

505 4-CYLINDER

ENGINE CODING

ENGINE IDENTIFICATION

Engine serial number is stamped on left side of engine block, and is also located on identification plate attached to top panel, above center of grille.

Engine identification number is stamped on camshaft tunnel on left side of block, near the starter. The letters at the beginning and end of the number are used for identification as follows:

ENGINE IDENTIFICATION CODES

Application	Transmission	Engine Codes
XN6 Engine	Manual	BVM
XN6 Engine	Automatic	BVA

ENGINE, MANIFOLDS & CYLINDER HEAD

ENGINE


Removal

1) Remove engine hood, battery and fan shroud. Drain radiator and remove upper and lower hoses. Remove electrical lead from cooling fan switch, and remove radiator lower mounting bolts. Remove rubber duct hose at mixture regulator throttle plate housing.

2) Remove fuel supply and return hoses and hose from cold start injector. Remove PCV hose and electrical connectors from cold start injector and fuel distributor. Remove fuel hoses and electrical connector from control pressure regulator.

3) Remove fuel injectors, mixture regulator and air filter. If equipped, remove A/C compressor and freon hose clamp near alternator. Disconnect accelerator cable and electrical harness near brake master cylinder.

Fig. 1: Positioning Support Plate for Torque Converter During Engine Removal

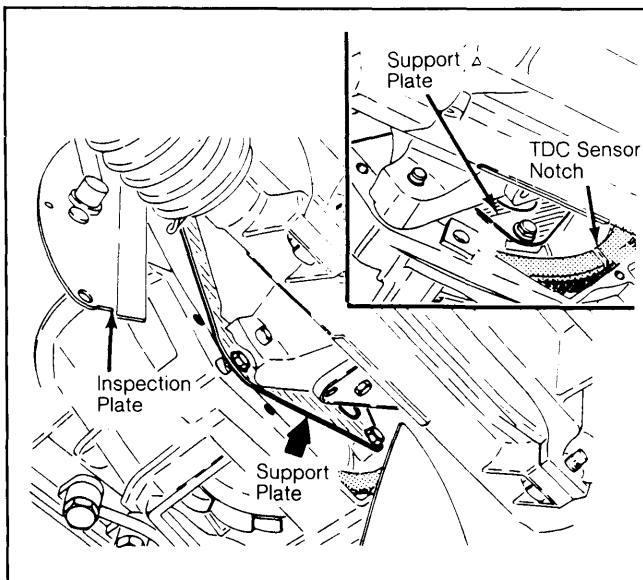

Mark TDC sensor notch in reference to support plate.

4) Remove diagnostic plug for TDC sensor, located near ignition coil. Remove high tension lead from coil. Remove vacuum hoses from charcoal canister.


5) Remove heater hose near charcoal canister and fan. Remove oxygen sensor (Lambda) wire near vacuum switches, and disconnect air injection hose to catalytic converter. Remove vacuum switches support and 3-wire electrical connector nearby. Install engine sling assembly.

6) Remove starter, clutch housing bolts, and left engine mount. Remove right engine mount. Remove 3 power steering pump bolts and set pump aside. Remove exhaust header pipe.

7) Remove inspection plates from clutch housing. On vehicles with automatic transmission, remove inspection plate without altering TDC sensor adjustment. To do so, position torque converter support plate as shown in Fig. 1. Mark TDC sensor notch in reference to support plate. Support torque converter with special clamp (8.0315-A).

8) Remove A/C condenser and set to left side, keeping hoses connected. Remove and set receiver-drier to one side. Lift engine with engine sling assembly until top of bell housing contacts lower firewall. See Fig. 2.

Fig. 2: Removing Engine from Vehicle

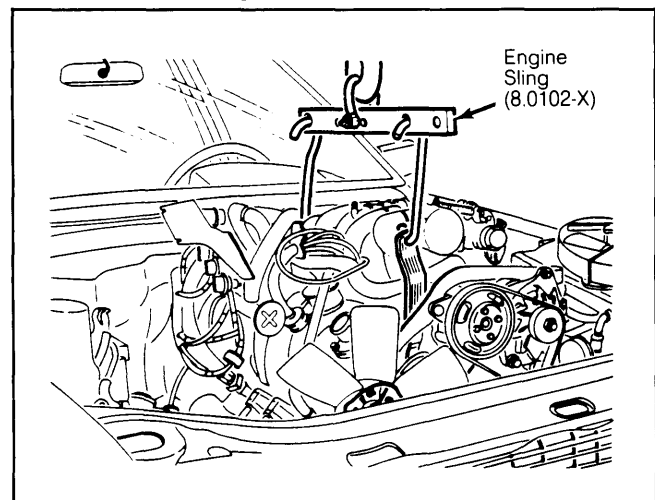

Carefully lift engine out of engine compartment.

9) Install transmission support. Disengage engine from transmission and lift engine carefully out of engine compartment. Check for electrical leads, cables, hoses or pipes which have not been detached from engine.

Installation

1) To install engine, reverse removal procedures, noting the following precautions: On vehicles with automatic transmissions, lubricate torque converter centering nipple with Calysol grease (F 3015 or equivalent).

2) Position TDC sensor notch, and align reference marks made during removal. Coat 4 torque converter bolts with Loctite and tighten. Use ring gear locking pawl (8.0110-J) when tightening bolts.

3) On vehicles with manual transmissions, lightly lubricate splines, front and mainshaft pilot bushings with Molykote 321 (or equivalent). Place gearshift lever in gear. Tighten engine mount-to-crossmember bolts and engine-to-clutch housing bolts.

505 4-CYLINDER (Cont.)

4) Adjust TDC sensor, if new, by bringing 3 nipples in contact. If reusing TDC sensor, deburr 3 nipples so gap of .067" (1.7 mm) exists between sensor and ring gear.

5) Refill radiator, cooling system, engine crankcase and automatic transmission. Check power steering fluid reservoir level.

6) To adjust accelerator cable, depress accelerator pedal against its stop, placing a .20" (5 mm) spacer between pedal and stop (full throttle position). Connect cable to throttle drum.

7) Rotate drum to full throttle position. Exert slight pull on cable housing stop to place control under slight load. Install clip to obtain minimum gap between clip and common manifold.

8) To adjust kick-down cable, place throttle plate in idle position. Extend cable to obtain a maximum play of .02" (.5 mm) between cable housing stop and cable travel limiter. Tighten cable on drum.

CYLINDER HEAD

Removal

1) Drain cooling system including cylinder block. Disconnect battery. Remove exhaust header pipe and oxygen sensor. Remove mounting brackets for common manifold and intake manifold.

2) Pull common manifold off pipes. Remove distributor cap, injectors, and diagnostic plug bracket. Disconnect electrical connector near ignition coil and remove high tension lead from coil. Remove all clamps, and wire ties from vicinity of ignition coil. Remove vacuum hoses from charcoal canister.

3) Remove air pump outlet hose at pump. Remove upper wire and lower connector from thermo-time switch. Remove sliding bolt from air pump-to-alternator bracket. Remove upper and lower radiator hoses. Remove heater hose and power steering reservoir.

4) Remove radiator, fan and fan shroud. Remove water pump belt from pulley. Remove thermostatic air slide valve bracket. Remove vacuum hoses, coolant hoses, and thermostatic wire from valve. Remove 2 large hoses from diverter valve. Remove bracket from valve. Remove air injection assembly.

5) Remove heater hose near dipstick and remove auxiliary air device. Remove remaining electrical connectors from switches or sensors mounted in cylinder head. Remove rocker arm oil feed pipe. Disconnect all vacuum hoses remaining on intake manifold side of engine, including hose at diverter valve.

6) Remove spark plug wire brackets and wires at spark plug. Remove valve cover. Remove cooling fan brush holder. Remove sealing rings from spark plug tubes. Remove rocker arm assembly and push rods.

7) Use prying tool to break cylinder head loose. Install cylinder liner retainers (8.0132) to prevent liners from moving.

Inspection

1) Plug passages in cylinder block for valve lifters and oil return. Clean and scrape cylinder block gasket surface, and run a tap in cylinder block bolt holes.

2) Check liner protrusion above block (.0028-.0055" or .07-.14 mm) at engine centerline. No liner should protrude more than .0015" (.04 mm) above adjacent liner. If not to specifications, replace liner gaskets.

3) Using a gasket scraper, clean cylinder head gasket surface. Clean cylinder head bolts. Check for

cylinder head warpage, maximum allowable is .004" (.10 mm).

4) Check cylinder head thickness. Original thickness is 3.636-3.648" (92.35-92.65 mm), with minimum permissible thickness being 3.616" (91.85 mm). If cylinder head must be surfaced, check thickness before and after surfacing to be sure thickness is within tolerances.

5) Clean and check valve lifters, using caution not to mix them. DO NOT scrape carbon off piston tops, as liner damage could result.

Installation


1) Install cylinder head in reverse of removal sequence, noting the following: When installing cylinder head, use 2 locating guides (8.-115-BZ). Install new head gasket, "DESSUS", "ALTO" or "TOP" facing up (toward cylinder head).

2) Install cylinder head and rocker arm assembly. Lightly tighten cylinder head bolts (with flat washers), using a drop of engine oil on threads. Lightly tighten rocker shaft nuts. Remove 2 head guides. Install last 2 head bolts.

NOTE: Do not get oil in cylinder head bolt holes, as this could cause hydraulic blockage and prevent proper tightening.

3) Using tightening sequence shown in Fig. 3, tighten head bolts to 36 ft. lbs. (50 N.m) and rocker shaft nuts to 11 ft. lbs. (15 N.m). Place angular head torquing tool (8.0129) on 2 center bolts (1 and 2). Completely loosen No. 1 bolt and retighten to 14 ft. lbs. (20 N.m). Keep tool in place and maintain tension on torque wrench.

Fig. 3: Cylinder Head Bolt Tightening Sequence

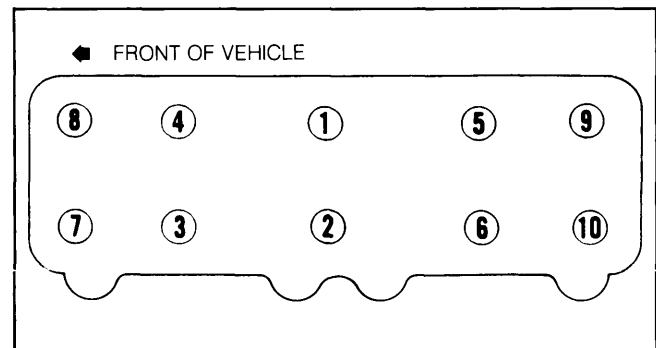

Head bolts must be retorqued after 1000-1500 miles.

4) Position pointer on tool at "O" notch by moving spring loop. Continue torquing until pointer lines up with "90" notch. Repeat entire procedure with No. 2 bolt. Then move tool and complete tightening procedure in proper sequence.

5) If there is any doubt concerning torque of any one bolt, loosen it completely and repeat all tightening procedures for that one head bolt. Adjust valves. Reverse removal procedure, and note the following: Refill cooling system.

NOTE: Adjust intake valve clearance to .006" (.15 mm) and exhaust valves to .012" (.30 mm). After 1000-1500 miles, retorque cylinder head bolts (after engine has cooled for 6 hours), and adjust valve clearances to standard specifications. See Valve Clearance Adjustment.

Peugeot Engines

505 4-CYLINDER (Cont.)

6) Adjust air pump and alternator belt tension at idler pulley. Loosen both idler pulley mounting bolts. Apply 36 ft. lbs. (50 N.m) torque to nut directly above idler pulley.

7) Tighten mounting bolts. Turn engine 1 full turn to align belt on idler pulley. Loosen mounting bolts. Tighten idler pulley nut to 58 ft. lbs. (79 N.m). Retighten mounting bolts.

SPARK PLUG TUBE REPLACEMENT

Removal


With cylinder head supported, screw in plugs without springs to prevent dirt from falling into cylinder. Remove tubes using mallet or extractor.

NOTE: If spark plug tubes are removed, new tubes **MUST** be installed.

Installation

To install tubes, coat with sealing compound and insert so plug caps are facing as shown in Fig. 4. When tube is fully seated, it will protrude 2.835" (72 mm) upward from cylinder head.

Fig. 4: Position of Spark Plug Tubes for Installation

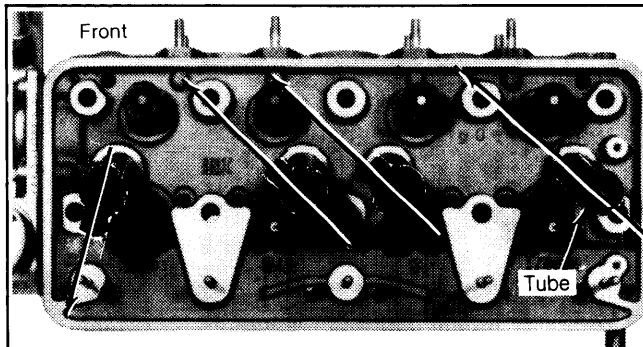

Arrows indicate direction of plug caps.

VALVES

VALVE ARRANGEMENT

Left Side — Intake valves.

Right Side — Exhaust valves.

NOTE: Cylinders and valves are numbered with number 1 cylinder at flywheel end of engine.

VALVE SPRING REPLACEMENT

Intake Valve

1) Turn crankshaft in direction of engine rotation and position where exhaust valve just begins to open. Slide rocker arm off intake valve then bring piston to TDC on compression stroke.


2) Using valve spring compressor, compress spring and remove keepers, spring retainer and spring.

Exhaust Valve

1) Remove spark plug from cylinder requiring attention. Rotate crankshaft in direction of engine rotation and bring intake valve to fully closed position. Slide rocker arm off exhaust valve.

2) Insert hinged tool (0-0136) into spark plug hole and bring piston to TDC without forcing as tool is

Fig. 5: Removing Valve Spring with Valve Held in Place

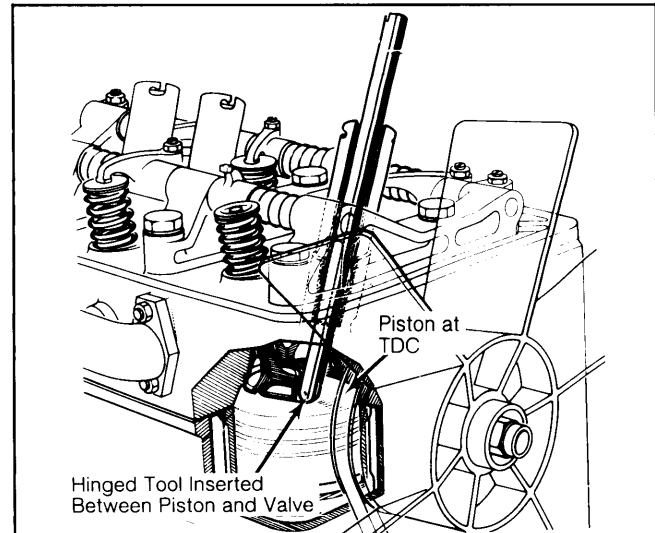

between piston and valve. Using spring compressor, compress spring and remove keepers, spring retainer and spring.

VALVE CLEARANCE ADJUSTMENT

NOTE: Engine must be allowed to cool at least 6 hours before adjusting valves. Adjust valves in firing order sequence (1-3-4-2). No. 1 cylinder is on flywheel end of engine.

1) Rotate engine until exhaust valve number one is fully opened, then adjust intake valve number three and exhaust valve number four.

2) Rotate crankshaft one half turn (180°) until next number valve is fully opened and adjust corresponding valves. See Valve Adjustment Sequence Table. Continue this procedure until all valves have been adjusted.

VALVE ADJUSTMENT SEQUENCE

Valve Open	Adjust Valves
E 1	I 3 & E 4
E 3	I 4 & E 2
E 4	I 2 & E 1
E 2	I 1 & E 3

VALVE CLEARANCE SPECIFICATIONS ¹

Application	Intake ² In. (mm)	Exhaust ³ In. (mm)
All Models004 (.10)	.010 (.25)
¹ — Tolerance range of +0 to +.002" (+0 to +.05 mm).		
² — Adjust to .006" (.15 mm) after installing cylinder head. Retorque to above specifications after 1000-1500 miles.		
³ — Adjust to .012" (.30 mm) after installing cylinder head. Retorque to above specifications after 1000-1500 miles.		

505 4-CYLINDER (Cont.)

CAMSHAFT

ENGINE FRONT COVER & OIL SEAL

Removal

1) Drain engine oil, and remove oil sump pan (if necessary). Remove radiator, and fan belt. Remove crankshaft pulley retaining bolt, and pulley. Remove idler pulley assembly.

2) Unscrew front cover retaining bolts, and remove cover. Using a seal driver tool, drive out old seal from front cover.

Installation

Using a seal driver tool, drive new oil seal into front cover. Install new gasket on front cover, and install front cover. Reverse removal procedure to complete installation.


TIMING CHAIN

Removal

1) Remove radiator, fan belt and spark plugs. Remove crankshaft pulley and timing chain cover. Disengage chain tensioner by removing plug and turning 3 mm Allen bolt clockwise.

2) Position camshaft as shown in Fig. 6 to avoid any possible contact of valves and pistons when rotating crankshaft with timing chain removed. Remove camshaft sprocket, timing chain, crankshaft sprocket and Woodruff key.

Fig. 6: Proper Alignment of Camshaft and Crankshaft for Removing Timing Chain

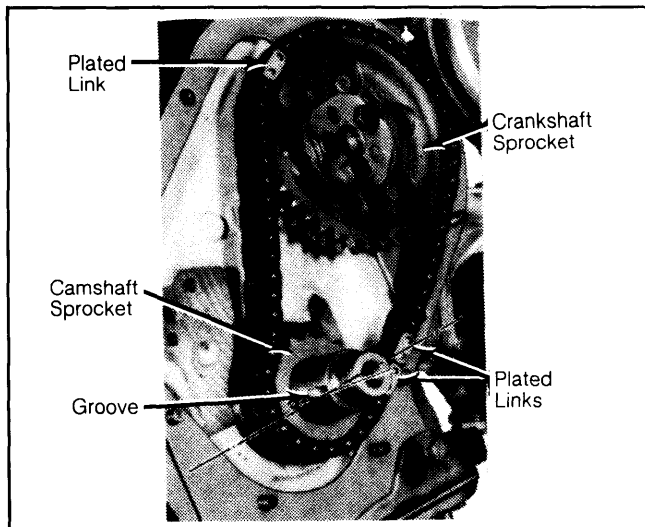

Ensure timing marks are in correct alignment.

Installation

1) Hold crankshaft in original position and install Woodruff key and sprocket. Position camshaft and then crankshaft as shown in Fig. 7.


2) Install timing chain first on camshaft sprocket, then on crankshaft sprocket. Ensure timing marks are in correct alignment. Fit camshaft with a new washer and tighten bolts. Bend up tabs.

3) Engage chain tensioner by adjusting Allen wrench in a clockwise manner. Install a new tab washer on plug and bend tab.

4) Install thrust washers (if required) and timing chain cover. Install timing chain cover on 2 centering pins,

being careful to protect seal. Install crankshaft pulley after cover bolts are tightened.

Fig. 7: Proper Alignment of Camshaft and Crankshaft

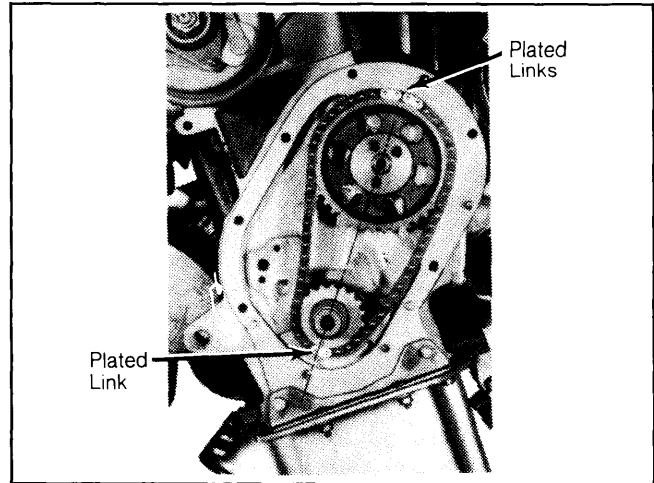

Ensure timing marks are in correct alignment.

PISTONS, PINS & RINGS


PISTON & ROD ASSEMBLY

Removal

1) With engine removed and mounted on engine stand, remove intake and exhaust manifolds. Remove all auxiliary equipment, including alternator, air pump and fuel pump. See Fig. 8.

2) Remove cylinder head. See Cylinder Head Removal in this article. Remove oil pan and oil pump.

Fig. 8: Cylinder Block and Cylinder Head Assembly

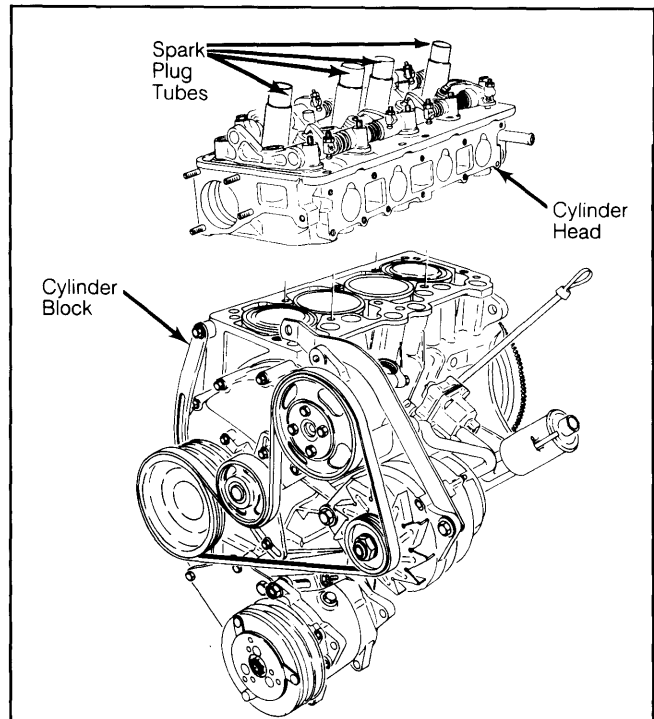

Peugeot Engines


505 4-CYLINDER (Cont.)

Remove bearing caps, keeping them in original order. Remove pistons and connecting rods. Attach connecting rods to matching cap, mark rod assemblies 1-4.

Installation

1) To install, fit piston ring clamp on piston. Insert piston and rod assembly. Index arrow must face front of engine.

Fig. 9: Piston and Rod Assembly with Index Marks and Codes

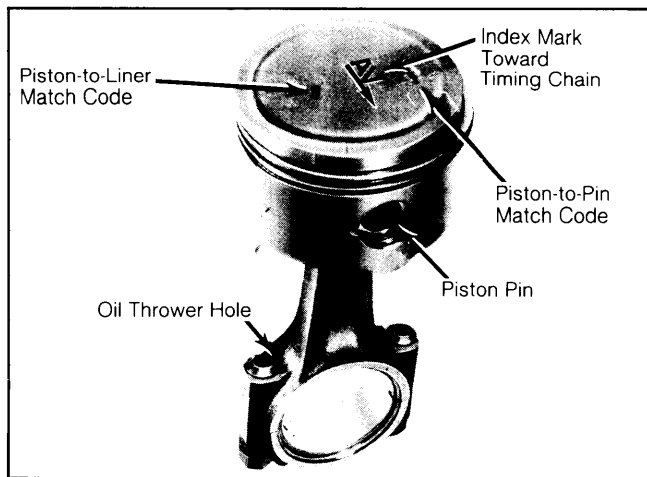

Index arrow must face front of engine.


2) Push piston down cylinder and guide connecting rod with bearing over crankshaft journal. Install bearing cap and tighten.

NOTE: Marks on rods and caps must be positioned on the same side.

PISTON PIN REPLACEMENT

Remove snap rings and piston pin. Fit piston to rod with index mark "AV" at right angle to oil thrower hole, so that it will face front of engine. If necessary heat piston in boiling water to insert pin. Install snap rings.

Fig. 10: Exploded View of Piston and Connecting Rod

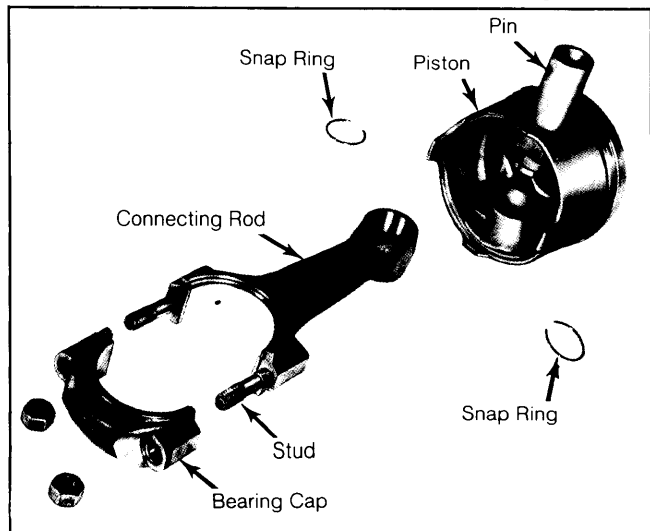

Marks on rods and caps must be on same side.

NOTE: The "AV" mark on piston top must face front of engine. Pistons and liners must be matched by letter code. Number on top of piston refers to piston pin code (1 — Blue, 2 — White, and 3 — Red).

CYLINDER LINER REPLACEMENT

1) Remove cylinder liners, using extractor if required. Before installing liners, clean and inspect for burrs. Insert liners, without base gaskets, with flats on shoulder of liners 1-2 and 3-4 being parallel.


NOTE: Do not alter piston/liner pairings.

2) Place a dial gauge and support on block face. Synchronize dial at 0 and 5. Check each liner at 4 different points, noting the highest reading. Maximum allowable difference between 2 opposite points must be less than .003" (.07 mm). If specification is exceeded, it may be necessary to change position of liners.

3) Select a base gasket for each liner which will give a protrusion of approximately .005" (.12 mm). Gaskets are available in 4 different sizes. Use only 1 gasket on each liner.

4) Fit gasket on liner. Engage gasket inner tabs in liner grooves. See Fig. 11. Position tab with reference mark at right angles to flat. Position liners with outer tabs in position. Install liner compressor tools to block. Seat liners and ensure protrusion is correct. Remove compressor tools and install liner locks.

Fig. 11: Cylinder Liner Gasket Installation

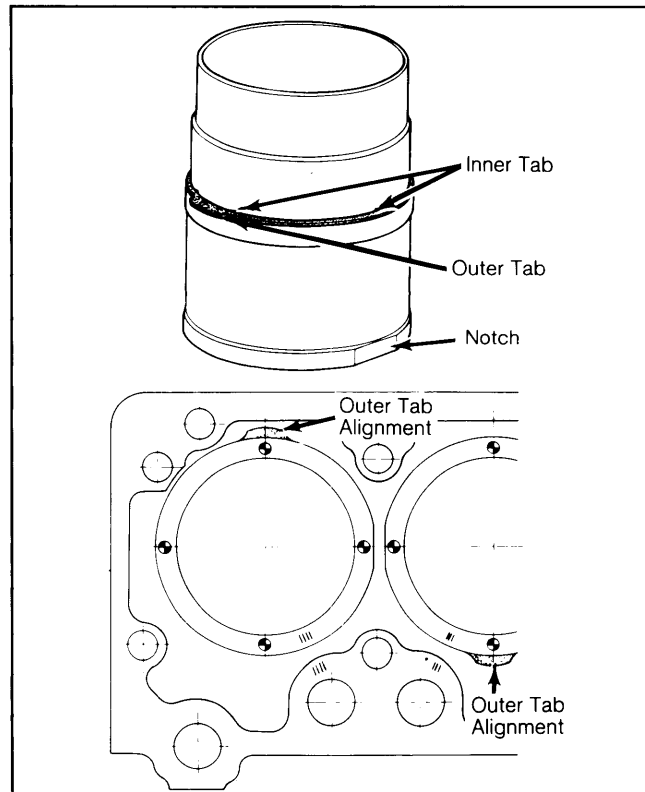

Gaskets are available in 4 different sizes.

NOTE: Difference in protrusion of adjoining cylinders must not exceed .0015" (.04 mm).

505 4-CYLINDER (Cont.)

CRANKSHAFT MAIN & CONNECTING ROD BEARINGS

MAIN BEARINGS

1) With engine removed from vehicle, remove oil sump. Remove cylinder head. See Cylinder Head Removal in this section. Scribe a reference mark on connecting rod caps, and main bearing caps.

2) Remove piston/rod assembly. Remove front cover, and timing chain assembly. Remove clutch/flywheel assembly. Remove main bearing caps, and carefully remove crankshaft.

NOTE: Counter balance weights are bolted on crankshaft, if removed ensure they are replaced in their original position.

3) Fit the main bearing half shells into the cylinder block, and main bearing caps. Lubricate the main bearings, and carefully place the crankshaft in position.

4) Install main bearing caps, and bolts. Tighten main bearing cap bolts in 2 or 3 steps, starting at center bearing and working outward. Ensure crankshaft rotates smoothly.

5) Use Plastigage method to measure main bearing clearances. Measure main bearing clearances 1 at a time. Wipe oil from surfaces to be checked. DO NOT allow crankshaft to turn once Plastigage is in place and bearing cap is tightened.

6) Remove bearing cap. Measure flattened width of Plastigage with scale furnished to determine clearance.

THRUST BEARING WASHERS

After installing crankshaft, check end play. End play must not exceed .008" (.20 mm). If specification is exceeded, oversize thrust washers are available in .094" (2.40 mm), .096" (2.45 mm), and .098" (2.50 mm) sizes.

REAR MAIN BEARING OIL SEAL

1) Crankshaft must be removed to replace oil seal. Work seal packing manually into cylinder block and into bearing cap grooves. Place seal forming mandrel (8.0110 A) onto packing and form packing into groove by tapping mandrel with a hammer.

2) Make sure packing is correctly seated in its groove without being crushed. Cut seal packing clean flush with mating surface and follow same procedure for bearing cap.

3) Place side seals in grooves of bearing cap and hold seals in place with shim tool (8.0110 BZ). Lubricate shims and bring into place in cylinder block, tapping down with hammer handle.

4) Install and tighten bearing cap bolts and check that bearing cap has seated properly. Remove shim tool (8.0110 BZ). Trim side seals with knife so they protrude .020" (.50 mm) above lower crankcase mating surface. Gauge (8.0110 D) can be used for measurement.

ENGINE OILING

ENGINE OILING SYSTEM

A high output, gear type oil pump is mounted to engine block lower surface and is operated by camshaft.

CRANKCASE CAPACITY

Approximately 4.2 qts. (3.9L).

OIL FILTER

Full-flow cartridge type.

NORMAL OIL PRESSURE

28-51 psi (2-3.6 kg/cm²) at idle; 44-67 psi (3-4.7 kg/cm²) at 4000 RPM.

ENGINE COOLING

COOLING SYSTEM CAPACITY

Auto. Trans. — 7.7 qts. (7.2L)

Man. Trans. — 7.5 qts. (7.1L)

THERMOSTAT

Opens at 180°F (82°C).

RADIATOR CAP

14.3 psi (1.0 kg/cm²).

WATER PUMP

Removal & Installation

Remove radiator, and fan belt. Disconnect heater hose from pump and self-engaging fan brush holder. Remove water pump. To install, reverse removal procedure and ensure contact surfaces are clean before installing new gasket.

SELF-DISENGAGING FAN

Driven by water pump shaft and controlled by a thermal contact-breaker. Fan engages at approximately 190°F (88°C) and disengages at 174°F (79°C).

TIGHTENING SPECIFICATIONS

Application	Ft. Lbs. (N.m)
Cylinder Head	See Text
Crankshaft Main Bearing Bolts	54 (73)
Connecting Rod Nuts	29 (39)
Camshaft Retaining Plate Bolts	12 (16)
Camshaft Sprocket Bolts	16 (22)
Crankshaft Pulley Bolts	123 (167)
Flywheel-to-Crankshaft Bolts	49 (67)
Engine-to-Clutch Housing	40 (54)
Oil Pump Mounting Bolts	7 (10)
Engine-to-Converter Housing	22 (30)
Engine Mounts-to-Crossmember	22 (30)
Rocker Arm Support Nut	11 (15)
Belt Tension Nut	1 58 (79)

1 — First step, tighten to 36 ft. lbs. (50 N.m), turn engine one full turn, and retighten to 58 ft. lbs. (79 N.m).

Peugeot Engines

505 4-CYLINDER (Cont.)

ENGINE SPECIFICATIONS

GENERAL SPECIFICATIONS

Year	DISPLACEMENT		Fuel System	HP@RPM	Torque Ft. Lbs.@RPM	Compr. Ratio	BORE		STROKE	
	Cu. In.	cc					In.	mm	In.	mm
1982	120.3	1970	K-Jetronic	96@4900	116@3300	8.3:1	3.465	88	3.189	81

CRANKSHAFT MAIN & CONNECTING ROD BEARINGS

Engine	MAIN BEARINGS				CONNECTING ROD BEARINGS		
	Journal Diam. In. (mm)	Clearance In. (mm)	Thrust Bearing	Crankshaft End Play In. (mm)	Journal Diam. In. (mm)	Clearance In. (mm)	Side Play In. (mm)
1970 cc No. 1 (Rear)	2.1616-2.1646 (54.905-54.980)	Rear	.003-.008 (.08-.20)	2.1123-2.1131 (53.652-53.673)	.0006-.003 (.016-.076)
No. 2	2.2102-2.2112 (56.140-56.165)						
No. 3	2.2509-2.2515 (57.174-57.189)						
No. 4	2.3050-2.3060 (58.548-58.573)						
No. 5	2.3386-2.3392 (59.401-59.416)						