

# Oil Pan Removal

## JEEP

### 6 CYLINDER ENGINES

Drain crankcase and remove starter. On "CJ" models, position suitable jack under transmission housing, disconnect right support cushion bracket from block and raise engine to gain clearance for oil pan removal. Remove oil pan attaching bolts. Remove oil pan, seals, and side gaskets.

### V8 ENGINES

Drain crankcase and remove starter. Remove oil pan attaching bolts. Remove oil pan, seals and side gaskets.

### TIGHTENING SPECIFICATIONS

Oil Pan Attaching Bolts	Ft. Lbs.
All Engines	
1/4 -20 Bolts .....	7
5/16 -18 Bolts.....	11

**NOTE** — Torque specifications for components other than oil pan attaching bolts may be found in Engine Removal Section.