

## JEEP – MECHANICAL LINKAGE

All Models  
Except 4-Cyl. "CJ" & Scrambler

### DESCRIPTION

Clutch assembly consists of a single dry-disc driven plate, 2 types of clutch covers; a 10½" diameter direct spring pressure type; and an 11" semi-centrifugal type. No internal adjustment for clutch disc wear is provided, but release lever height should be checked and adjusted. Clutch is actuated through mechanical type linkage.


### REMOVAL & INSTALLATION

#### CLUTCH

**Removal** – 1) Raise and support vehicle under frame and remove transmission. See *appropriate article in MANUAL TRANSMISSION SERVICING Section*. Disconnect rod and return spring at clutch fork. Remove throw-out bearing from clutch fork, then remove clutch fork.

2) Mark position of clutch cover on flywheel for reassembly in same position. Install aligning tool (J-5824-01) in clutch disc for support. Loosen clutch plate bolts 1 and 2 turns at a time until clutch plate spring tension is released. Remove clutch pilot tool and remove clutch and disc.

**Installation** – Check all components for wear or damage and replace as necessary. Using a suitable clutch alignment tool and noting alignment marks made during removal, align clutch disc and loosely install pressure plate. Reverse removal procedure to complete installation.

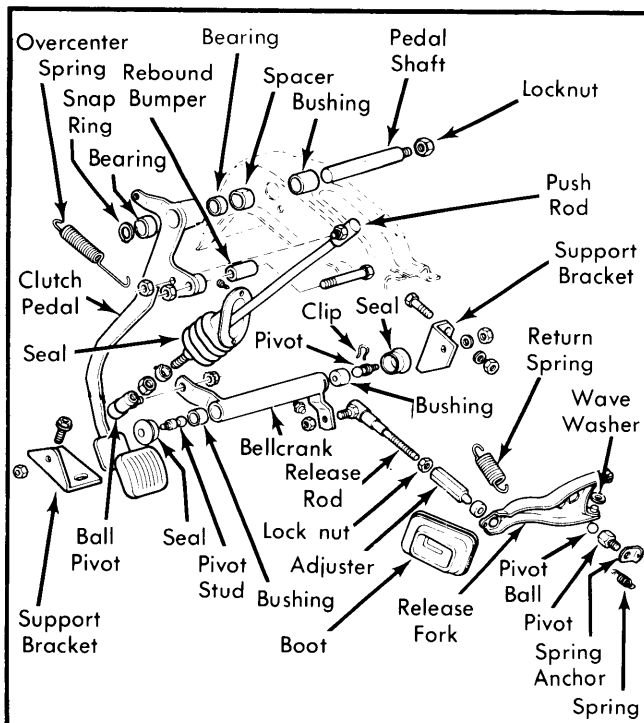

**Fig. 1 Exploded View of Clutch Linkage Assembly Cherokee, Wagoneer and Truck Shown ("CJ" & Scrambler Models Similar)**

### ADJUSTMENT

#### CLUTCH LINKAGE

Raise clutch pedal up to stop and adjust lower ball pivot assembly on pedal-to-bellcrank rod until inner bellcrank lever is parallel with front face of clutch housing. Adjust clutch fork release rod to obtain specified pedal free play.

#### Clutch Pedal Free Play Specifications


Application	Specification
"CJ" & Scrambler .....	1-1¼"
All Others .....	¾-5/8"

#### CLUTCH RELEASE LEVER

Position a suitable gauge plate (J-1048) on flywheel. Position clutch cover over gauge plate with release fingers aligned with machined lands on plate. Gauge plate hub should be centered between release levers. Attach cover to flywheel, tightening cover screws in rotation, one or two turns at a time. Set each release lever by depressing two or three times. Measure height of each lever in relation to plate hub using a suitable height gauge tool (J-23330). Tool has four different dimensional settings. Turn adjusting lever nuts until all three levers are at specified height. Work levers up and down two or three times and recheck measurements.

#### Clutch Release Lever Height Specifications

Application	Height
"CJ" & Scrambler .....	3/32-7/64"
All Others .....	3/16"

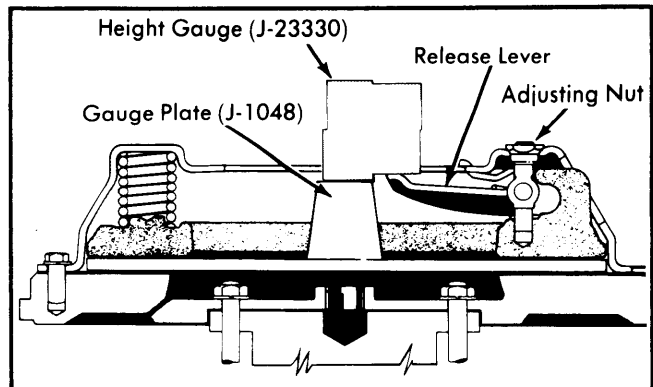

**Fig. 2 Sectional View Showing Correct Method of Measuring Clutch Release Lever Height**

#### TIGHTENING SPECIFICATIONS

Application	Ft. Lbs.
Clutch Cover-to-Flywheel Bolts .....	40
Clutch Housing-to-Engine Bolt	
6 Cylinder Models Top .....	35
6 Cylinder Models Bottom .....	45
8 Cylinder Models .....	30
Transmission-to-Clutch Housing Bolts .....	55