

1970 Distributor Specifications

FORD MOTOR CO. VACUUM ADVANCE & RETARD SPECIFICATIONS

NOTE - FOR ENGINE RPM AND DEGREES, MULTIPLY SPECIFICATIONS BELOW BY 2.

Distributor Part No. ①	Vacuum Advance (Distr. Degrees)						Vacuum Retard (Distr. Degrees)									
	Deg.	In. Hg.	Deg.	In. Hg.	Deg.	In. Hg.	Deg.	In. Hg.	Deg.	In. Hg.	Deg.	In. Hg.				
	Deg.	In. Hg.	Deg.	In. Hg.	Deg.	In. Hg.	Deg.	In. Hg.	Deg.	In. Hg.	Deg.	In. Hg.				
C7AF-AA	0-1/2	5	4-7 1/2	10	8 1/2-11 1/2	15	9-11 1/2	20	5 1/2-8	25	5 1/2-8	10	5-6	15	5-6	20
C8AF-A	0-3/4	5	1-3 3/4	10	5 1/2-8	15	5 1/2-8	20	6 1/2-9	25	6 1/2-9	10	4-6	15	5-6	20
C8AF-B	0-1	5	3-6	10	6 1/2-8	15	6 1/2-8	20	8 1/4-11	25	8 1/4-11	10	2-5 3/4	15	5-6	20
C8AF-E	0-3/4	5	0-3	10	5 1/4-8 1/2	15	8 1/4-11	20	-	-	-	10	5-6	15	5-6	20
C8AF-H	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
C8AF-M	0-1	5	4-6 3/4	10	9 1/4-12 1/4	15	10-12 1/2	20	10-12 1/2	25	10-12 1/2	10	3 1/2-6	15	5-6	20
C8AF-R	0-3/4	5	1-4 1/4	10	6 1/4-9 1/4	15	9 1/2-12 1/2	20	10-12 1/2	25	10-12 1/2	10	1 1/2-5 1/2	15	5-6	20
C8VF-C	0-3/4	5	1/2-4	10	6-9	15	8 1/2-11 1/2	20	9 1/2-12	25	9 1/2-12	10	1-5 1/4	15	5-6	20
C9AF-Y	0-1	5	2 3/4-6	10	6-8 1/2	15	6-8 1/2	20	6-8 1/2	25	6-8 1/2	10	2 1/4-6	15	5-6	20
C9DF-B	0-3/4	5	1 1/4-4 3/4	10	5 1/2-8	15	5 1/2-8	20	5 1/2-8	25	5 1/2-8	10	3 1/4-6	15	5-6	20
C9ZF-D	0-3/4	5	0-2	10	4-6 3/4	15	7-10	20	7 1/2-10	25	7 1/2-10	10	3 1/4-6	15	5-6	20
C9ZF-E	0-1	5	2 1/2-5 1/2	10	4 1/2-7	15	4 1/2-7	20	4 1/2-7	25	4 1/2-7	10	3-6	15	5-6	20
D0AF-AC	0-3/4	5	0-1 1/2	10	4 1/2-7 1/2	15	7-9 1/2	20	7-9 1/2	25	7-9 1/2	10	2-6	15	5-6	20
D0AF-H	0-1 1/4	5	5 1/2-8	10	5 1/2-8	15	5 1/2-8	20	5 1/2-8	25	5 1/2-8	10	2-6	15	5-6	20
D0AF-M	0-3/4	5	1-4 3/4	10	6 3/4-10	15	9 1/2-12 1/2	20	10-12 1/2	25	10-12 1/2	10	3-6	15	5-6	20
D0AF-T	0-1 1/4	5	3 1/2-6 1/2	10	7 1/2-10 1/2	15	9-11 1/2	20	9-11 1/2	25	9-11 1/2	10	2-3 1/2	15	2 1/2-3 1/2	20
D0AF-Y	0-3/4	5	0-2 1/4	10	3 1/4-6 3/4	15	7 1/4-10 1/4	20	8 1/2-11	25	8 1/2-11	10	1 1/4-6	15	5-6	20
D0AF-Z	0-3/4	5	0-1 1/4	10	3-6	15	6 3/4-9 3/4	20	8 1/2-11	25	8 1/2-11	10	-	-	-	-
D0DF-C	0-1	5	4-7	10	4 1/2-7	15	4 1/2-7	20	4 1/2-7	25	4 1/2-7	10	1 1/2-6	15	5-6	20
D0DF-E	0-1	5	5 1/2-8 1/2	10	8 1/2-11	15	8 1/2-11	20	8 1/2-11	25	8 1/2-11	10	2 1/2-6	15	5-6	20
D0DF-J	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
D0DF-A	0-1	5	4-7	10	6 1/2-9	15	6 1/2-9	20	6 1/2-9	25	6 1/2-9	10	3-6	15	5-6	20
D0DF-AA	0-1 1/4	5	3-6	10	6-8 1/2	15	6-8 1/2	20	6-8 1/2	25	6-8 1/2	10	2 3/4-6	15	5-6	20
D0DF-AB	0-1	5	3-6	10	6-8 1/2	15	6-8 1/2	20	6-8 1/2	25	6-8 1/2	10	2 1/4-6	15	5-6	20
D0DF-T	0-2	5	5-8	10	9-12	15	10-12 1/2	20	10-12 1/2	25	10-12 1/2	10	1 1/2-6	15	5-6	20
D0DF-U	0-1	5	2-5 1/4	10	6 1/2-9 1/4	15	9 1/2-12 1/2	20	10-12 1/2	25	10-12 1/2	10	-	-	-	-
D0DF-V	0-1	5	1-4 1/2	10	5 1/2-8 1/2	15	8-10 1/2	20	8-10 1/2	25	8-10 1/2	10	1-6	15	5-6	20
D0DF-Y	0-1	5	3-6	10	6-8 1/2	15	6-8 1/2	20	6-8 1/2	25	6-8 1/2	10	2-6	15	5-6	20
D0DF-Z	0-3/4	5	1 1/4-4 1/2	10	5 1/2-8 1/2	15	6-10 1/2	20	8-10 1/2	25	8-10 1/2	10	1-3 1/2	15	2 1/2-3 1/2	20
D0VF-B	0-1	5	1-4	10	5-8	15	6-8 1/2	20	6-8 1/2	25	6-8 1/2	10	-	-	-	-
D0ZF-C	0-3/4	5	1 1/2-4 1/2	10	7-10	15	8 1/2-11	20	8 1/2-11	25	8 1/2-11	10	2 1/2-3 1/2	15	5-6	20
D0ZF-G	0-1	5	2-5	10	7-9 1/2	15	7-9 1/2	20	-	-	-	-	-	-	-	-

① - Part No. prefix and suffix stamped on housing.
Basic Ford Part No. (omitted) is "12127".