

1972 Distributor Specifications

FORD MOTOR CO. VACUUM ADVANCE & RETARD SPECIFICATIONS

NOTE - FOR ENGINE RPM AND DEGREES, MULTIPLY SPECIFICATIONS BELOW BY 2.

Distributor Part No. (Exc. Calif.)	Distributor Part No. (Calif. Only)	Rot. Ⓢ	Vacuum Advance (Distr. Degrees) Operate Distributor @ 1000 RPM			Vacuum Retard (Distr. Degrees) Operate Distributor @ 1000 RPM			
			In. Hg. 5	In. Hg. 15	In. Hg. 20	In. Hg. 5	In. Hg. 15	In. Hg. 20	
72HF-DC 72HF-FA	72HF-DC 72HF-SC 72IF-TA	C C C C	0-2 0 0-2 1/2 0-2 1/2	5 1/2-7 1/2 5 1/2-7 1/2 5 1/2-7 1/2 5-8	5 1/2-7 1/2 5 1/2-7 1/2 5 1/2-7 1/2 5-8	0 0 0 0	1/2-4 0-1 1/2	2-4 3 1/2-7 2-4 5-7
72IF-YA D2AF-BA D2AF-CA D2AF-KA	C C CC CC	0-2 1/2 0-1 0-1 1/2 0-1	5-8 6 1/2-9 1/2 2 1/2-5 1/2 6 1/2-9 1/2	5-8 6 1/2-9 1/2 2 1/2-5 1/2 6 1/2-9 1/2	0 0-3 1/2 0-2 1/2 0-3	0-1 1/2 4 1/2-7 3 1/2-7 4-7	3 1/2-7 5-7 5-7 5-7	5-7 5-7 5-7 5-7
D2AF-NA D2AF-PA D2AF-RA	D2AF-MA	CC CC CC CC	0-1 0-1 0-1 1/2 0-1 1/2	5-8 5-8 6 1/2-9 1/2 7 1/2-10 1/2	6 1/2-9 1/2 6 1/2-9 1/2 10 1/2-13 1/2 10 1/2-13 1/2	0-2 0-2 0-2 0-2	2-4 2-4 3 1/2-7 2-4	2-4 2-4 5-7 2-4	2-4 2-4 5-7 5-7
D2DF-AA D2DF-CA	D2AF-SA D2DF-BA	CC C C C	0-1 1/2 0-1 0-1 0-1	3-6 1/2 1-4 1/2 1-4 1/2 1-4 1/2	7 1/2-10 1/2 4 1/2-7 1/2 4 1/2-7 1/2 4 1/2-7 1/2	0-2 0-4 0-4 0-4	2-4 5-7 5-7 5-7	2-4 5-7 5-7 5-7	2-4 5-7 5-7 5-7
D2DF-DA	D2DF-EA D2DF-FA	C C C CC	0-1 0-1 0-2 1/2 0-1	4 1/2-7 1/2 1-4 1/2 4 1/2-7 1/2 1 1/2-4 1/2	4 1/2-7 1/2 4 1/2-7 1/2 4 1/2-7 1/2 5 1/2-9	0-2 0-4 0-4 0-2 1/2	2-4 5-7 2-4 2-4	2-4 5-7 2-4 2-4	2-4 5-7 2-4 2-4
D2OF-AA D2OF-DA	D2MF-FA D2OF-EA	CC CC C C	0-1 0-2 1/2 0-3 0-3	1 1/2-4 1/2 6 1/2-9 1/2 6 1/2-9 1/2 6 1/2-9 1/2	8 1/2-11 1/2 10 1/2-12 1/2 6 1/2-9 1/2 6 1/2-9 1/2	0-2 1/2 0-5 0-6 0-4	2-4 5-7 5-7 2-4	2-4 5-7 5-7 2-4	2-4 5-7 5-7 2-4
D2OF-HA D2OF-LA D2OF-PA	D2OF-JA	CC CC CC C	0-1 1/2 0-1 1/2 0-2 1/2 0-1	2 1/2-5 1/2 2 1/2-5 1/2 6 1/2-9 1/2 4-7 1/2	2 1/2-5 1/2 2 1/2-5 1/2 10 1/2-12 1/2 6 1/2-9 1/2	0-2 1/2 0-2 1/2 0-4 0-2 1/2	3 1/2-7 3 1/2-7 2-4 4-7	5-7 5-7 2-4 5-7	5-7 5-7 2-4 5-7
D2VF-AA D2VF-BA D2ZF-AA	D2OF-RA D2VF-BA D2ZF-AA	CC CC CC CC	0-1 1/2 0-1 0-1 0-1 1/2	2 1/2-5 1/2 1-4 2 1/2-5 1/2 5 1/4-8 1/2	2 1/2-5 1/2 8 1/2-11 1/2 9-12 10-12	0-2 1/2 0-1	3 1/2-7 2-6	5-7 5-7	5-7 5-7
D2ZF-EA D2ZF-GC D2ZF-JA D2SF-EA	D2ZF-CA D2ZF-FA D2ZF-HA	CC CC CC CC CC	0-1 0-3 0-3 0-2 1/2 0-2 1/2 0-3 0-1	0-2 2 1/2-5 1/2 2 1/2-5 1/2 6 1/2-9 1/2 6 1/2-9 1/2 6-9 1-4	7-10 2 1/2-5 1/2 2 1/2-5 1/2 6 1/2-9 1/2 6 1/2-9 1/2 8 1/2-11 1/2	0-1 1/2 0-4 1/2 0-4 1/2 0-5	2-4 5-7 5-7 5-7	2-4 5-7 5-7 5-7	2-4 5-7 5-7 5-7

Ⓢ - C (Clockwise), CC (Counterclockwise) viewed from rotor end.

Ⓢ - Part No. stamped on housing.