

CARTER THERMO-QUAD 4-BARREL

CARBURETOR APPLICATION

CHRYSLER CORP.

Application	Chrysler Corp. Carb. No.	
	Man. Trans.	Auto. Trans.
5.2L (318")		
Federal	TQ-9372S
Calif.	TQ-9373S

CARBURETOR IDENTIFICATION

Carburetor identification number is stamped on left rear foot of throttle body on vertical surface near bolt hole.

DESCRIPTION

Carburetor has 3 main parts — the air horn, main body and throttle body. Air horn houses choke valve, air valve for secondaries, fuel inlet system (2 floats, inlet needles and seats), accelerating pump systems, primary boost venturi, vacuum controlled step-up piston and rods, low and high speed fuel metering systems (secondary jets, fuel discharge nozzles, air bleeds and restrictions), and the duty cycle solenoid (provides limited regulation of air/fuel ratio in response to computer signals).

Main body houses primary jets and is constructed of phenolic resin for cooler fuel temperatures. Throttle body houses throttle valves and linkage.

All Thermo-Quad carburetors installed on vehicles equipped with an EGR system have a venturi vacuum port on the side of the carburetor. This is the only vacuum port located in the main body. All other vacuum pickup points are located in the throttle body.

ADJUSTMENT

Thermo-Quad has unique features which require extra caution during adjustments. Many of these carburetor components have at least two functions. Because of the separate nature of these functions, separate but interrelated adjustments are necessary and these adjustments must be performed in their proper sequence. Certain of these adjustments will be necessary only if the carburetor is being overhauled or has been disassembled and should be made off the car on a bench.

HOT (SLOW) IDLE RPM

See appropriate article in TUNE-UP SERVICE PROCEDURES

IDLE MIXTURE

See appropriate article in TUNE-UP SERVICE PROCEDURES.

COLD (FAST) IDLE RPM

See appropriate article in TUNE-UP SERVICE PROCEDURES.

FLOAT LEVEL

1) Turn air horn upside down. Place air horn gasket in position on air horn. Make sure floats are against seated needle valve. See Fig. 1.

2) Measure float level specified clearance from bottom side of float to gasket surface. To adjust, bend float lever.

CAUTION — DO NOT allow lip of float lever to press against needle when adjusting. This will damage needle and cause carburetor flooding and incorrect float level.

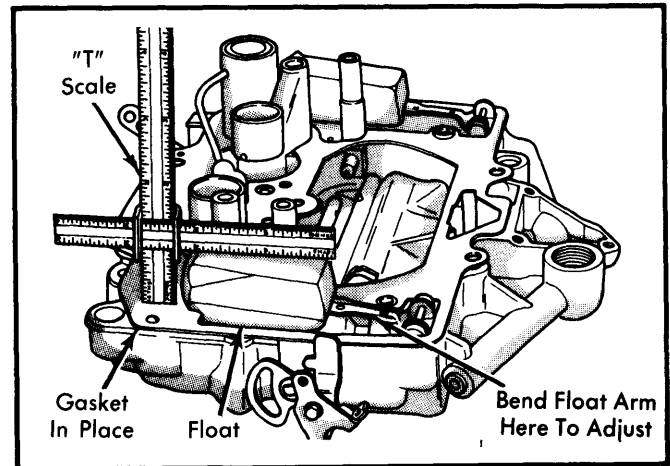


Fig. 1 Adjusting Float Level

SECONDARY THROTTLE LINKAGE

1) Hold fast idle lever in curb idle position. Turn carburetor upside down. Open throttle valves wide open. See Fig. 2.

2) Primary and secondary levers should both contact stops at the same time. To adjust, bend secondary throttle operating rod at point shown in illustration.

NOTE — Check linkage for interference and smooth movement after bending linkage rod.

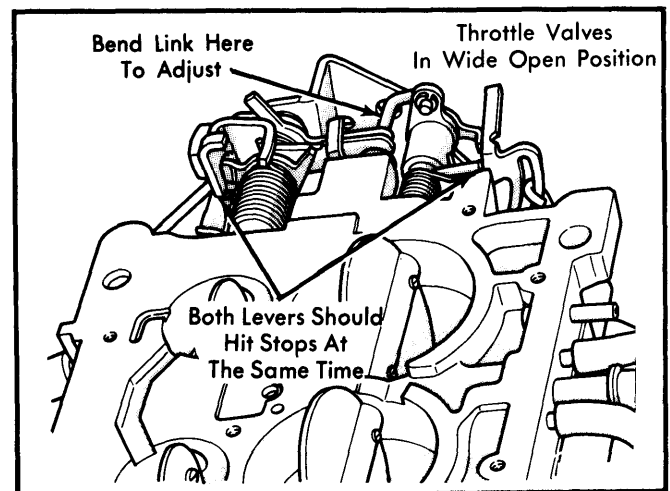


Fig. 2 Adjusting Secondary Throttle Linkage

SECONDARY AIR VALVE ALIGNMENT

1) Observe carburetor from directly above. See Fig. 3.

2) With air valve in closed position, gap between air valve and air horn wall must be at its maximum and parallel with air horn gasket.

CARTER THERMO-QUAD 4-BARREL (Cont.)

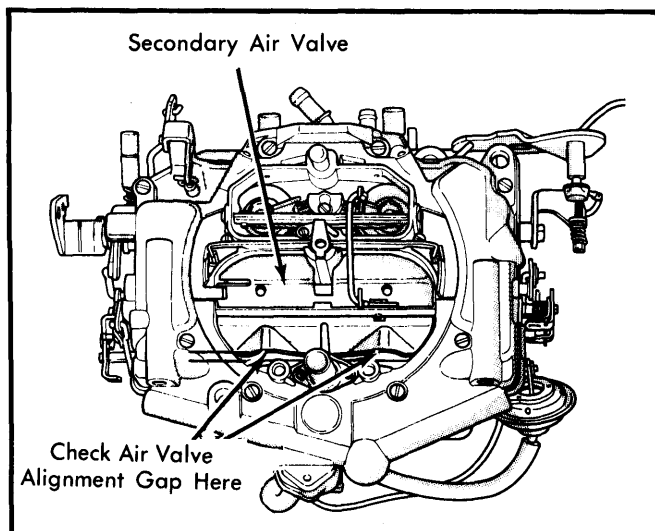


Fig. 3 Checking Secondary Air Valve Alignment

SECONDARY AIR VALVE OPENING

1) Hold secondary air valve wide open. Measure specified gap between raised edge (short side) of air valve and air horn wall. See Fig. 4.

2) To adjust, bend short side of air valve with pliers until specified gap is obtained. Corner of air valve is notched to aid in adjustment.

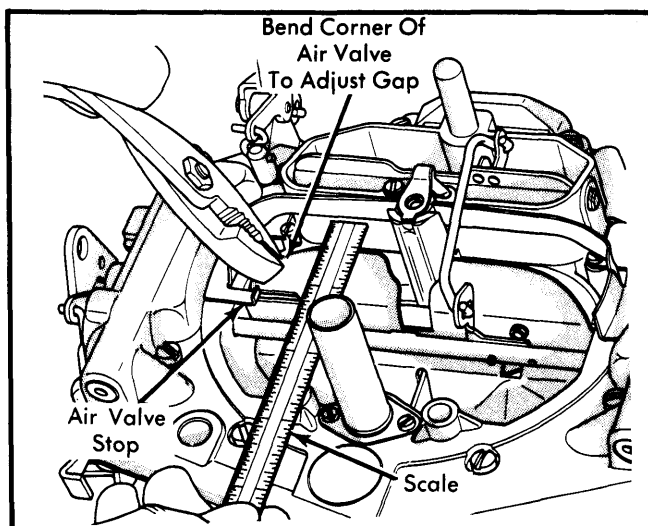


Fig. 4 Adjusting Air Valve Gap

SECONDARY AIR VALVE SPRING TENSION

CAUTION— When performing this adjustment, hold air valve adjustment plug with screwdriver when loosening lock plug. If not, spring may snap out of position. This would require taking the carburetor apart to get the spring out.

1) Loosen air valve lock plug. Turn air valve adjustment plug clockwise. This allows air valve to move to wide open position. See Fig. 5.

2) Insert a long slender screwdriver through center of special air valve spring adjustment tool (C-4152).

3) With special tool positioned on air valve lock plug, turn adjustment plug counterclockwise until air valve lightly touches stop.

4) Lightly press air valve against stop with finger. Now turn adjustment plug additional amount of specified turn(s) counterclockwise. Hold adjustment plug with screwdriver and tighten lock plug with special tool.

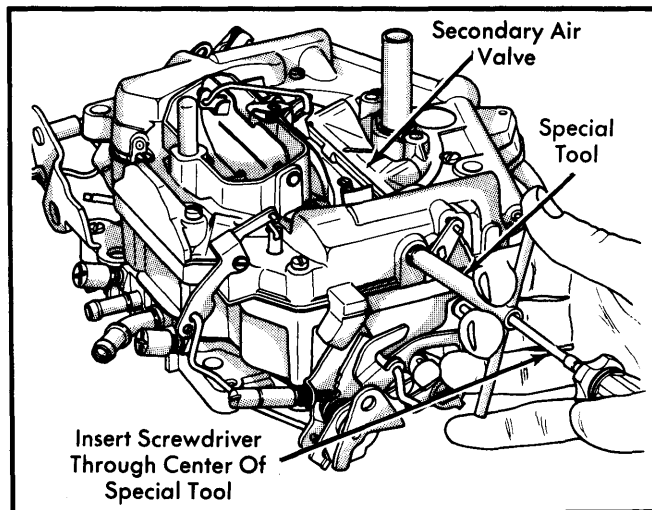


Fig. 5 Adjusting Secondary Air Valve Spring Tension

CHOKE CONTROL LEVER

NOTE— If choke control lever adjustment is changed, vacuum kick, fast idle cam position and choke unloader adjustments must also be reset.

1) Place carburetor on a flat surface. Make sure bottom of throttle body is flush with flat surface and that flat surface extends out under choke control lever. See Fig. 6.

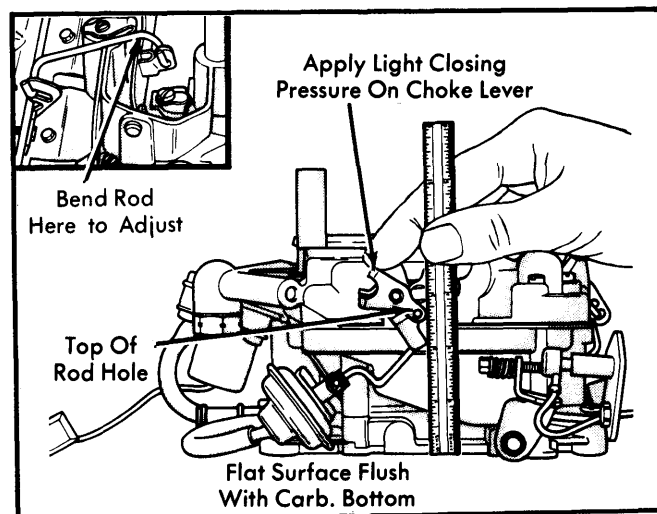


Fig. 6 Adjusting Choke Control Lever

2) Push on choke lever (with throttle partly open) to close choke.

3) Measure vertical distance from top of rod hole in control lever to flat surface.

4) If measurement is not to specification, adjust by bending rod connecting both choke shafts.

CARTER THERMO-QUAD 4-BARREL (Cont.)

CHOKE DIAPHRAGM CONNECTOR ROD

NOTE — If choke diaphragm connector rod adjustment is changed, vacuum kick adjustment must also be reset.

1) Make sure diaphragm is securely mounted to carburetor. Using an outside vacuum source, apply at least 15 in. of Hg vacuum to diaphragm. Make sure diaphragm stem is fully seated. See Fig. 7.

2) Apply light opening (downward pressure) on secondary air valve. Measure specified clearance between air valve and stop. To adjust, bend connector rod at point shown.

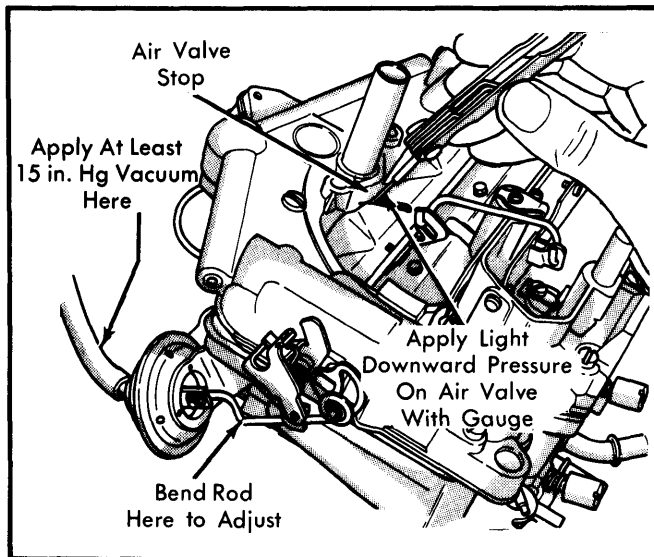


Fig. 7 Adjusting Choke Diaphragm Connector Rod

CHOKE VACUUM KICK

1) Open throttle and close choke. Now close throttle to trap fast idle cam at closed choke position. See Fig. 4.

2) Apply an outside vacuum source of at least 15 in. Hg to choke diaphragm. Apply enough closing force on choke control lever to move vacuum kick adjustment tang against stop without distorting linkage.

NOTE — If torsion spring is weak, it will easily be deflected. For correct adjustment, vacuum kick adjustment tang must be at stop.

3) Measure choke vacuum kick specified clearance between lower edge of choke valve and air horn wall at throttle lever side. Measurement can be checked using a specified drill or pin gauge.

NOTE — Make sure clearance does not change as drill or pin gauge is inserted or removed.

4) To adjust, insert screwdriver in slot in vacuum kick tang and twist. Do not adjust diaphragm rod. Check all linkage for freedom of movement. Reconnect vacuum hose to diaphragm.

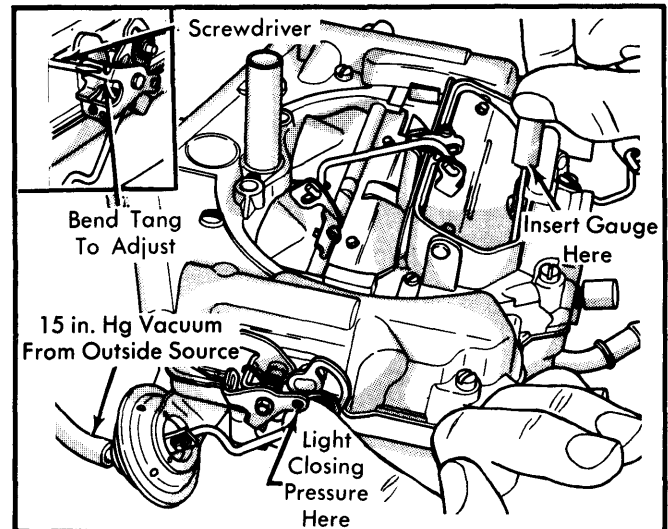


Fig. 8 Adjusting Choke Vacuum Kick

FAST IDLE CAM POSITION

NOTE — If fast idle cam position adjustment is changed, choke unloader and secondary throttle lockout adjustments must also be reset.

1) Position fast idle speed screw on second step of fast idle cam. Close choke valve by applying light closing pressure on fast idle cam lever. See Fig. 9.

2) Measure fast idle cam specified clearance between lower edge of choke valve and air horn wall. Measurement can be checked using a specified drill or pin gauge.

NOTE — Make sure clearance does not change as drill or pin gauge is inserted or removed.

3) To adjust, bend fast idle cam connector rod at point shown until specified clearance is obtained.

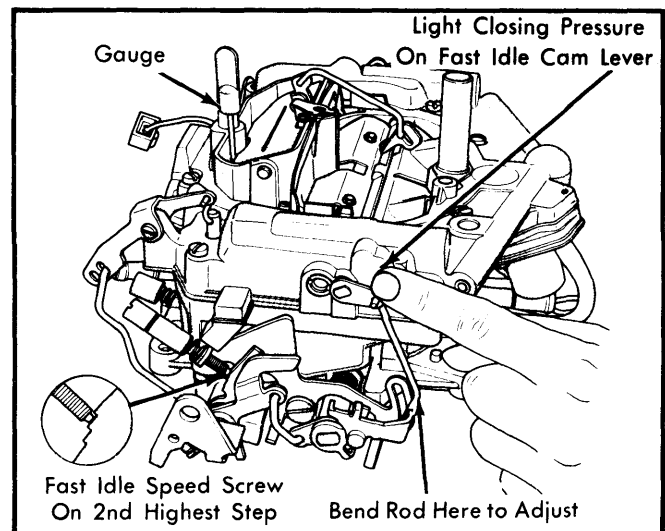


Fig. 9 Adjusting Fast Idle Cam Position

CHOKE UNLOADER

1) Open throttle valves wide open. Apply light closing pressure on fast idle cam lever to close choke valve. See Fig. 10.

CARTER THERMO-QUAD 4-BARREL (Cont.)

2) Measure specified clearance between lower edge of choke valve and air horn wall. Measurement can be checked using a specified drill or pin gauge.

NOTE — Make sure clearance does not change as drill or pin gauge is inserted or removed.

3) To adjust, bend tang on fast idle lever until specified clearance is obtained.

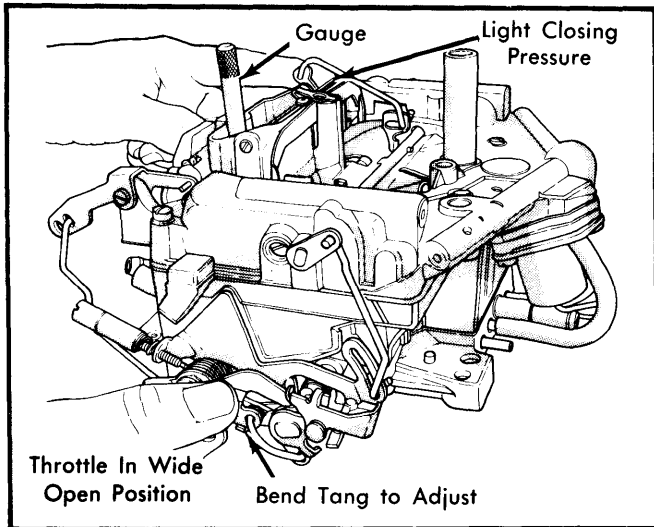


Fig. 10 Adjusting Choke Unloader

SECONDARY THROTTLE LOCKOUT

1) Move fast idle control lever to wide open choke position. Measure specified clearance between lockout lever and stop. Clearance can be checked using a specified drill or pin gauge. See Fig. 11.

2) To adjust, bend tang on lower end of fast idle control lever until specified clearance is obtained.

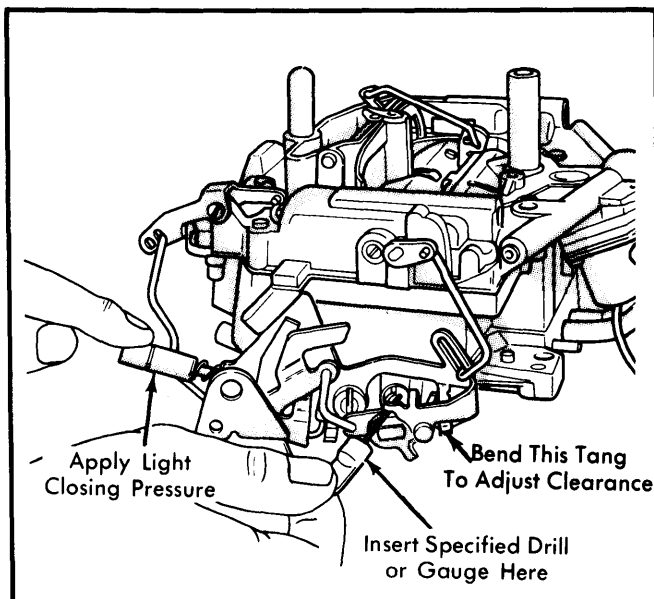


Fig. 11 Adjusting Secondary Throttle Lockout

ACCELERATOR PUMP STROKE

NOTE — Accelerator pump stroke is determined by measurement of accelerator pump plunger height above air horn surface AT CURB IDLE.

1) Be sure throttle connector rod is in specified hole of pump arm.

2) Use a scale to measure height of accelerator pump plunger stem (from stem top to air horn surface) at curb idle.

3) Adjust plunger height by bending throttle connector rod as shown in Fig. 12.

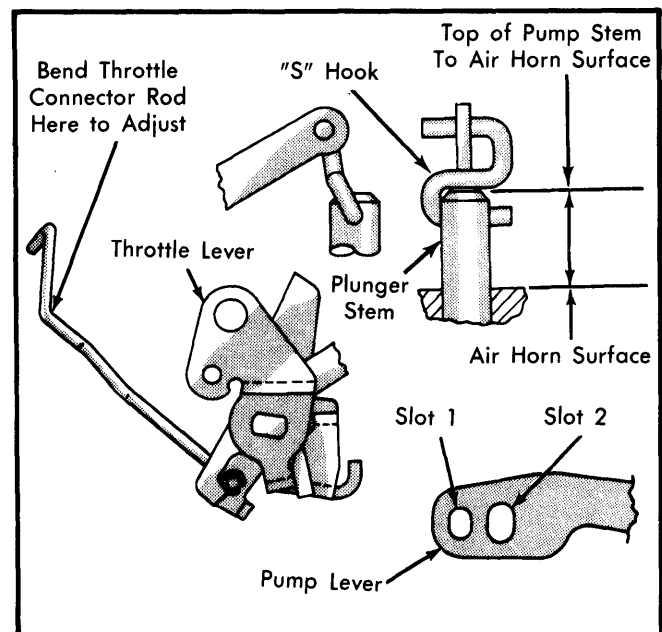


Fig. 12 Adjusting Accelerator Pump Stroke (First and Second Stage)

SOLENOID BOWL VENT VALVE TEST

- 1) Remove air cleaner assembly.
- 2) Disconnect hose to solenoid bowl vent diaphragm.
- 3) Connect outside vacuum source and apply at least 15 in. Hg to diaphragm.
- 4) Look down through air horn vent tube and observe valve movement.
- 5) Turn ignition switch ON.
- 6) Remove outside vacuum source from diaphragm. Valve should remain in down position until ignition switch is turned OFF.
- 7) If valve does not move with applied vacuum, diaphragm is leaking and must be replaced.
- 8) If valve does not remain in down position when ignition switch is turned ON and vacuum source is removed, solenoid or its related wiring is faulty.

CARTER THERMO-QUAD 4-BARREL (Cont.)

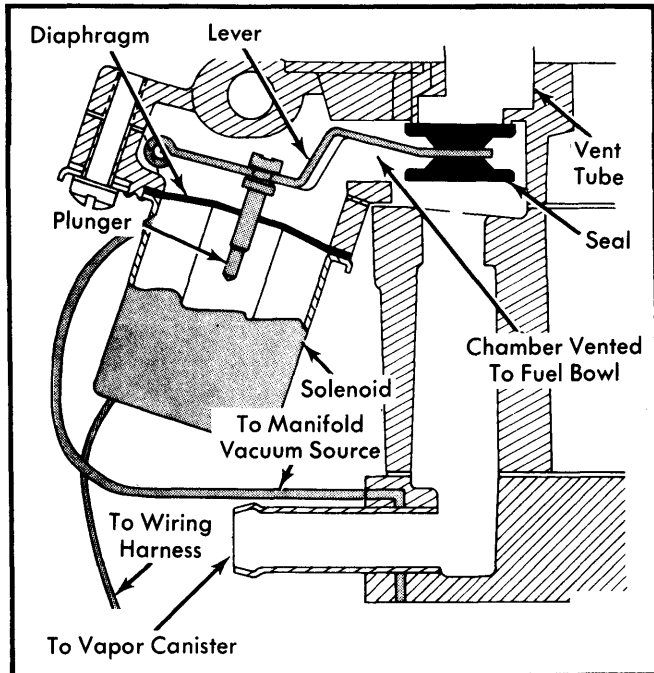


Fig. 13 Cutaway View of Solenoid Vent Valve for Checking Vent Valve Operation

IDLE ENRICHMENT VALVE TEST

- 1) Start engine and warm to normal operating temperature.
 - 2) Turn engine OFF and remove air cleaner.
 - 3) Install jumper wire from carburetor idle stop switch to ground.
 - 4) Connect tachometer to engine.
 - 5) Disconnect hose to idle enrichment system diaphragm at plastic connector.
- NOTE** — Remove connector from carburetor hose before proceeding.
- 6) Start engine.
 - 7) Place fast idle speed screw on setting (slowest speed) step of fast idle cam.
 - 8) Attach outside vacuum source to enrichment diaphragm with 3 or 4 feet of hose.
 - 9) Apply at least 15 in. Hg and note any engine RPM change.
 - 10) If speed can be controlled by vacuum, system is working properly.
 - 11) If not, block inlet air passage and note engine RPM change. If speed can be controlled in this manner, diaphragm is leaking and/or air valve is stuck open.
 - 12) If speed cannot be controlled, air valve is stuck closed.
 - 13) Clean air valve and repeat steps 9) and 10).
 - 14) If speed cannot be controlled, replace the enrichment diaphragm.

OVERHAUL

DISASSEMBLY

- 1) Place carburetor on repair stand and remove altitude compensator (if equipped). Remove idle enrichment vacuum diaphragm, nipple and return spring (3 screws).
- 2) Remove throttle position transducer wire, transducer, idle stop switch and bracket. Remove throttle connector rod and accelerator pump arm screw. Disengage from pump rod "S" link and remove lever.

NOTE — Leave "S" link connected to pump rod.

- 3) Remove retainers and washer holding choke diaphragm connector rod to vacuum diaphragm and air valve lever. Remove retainer holding rod to choke countershaft.

- 4) Remove step-up piston cover plate and metering rod cover plates. Remove step-up piston and link assembly with step-up rods and piston spring. Remove discharge pump nozzle housing and gasket.

- 5) Turn carburetor upside down and remove discharge check needle. Remove 10 bowl cover screws.

NOTE — 2 screws are located between choke valve and air horn wall.

- 6) Remove bowl cover with floats. Do not set down on float side. Remove float bowl from throttle body.

Bowl Cover Disassembly — 1) Remove float lever pins and lift out float assembly.

NOTE — Mark floats so they can be installed in original locations.

- 2) Remove 2 needle valves from seats, marking them for reassembly location.

- 3) Remove needle valve seats (use wide blade screwdriver).

NOTE — Be sure to match original needle to its seat for reassembly.

- 4) Remove secondary metering jets, plastic accelerator pump passage tube and bowl cover gasket. Remove pump rod "S" link.

- 5) Carefully remove accelerator pump plunger assembly to avoid damaging plunger shaft hole in cover. Remove intake check seat, plunger and spring.

NOTE — Always install a new check seat and plunger when carburetor is disassembled.

- 6) Remove "L" shaped fuel inlet hose. Remove inlet fitting and gasket. Remove solenoid bowl vent valve assembly.

Throttle Body Disassembly — 1) Remove step-up actuating lever.

- 2) Remove choke diaphragm and bracket assembly with hose. Do not place this assembly in carburetor cleaning solvent.

NOTE — The carburetor vacuum fitting contains a small vacuum passage restriction. Clean with compressed air only.

1981 Carter Carburetors

CARTER THERMO-QUAD 4-BARREL (Cont.)

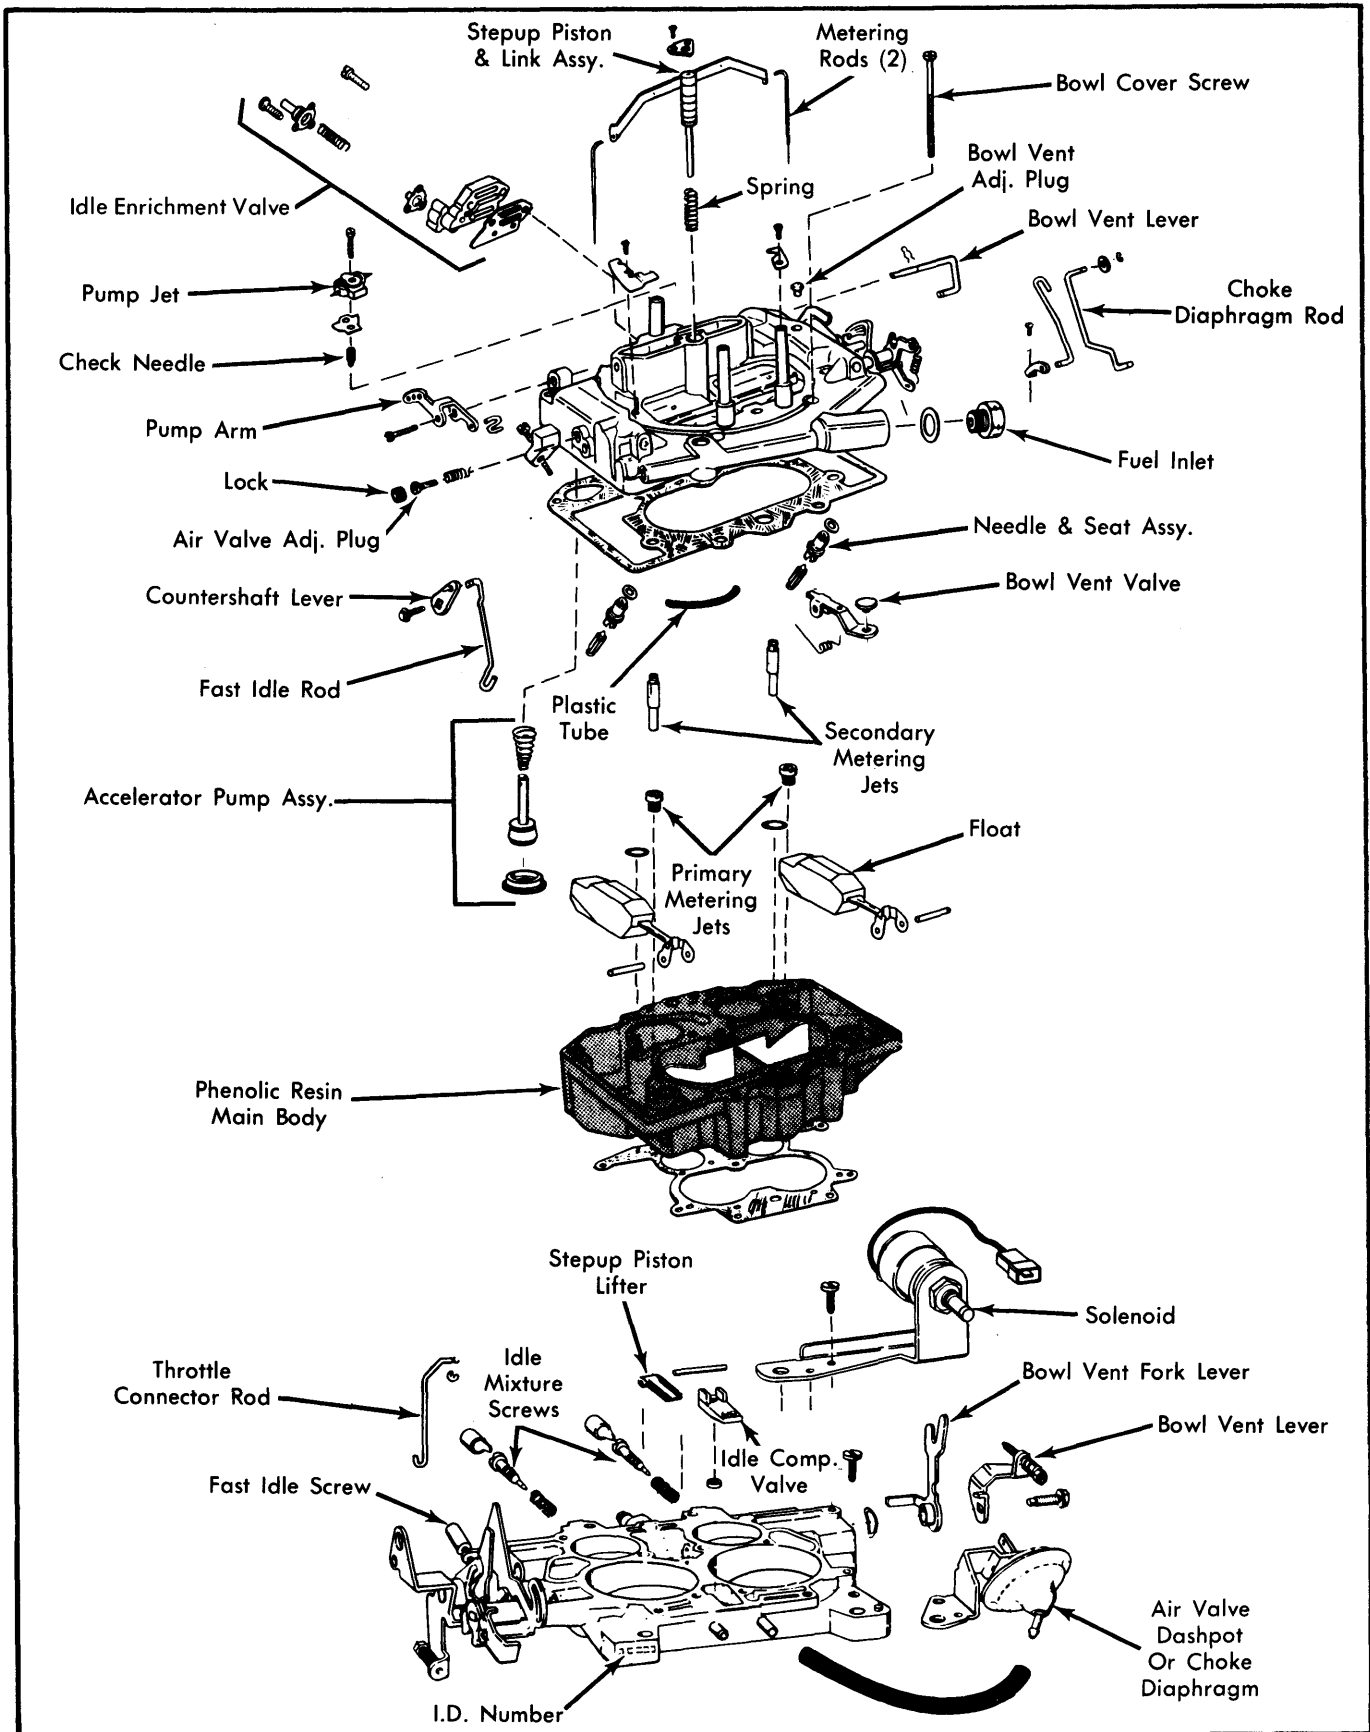


Fig. 14 Exploded View of Carter Thermo-Quad 4-Barrel

CARTER THERMO-QUAD 4-BARREL (Cont.)

3) Remove (carefully) idle limiter caps.

4) Remove idle mixture screws and springs.

CAUTION — Manufacturer does not recommend removal of throttle shafts or valves unless absolutely necessary. These parts are precisely adjusted at factory. The slightest misalignment upon reassembly would adversely affect carburetor operation between curb idle and about 30 mph.

Main Body Disassembly — 1) Remove primary "O" ring seals and discard.

2) Remove primary metering jets.

3) It is not necessary to remove baffle plate from main body.

CAUTION — No further disassembly is recommended. Do not leave main body in carburetor solvent for a prolonged period of time.

CLEANING & INSPECTION

- Do not soak choke diaphragm or plastic parts in solvent.
- Do not leave main body in solvent for too long a time.

- Rinse parts with HOT water after using solvent. Blow dry with compressed air.
- Do not use wire, drill or any hard parts to clean passages.
- Be sure gasket holes match up and all parts are clean and ready for installation.

REASSEMBLY

To reassemble carburetor, reverse disassembly procedures, using new gaskets and seals. Make sure gaskets fit correctly and that all holes are punched through and correctly located. Also, note the following:

1) Install pump discharge check needle with point toward base of carburetor.

2) Install upper pump plunger spring in cylinder with large end first. Lubricate and install plunger, pushing stem through hole in casting. Install "S" link with lower open end toward choke valve. Install pump arm and screw before installing pump intake check valve assembly.

3) When installing bowl cover, be sure bowl vent operating lever engages bowl vent actuating fork. Install 10 bowl cover screws. Tighten, in steps, to 35 INCH lbs.

CARBURETOR ADJUSTMENT SPECIFICATIONS

Application	Float Level Setting	Secondary Air Valve		Choke Lever Setting	Choke Diaphragm Rod Setting	Choke Vacuum Kick	Fast Idle Cam Setting	Choke Unloader Setting	Secondary Throttle Lockout	Accelerator Pump		
		Opening Setting	Spring Tension ^①							Hole Setting	1st Stage Setting	2nd Stage Setting ^②
TQ-9372S	29/32"	1/2"	1-3/4"	3-3/8"	.040"	.130"	.100"	.312"	.060-.090"	2	33/64"	25/64"
TQ-9373S	29/32"	1/2"	1-3/4"	3-3/8"	.040"	.130"	.100"	.312"	.060-.090"	2	33/64"	25/64"

① — Specification given is the amount of turns counterclockwise.

② — If equipped.