

## TOYOTA ELECTRIC FUEL PUMPS

Cressida  
Supra

### DESCRIPTION

Fuel pump is located at the left rear of vehicle on Cressida models or right rear on Supra models. Internal components include a rotor, check and relief valves, orifice and silencer. See Fig. 1. If electric pump becomes defective, it must be replaced as the internal components are not serviceable.

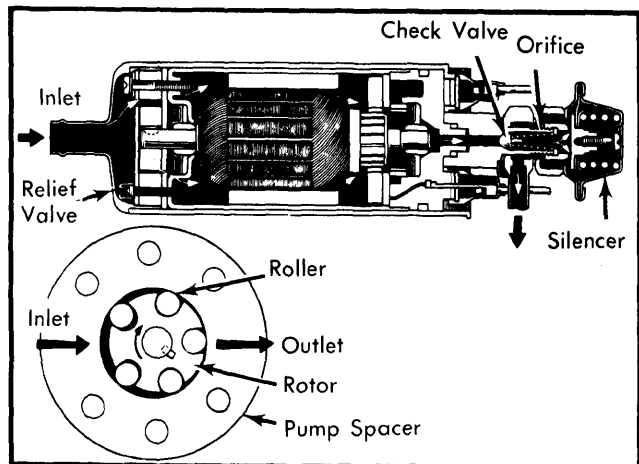


Fig. 1 Cutaway View of Electric Fuel Pump

### TESTING

#### PUMP OPERATION CHECK

1) Turn ignition switch ON. Short both terminals of fuel pump check connector. See Fig. 2. Check for pressure in hose to cold start injector. At this time you will hear fuel return noise from pressure regulator.

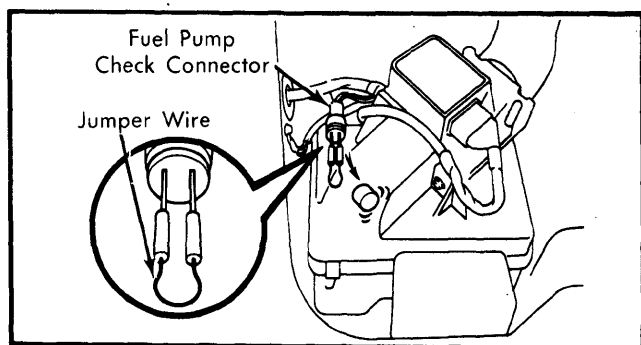


Fig. 2 Check Connector Location

2) If there was no pressure in hose to cold start injector, check the following parts: Fusible link, 15 Amp. fuse, circuit opening relay, wiring connections or fuel pump pressure.

#### PUMP PRESSURE CHECK

1) Disconnect negative battery cable and wiring connector from the cold start injector. Place a container or shop towel under front end of delivery pipe.

2) Slowly loosen the union bolt of the cold start injector hose and remove bolt and 2 gaskets from the delivery pipe. Drain fuel in delivery pipe.

3) Install gasket, pressure gauge, another gasket and union bolt to delivery pipe as shown in Fig. 3. Wipe off any spilled fuel. Reconnect negative battery cable. Start engine.

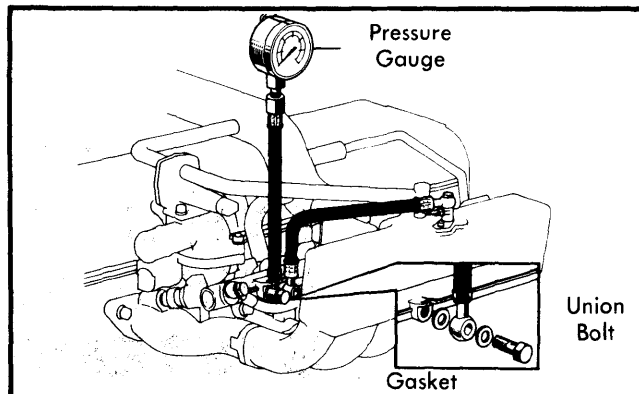


Fig. 3 Pressure Gauge Installation

4) Disconnect and plug vacuum sensing hose from the pressure regulator. With engine idling, check that fuel pressure is 33-38 psi (2.3-2.7 kg/cm<sup>2</sup>).

5) If pressure is high, replace pressure regulator. If pressure is low, check fuel hoses and connections, fuel pump, filter and pressure regulator for leaks.

6) Reconnect vacuum sensing hose to pressure regulator. With engine idling, check that fuel pressure is 28-33 psi (2.0-2.3 kg/cm<sup>2</sup>). If pressure is high, replace pressure regulator.

7) Turn ignition switch OFF. If pressure drops quickly, check fuel pump, pressure regulator and/or injectors. Disconnect negative battery cable. Carefully remove pressure gauge. Using new gaskets, reinstall removed parts.

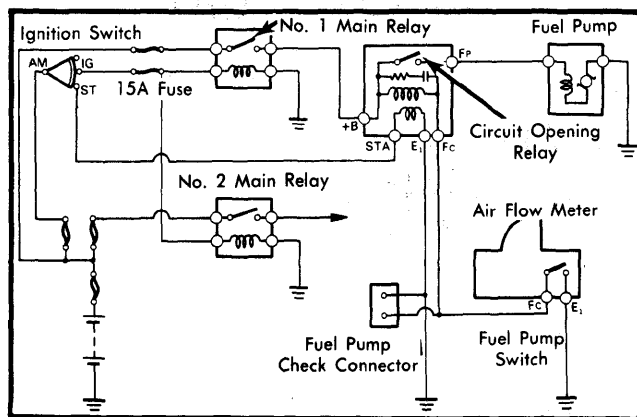


Fig. 4 Cressida Fuel Pump Control System Circuit

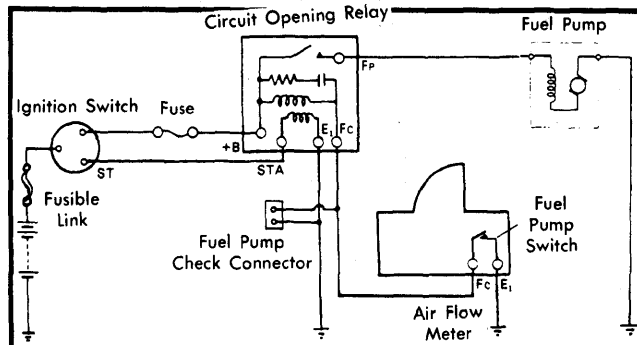


Fig. 5 Supra Fuel Pump Control System Circuit