



INDICATES PIN NO.

22	7
13	2
21	6
21	14
1	3
18	4
11	17
10	20

TO START INTERLOCK  
 TO SEAT BELT & STARTER INTERLOCK

CONNECTOR LOCATED UNDER I.P. BEHIND FUSE PANEL

