## AMERICAN MOTORS

### FUSE BLOCK

**Location** – Fuse block location for all models is under the instrument panel, left side.

### FLASHER LOCATION

**Hazard** – In fuse block.

**Turn Signal** – In fuse block.

### CIRCUIT BREAKERS

**Headlights** – 20 amp. circuit breaker in headlight switch.

**Windshield Wiper** – Pacer has an 8.25 amp. circuit breaker for windshield wipers and 4.5 amp. breaker for tail gate window wiper, both located at left side of brake support bracket. All other models have 6 amp. circuit breaker in wiper switch.

**Power Windows** – All use 30 amp. circuit breakers located in fuse block.

### FUSIBLE LINKS (SPIRIT, AMX & CONCORD)

**Red Wire** – Protects complete wiring; located at battery terminal of starter solenoid to main wire harness.

**Pink Wire** – Protects horn circuit; located at battery terminal of horn relay to main wire harness.

**Red Wire** – Protects electric heated rear window; located at battery terminal of starter solenoid to heated rear window relay

**Red Wire** – Protects headlight switch circuit/battery feed circuit to fuse block; located at engine compartment splice "B" to dash connector DZ.

**Pink Wire** – Protects engine compartment light; located at battery terminal of starter solenoid to engine compartment light wire.

**Pink Wire** – Protects gauge package wiring; located at battery terminal of starter solenoid to gauge package harness.

**Pink Wire** – Protects hatch release wiring; located at battery terminal of starter solenoid to remote deck lid/hatch release harness.

**Pink Wire** – Protects air shock wiring; located at battery terminal of starter solenoid to air adjustable shocks wiring.

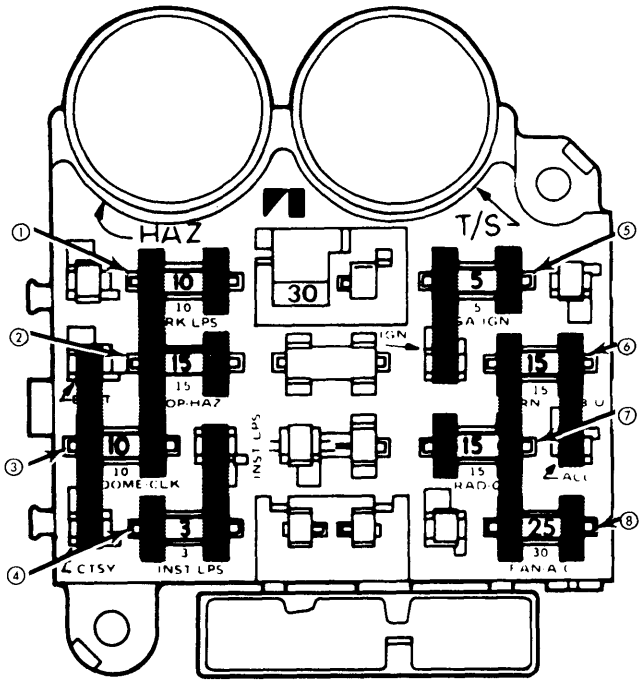


*Fig. 1 Fuse Block for Spirit, AMX & Concord*

### SPIRIT, AMX & CONCORD FUSE BLOCK CIRCUITS

① – **10 amp.** Parking lights, key/headlights warning buzzer.
② – **15 amp.** Stop light and hazard warning.
④ – **3 amp.** Cluster illumination.
⑤ – **5 amp.** Gauges, seat belt warning.
⑥ – **15 amp.** Turn signals, backup lights, windshield washers.
⑦ – **15 amp.** Radio, cigar lighter.
⑧ – **25 amp.** Heater/blower motor, A/C clutch.
⑨ – **30 amp.** Power door lock circuit breaker.
⑩ – **25 amp.** Heated rear window.

### FUSIBLE LINKS (PACER)

**Pink Wire** – Protects horn circuit; located in battery terminal of horn relay to main wiring harness.

**Red Wire** – Protects complete wiring; located at battery terminal of starter relay to main wiring harness.

**Pink Wire** – Protects engine compartment light; located between battery terminal of starter and engine compartment light.

Copyright (c) 2003 Mitchell Repair Information Company