




1966 Console Wiring

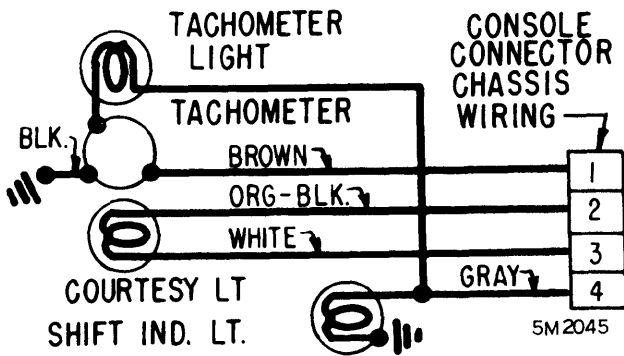


1965-66 BUICK WILDCAT

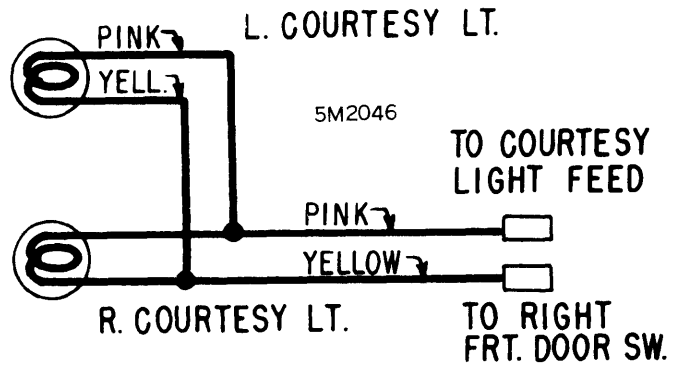


1966 DODGE CORONET (MANUAL TRANS.)

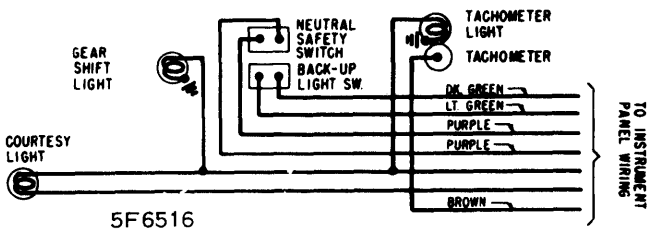


1966 BUICK GRAN SPORT

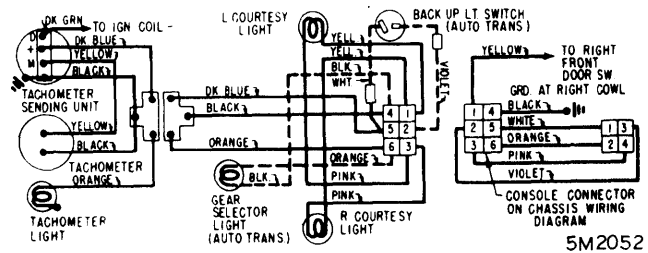


1966 DODGE CORONET (WITH TACH)

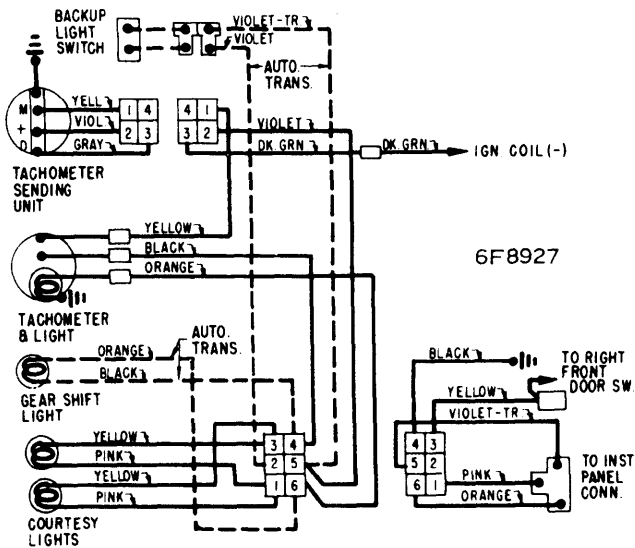


1966 DODGE CORONET & PLYMOUTH (AUTO TRANS. & TACHOMETER)

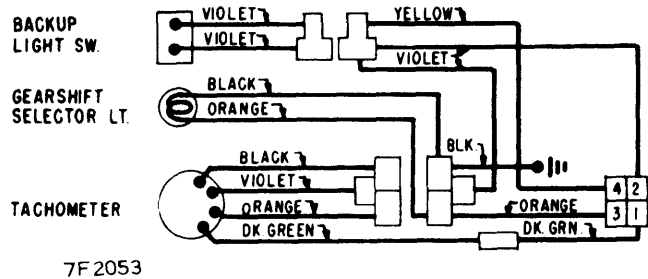

1967 DODGE DART (WITH TACH)

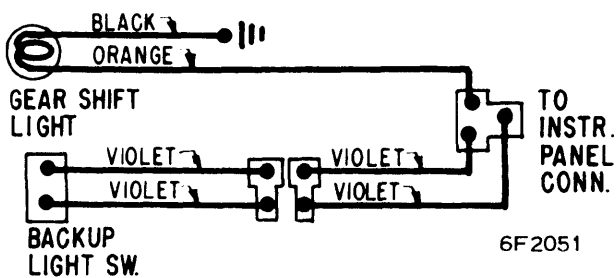


1966 DODGE DART (MANUAL TRANS.)

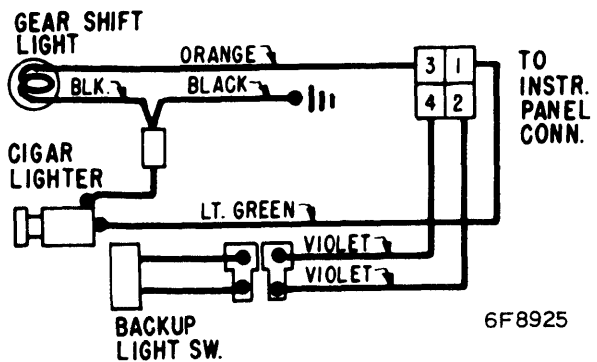


1966 DODGE DART (AUTO TRANS.)

1966 Console Wiring

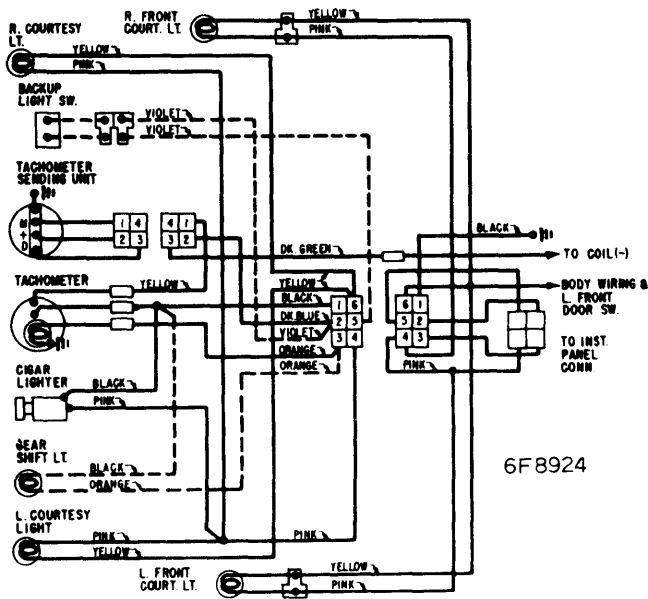

1966 DODGE POLARA & MONACO

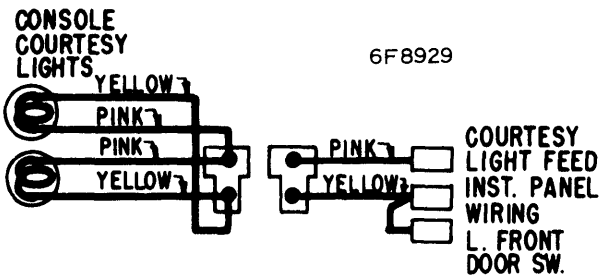

1966 PLYMOUTH (MANUAL TRANS.)