



AMERICAN MOTORS

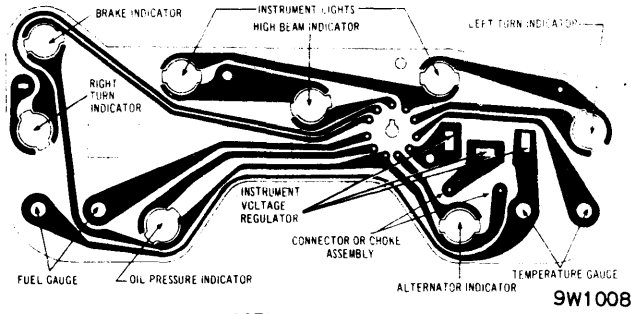


1971 MATADOR

9W1008

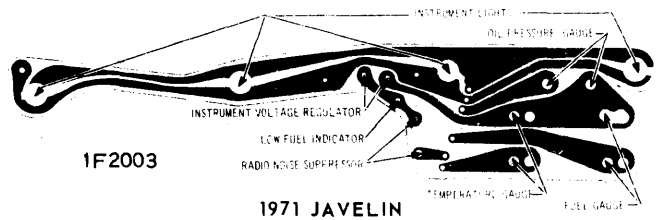


1F2003

1971 JAVELIN

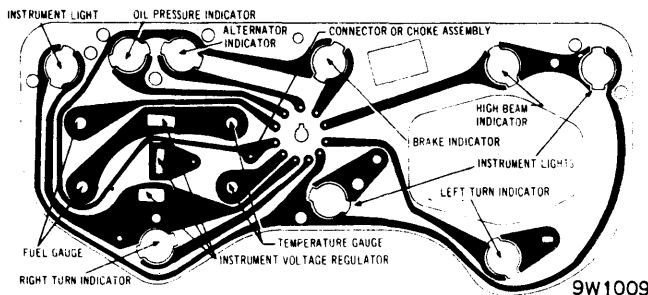

1971 AMBASSADOR


9W1009

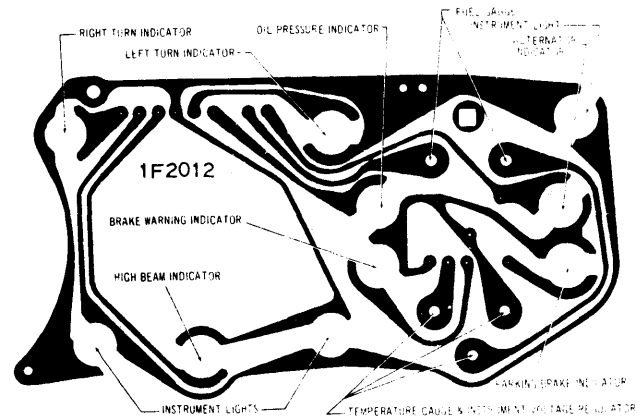

1F2012


1971 HORNET & GREMLIN

CHRYSLER CORP.

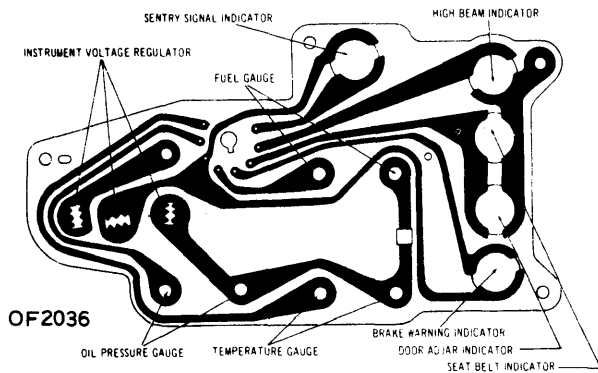


OF2036

1971 IMPERIAL

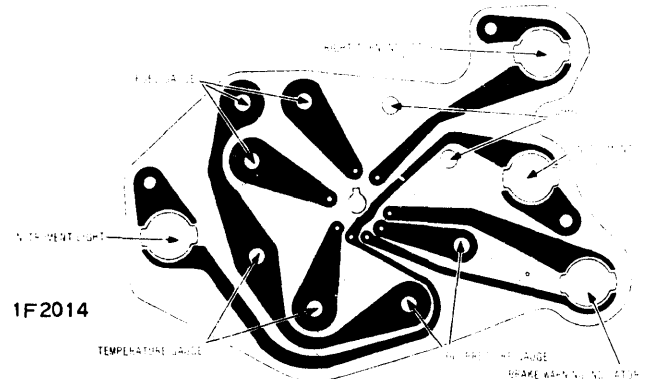


1F2014

1971 VALIANT & DART (RIGHT SIDE)
(WITH GAUGES)

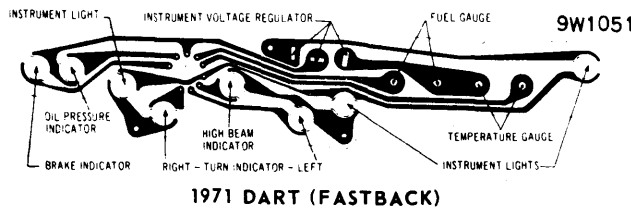


9W1051

1971 DART (FASTBACK)

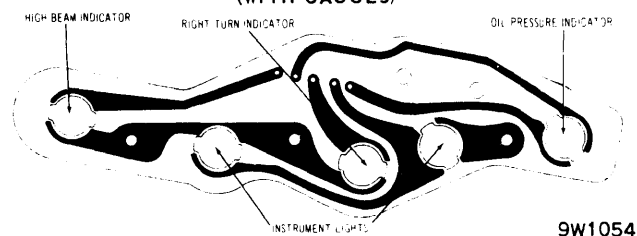


9W1054

1971 DART (RIGHT SIDE)

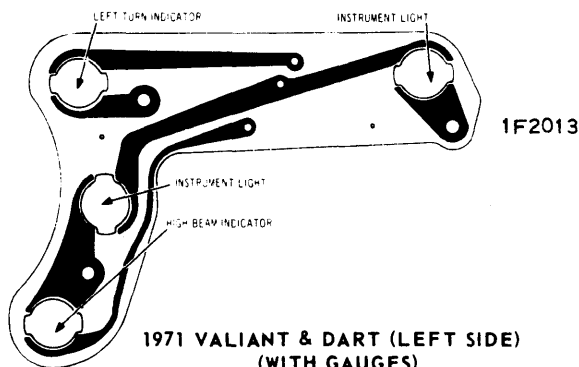

1F2013

1971 VALIANT & DART (LEFT SIDE)
(WITH GAUGES)

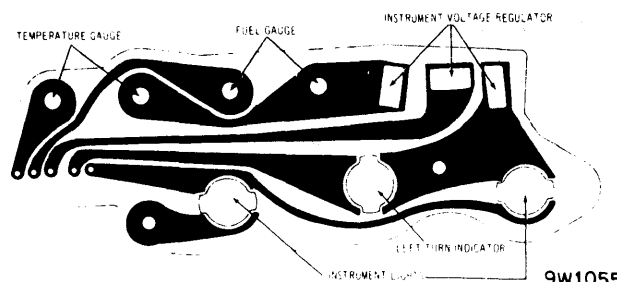

9W1055

1971 DART (LEFT SIDE)