



## CHRYSLER CORP. (Cont.)

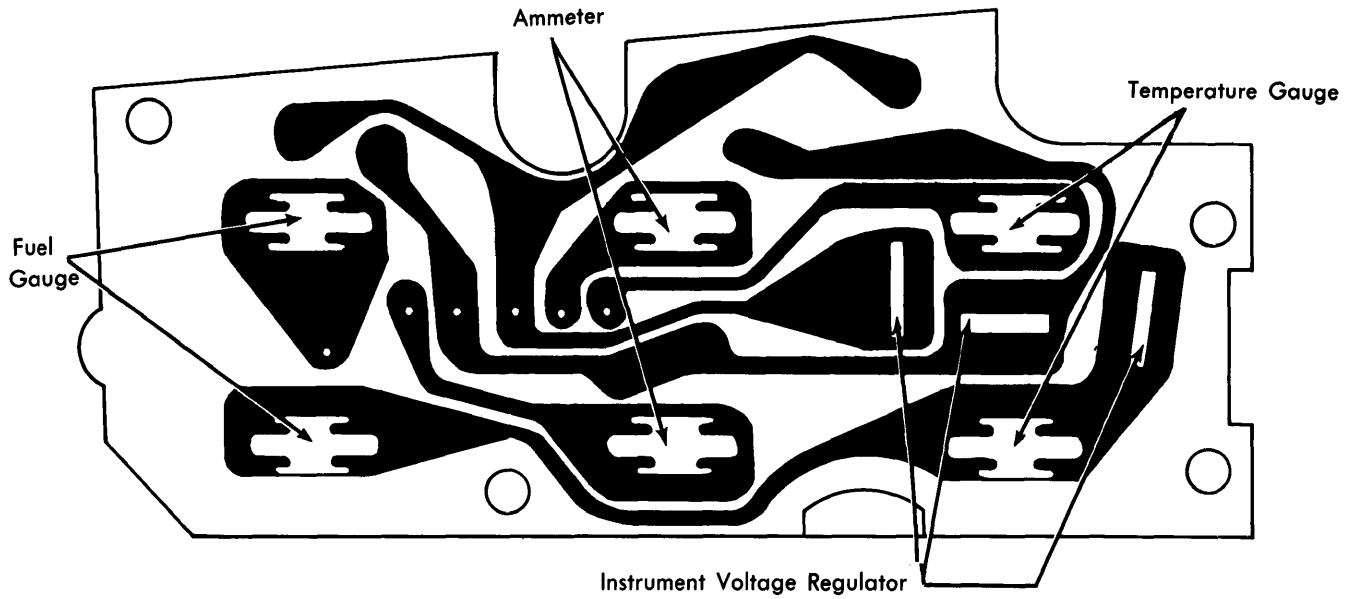


*Chrysler Gauge Cluster*

## FORD MOTOR CO.

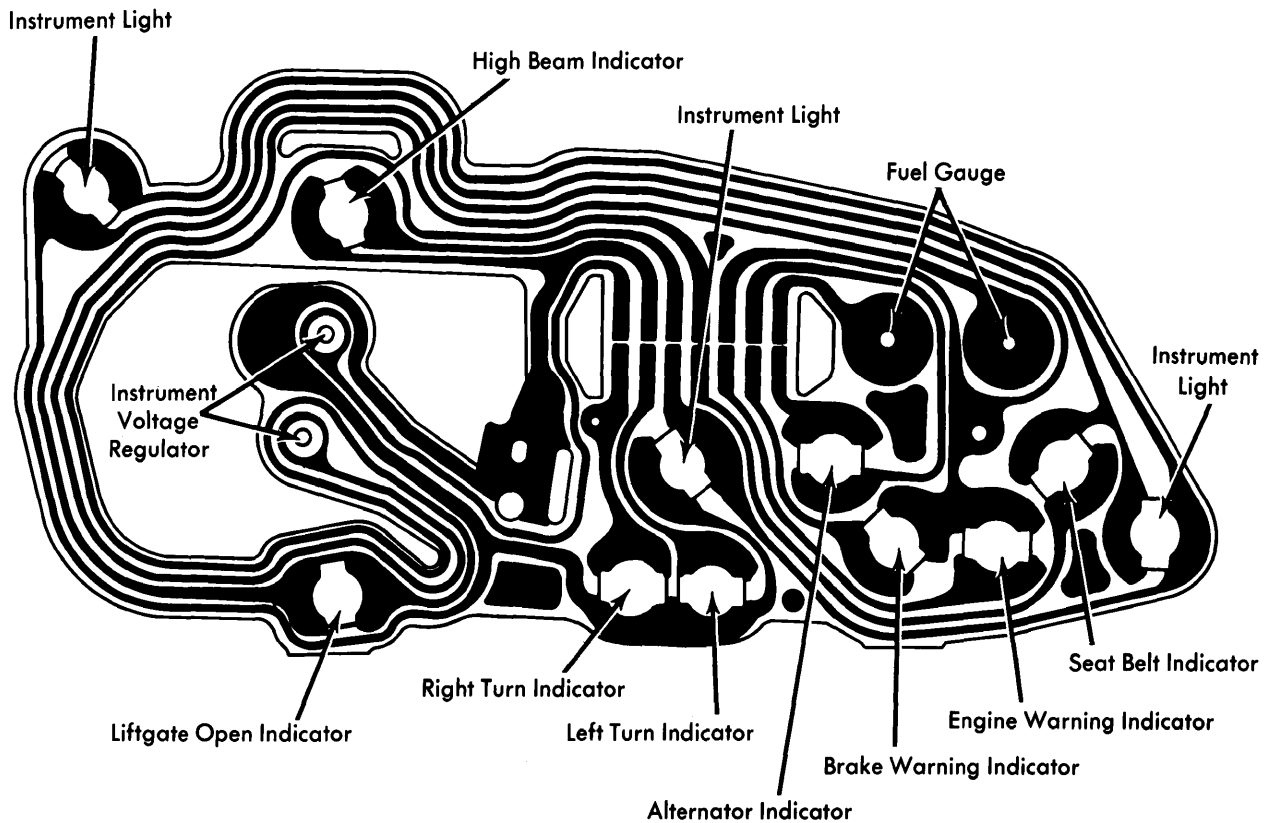


*Pinto and Bobcat without Tachometer — Used on Fuel and Speedometer Instrument Cluster*

## FORD MOTOR CO. (Cont.)

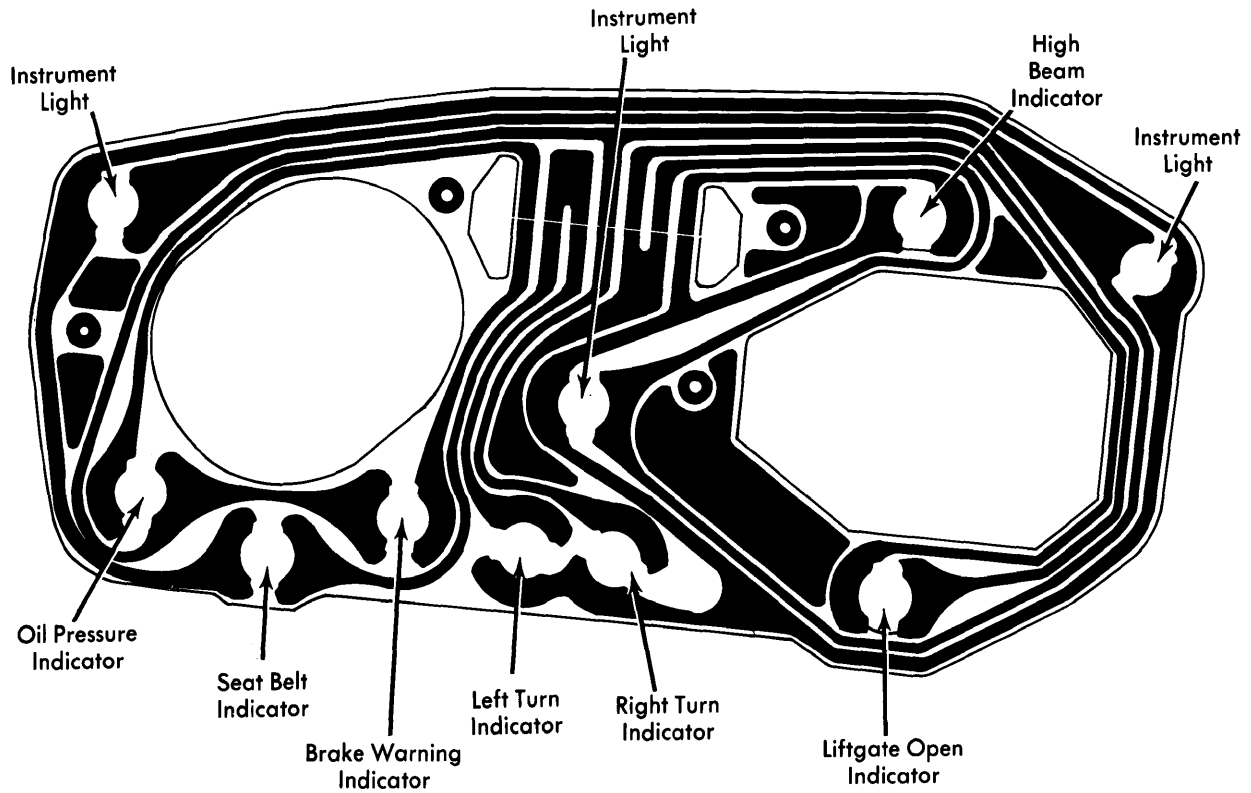

*Pinto and Bobcat with Tachometer — Used on Tachometer and Speedometer Instrument Cluster*

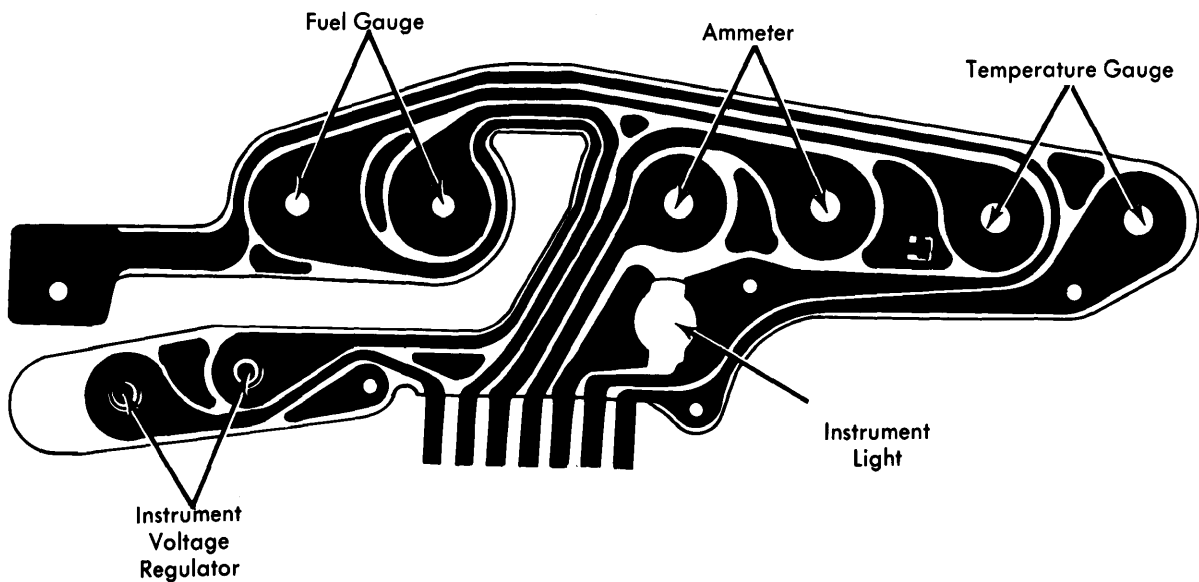

*Pinto and Bobcat with Tachometer — Used on Fuel, Amp, and Temperature Gauge Instrument Cluster*