



1978 Printed Circuits

CHRYSLER CORP.

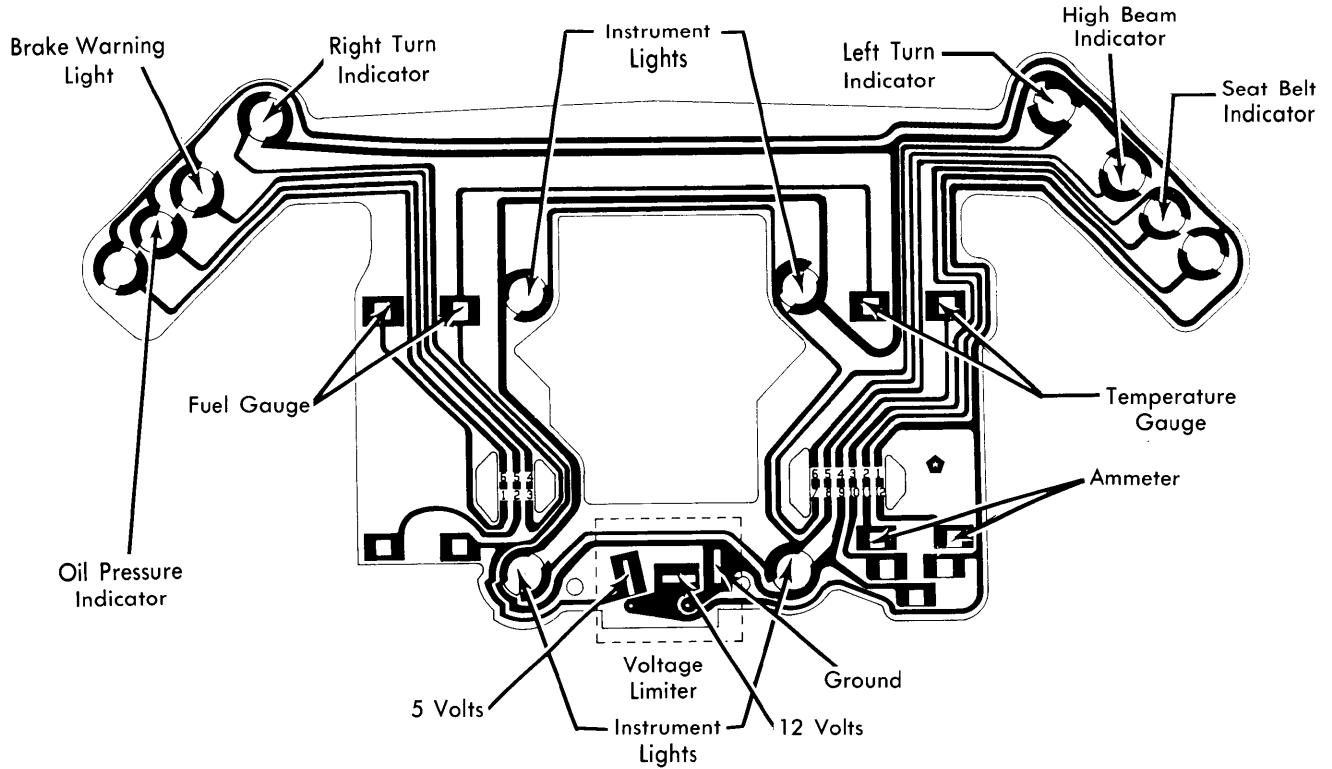


Omni and Horizon Instrument Cluster

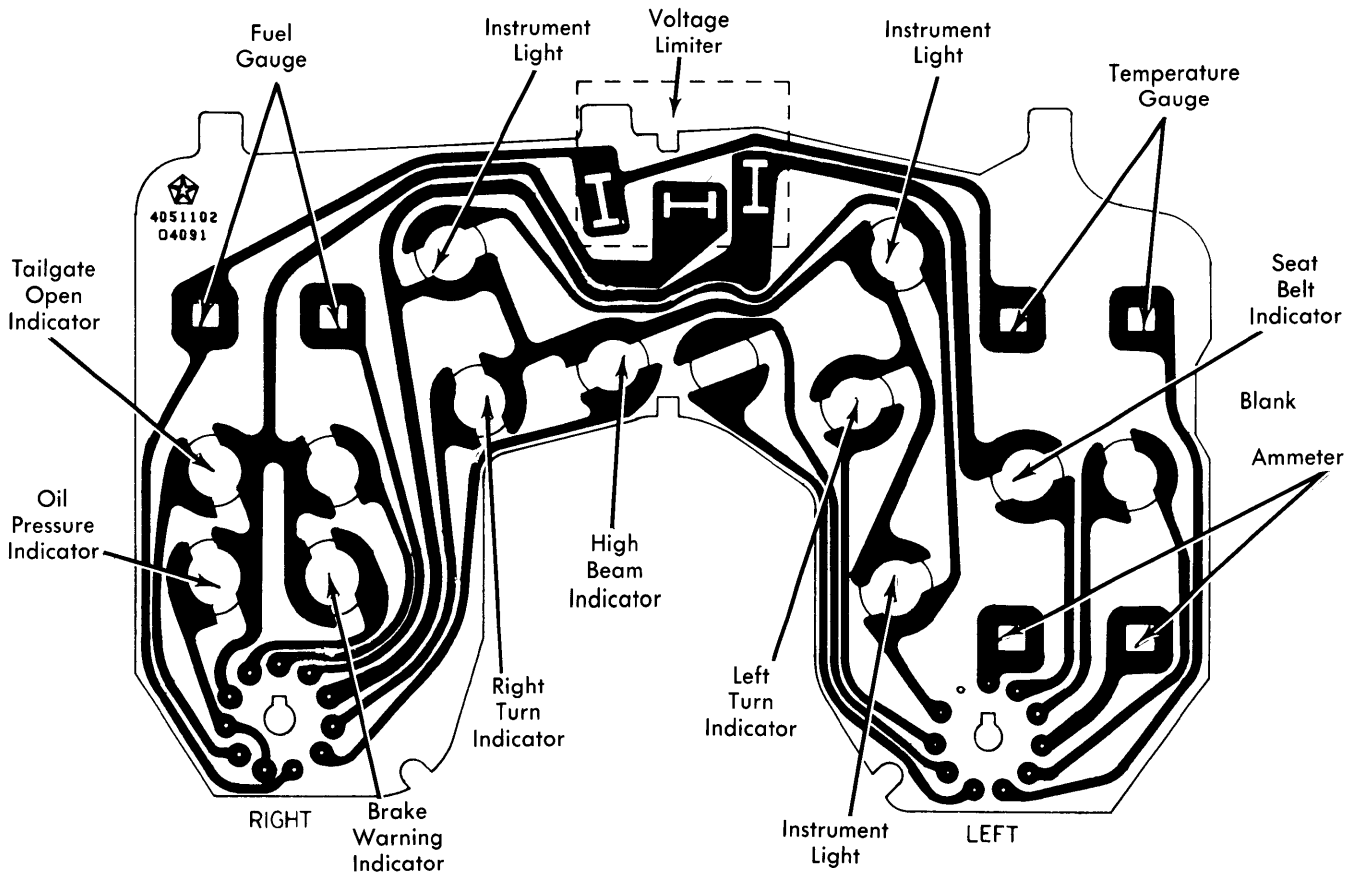


Aspen and Volare Instrument Cluster

CHRYSLER CORP. (Cont.)

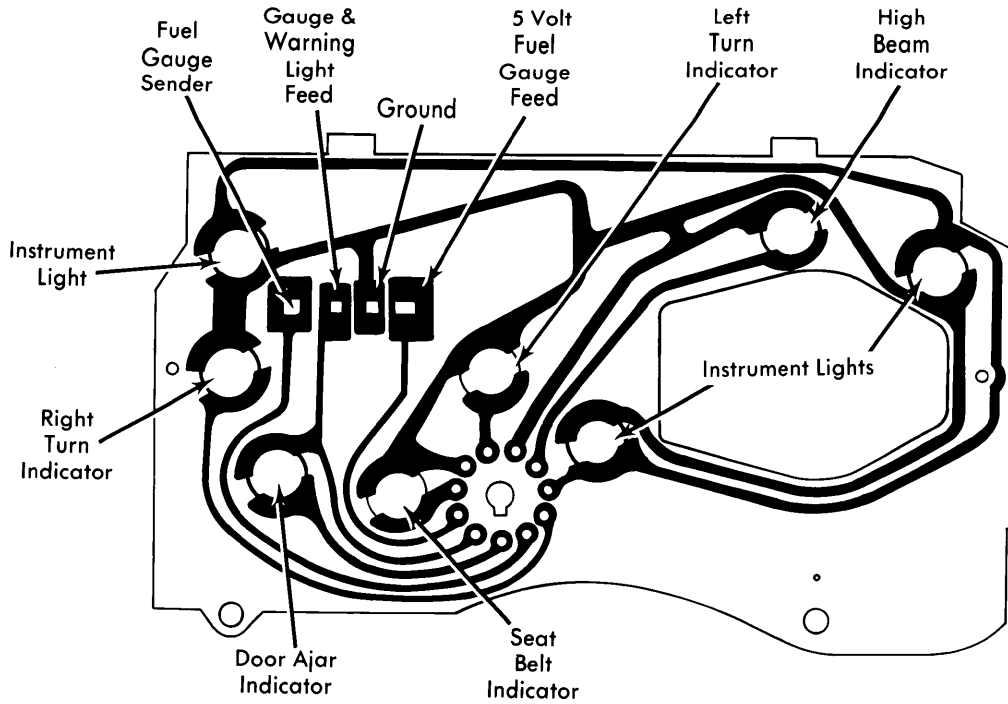


Diplomat and LeBaron Right Side Instrument Cluster

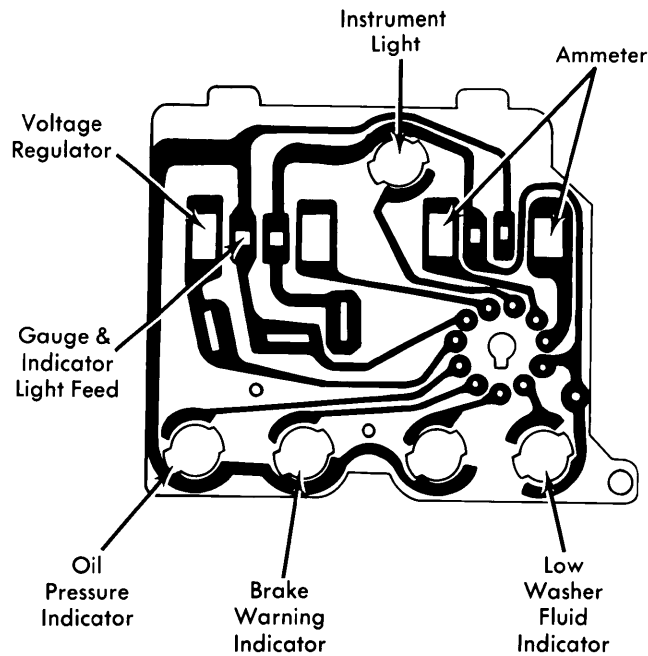


Diplomat and LeBaron Left Side Instrument Cluster

CHRYSLER CORP. (Cont.)

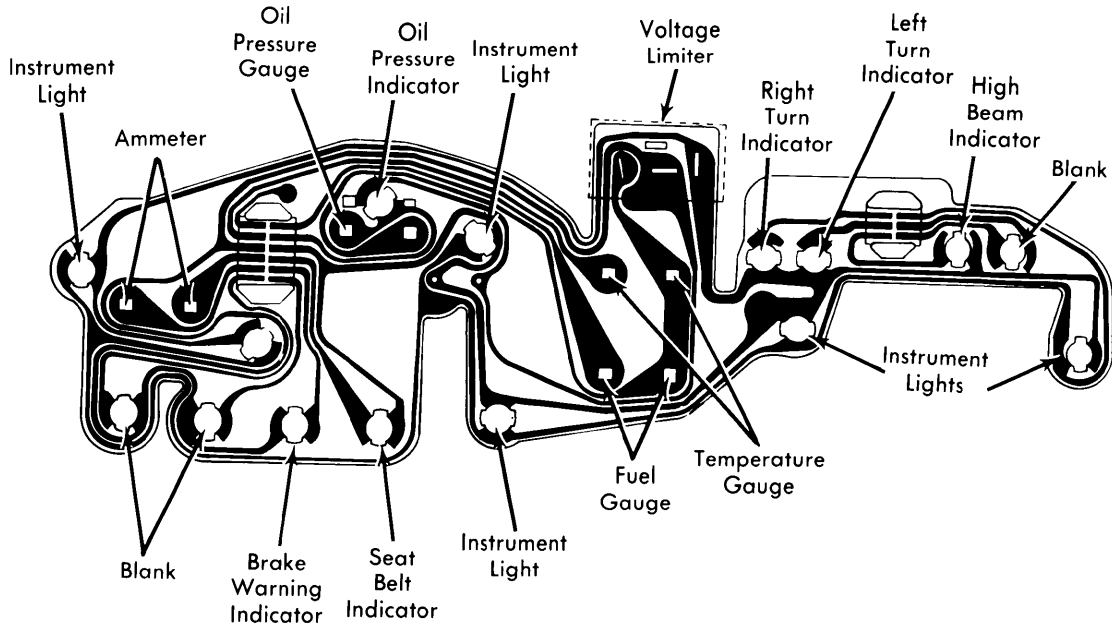


Fury, Monaco, Charger & Cordoba Instrument Cluster without Tachometer

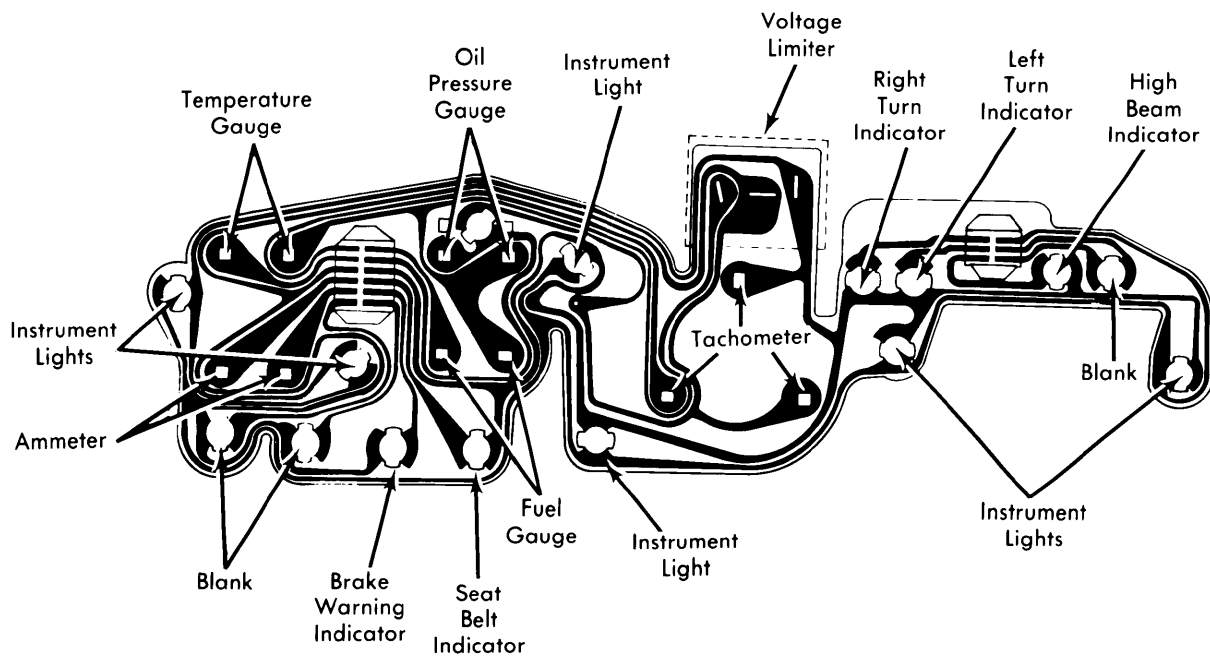


Cordoba and Charger Instrument Cluster with Tachometer

CHRYSLER CORP. (Cont.)

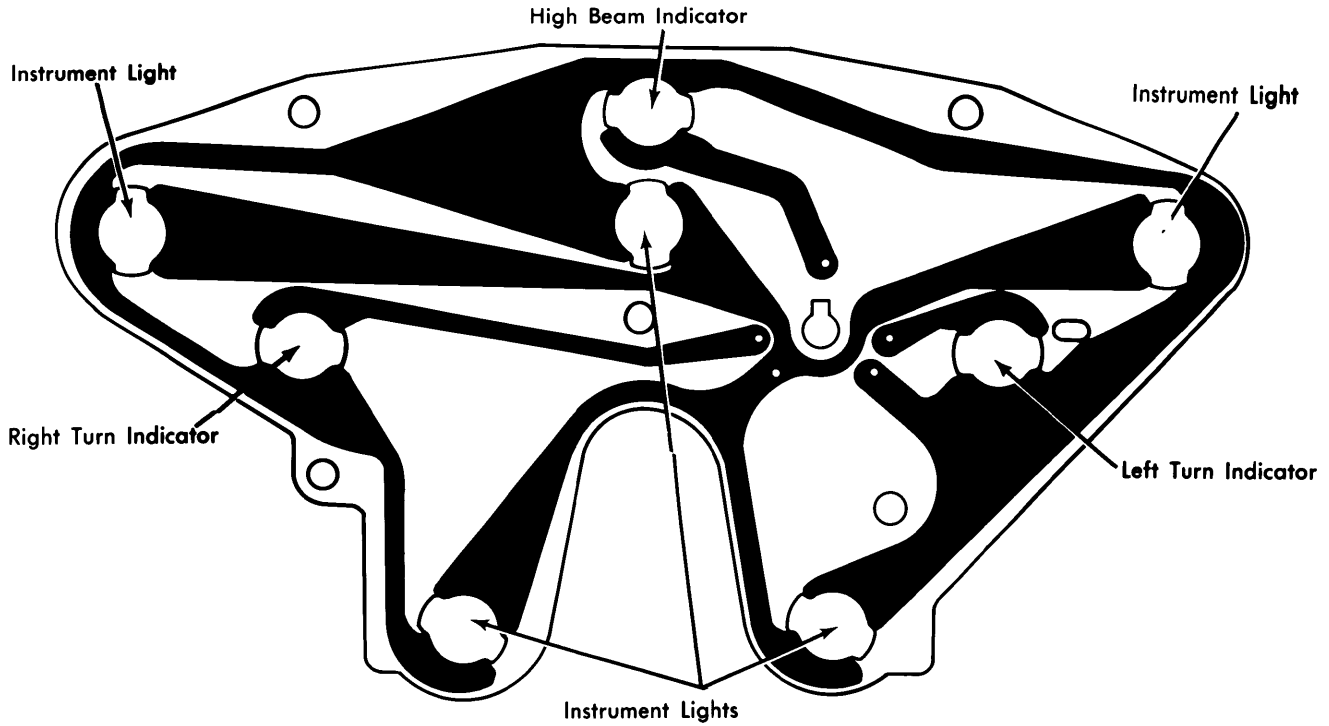


Chrysler Speedometer and Indicator Light Cluster

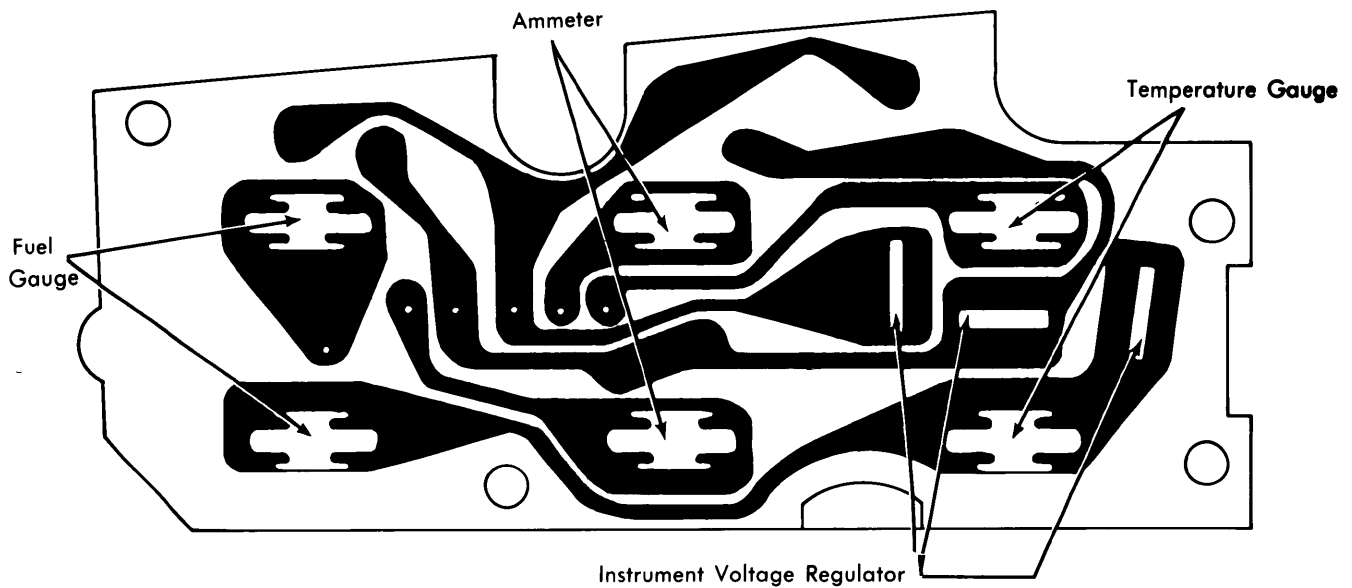


Chrysler Gauge Cluster

FORD MOTOR CO.

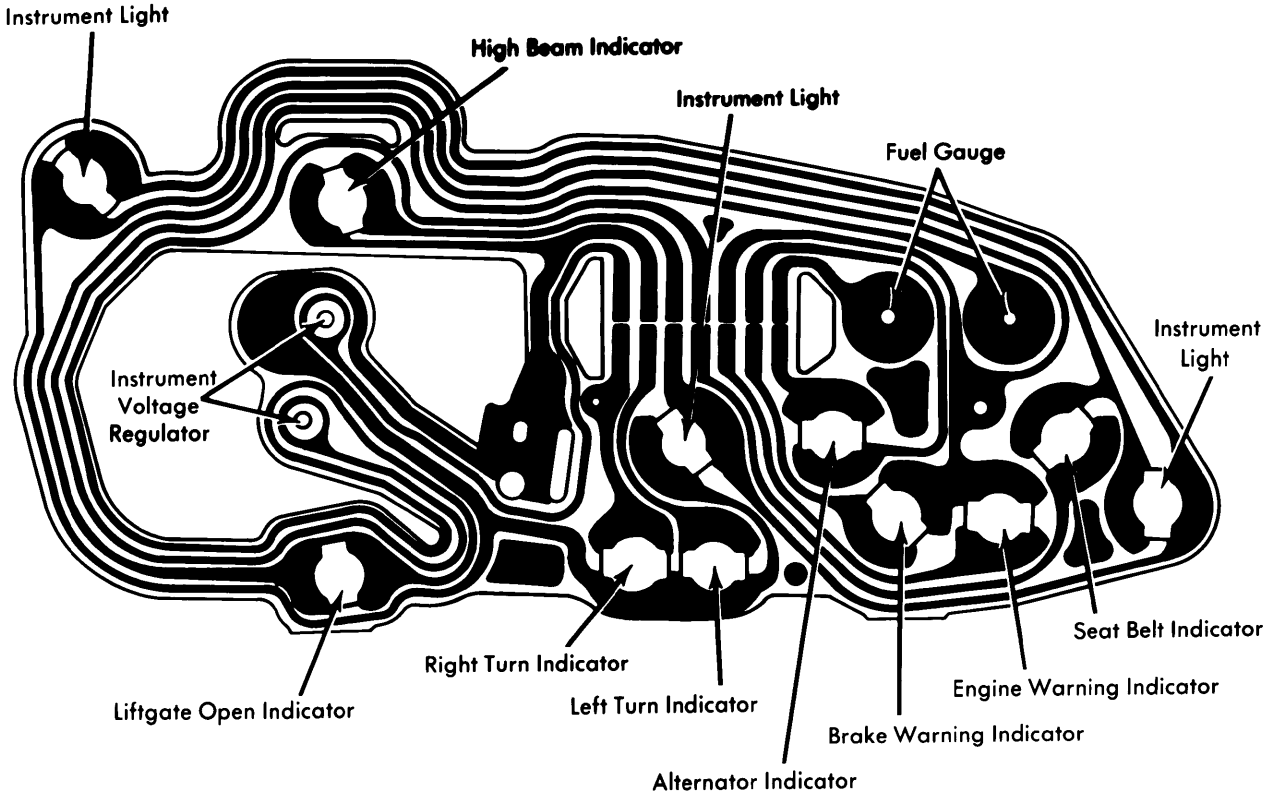

Pinto & Bobcat without Tachometer – Used on Fuel and Speedometer Instrument Cluster

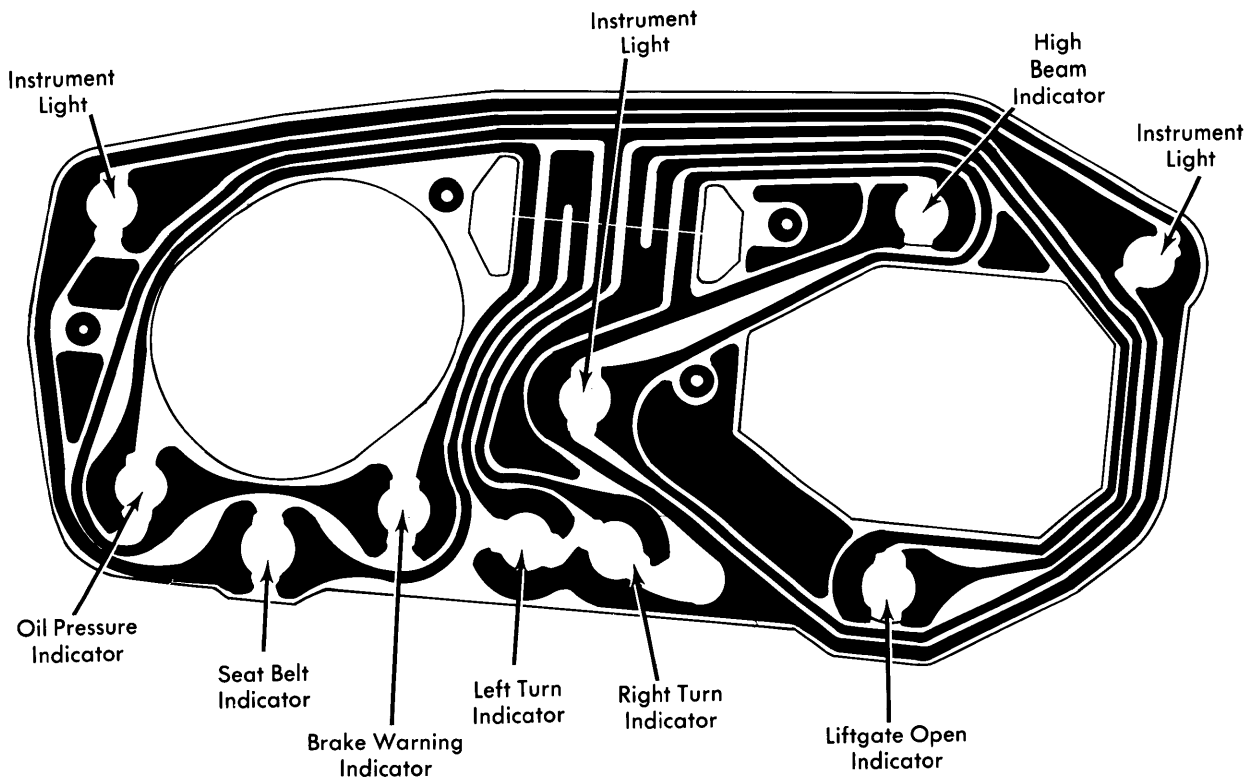

Pinto & Bobcat with Tachometer – Used on Tachometer and Speedometer Instrument Cluster