



FORD MOTOR CO.

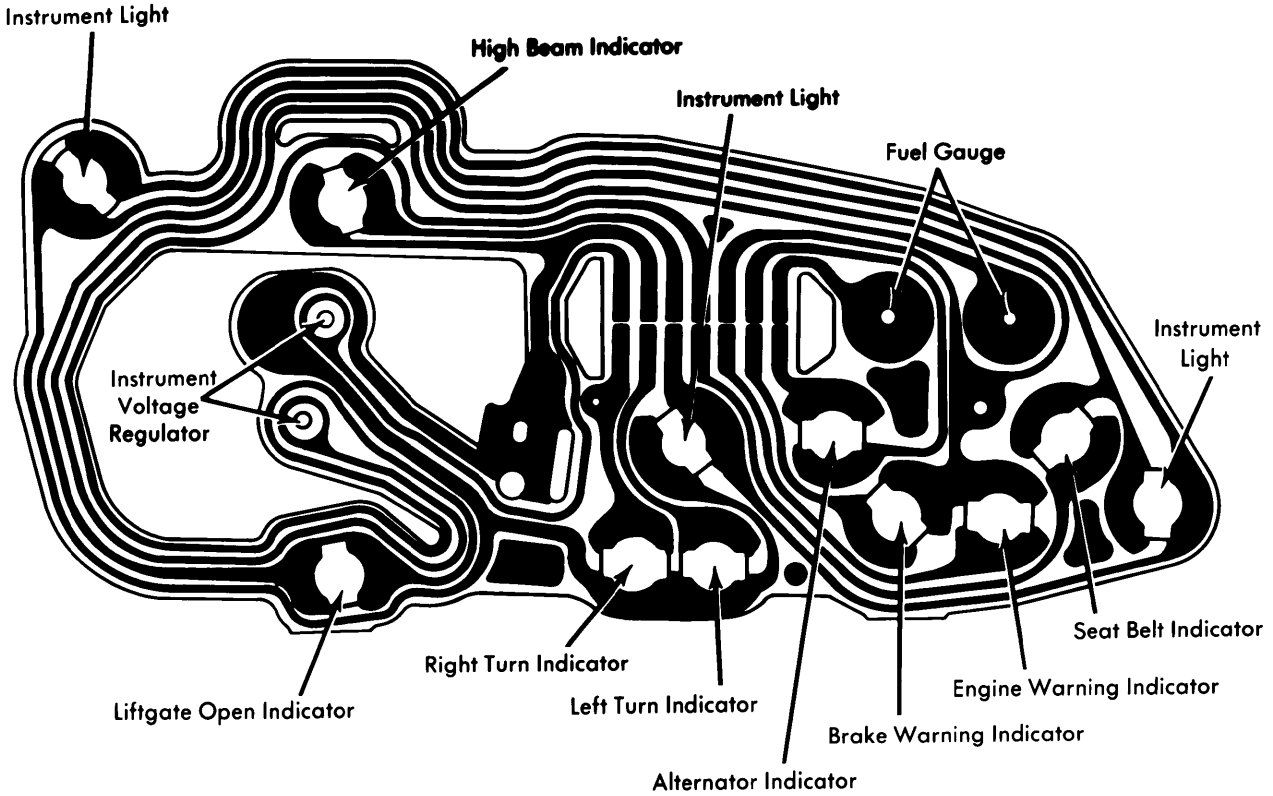


Pinto & Bobcat without Tachometer – Used on Fuel and Speedometer Instrument Cluster

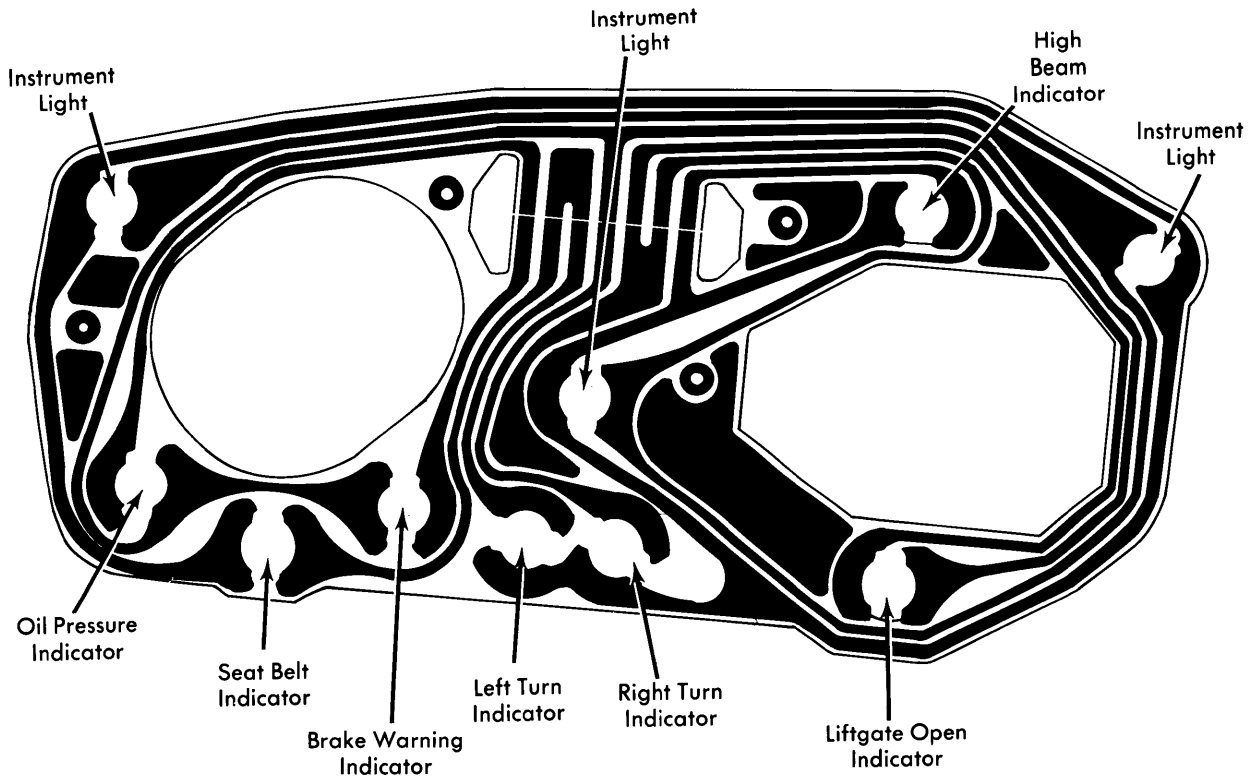


Pinto & Bobcat with Tachometer – Used on Tachometer and Speedometer Instrument Cluster

FORD MOTOR CO. (Cont.)

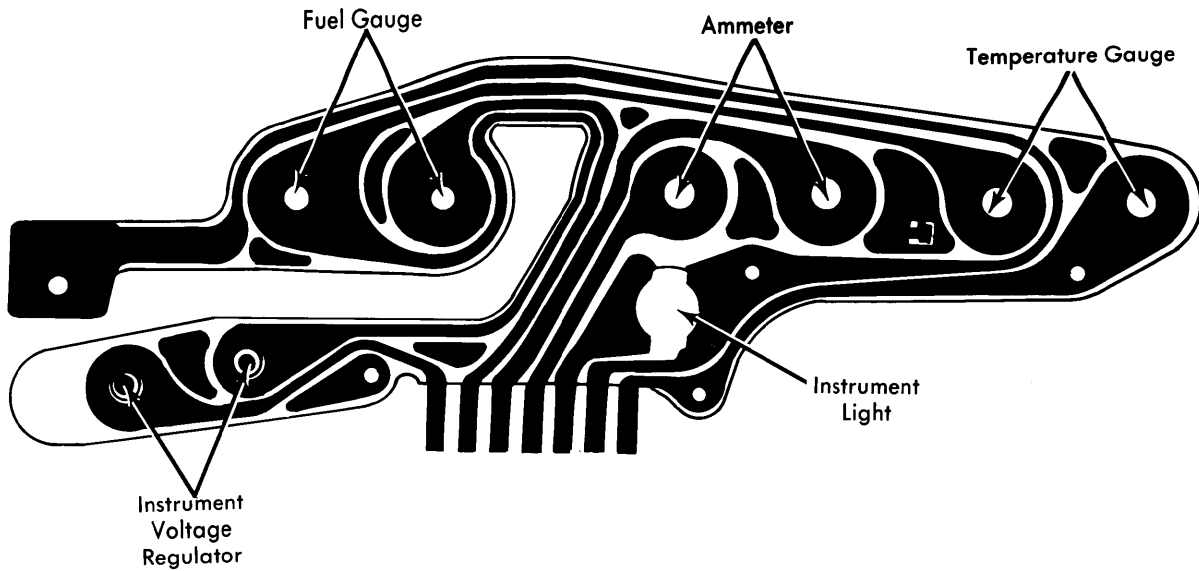


Pinto & Bobcat with Tachometer – Used on Fuel, Amp and Temperature Gauge Instrument Cluster

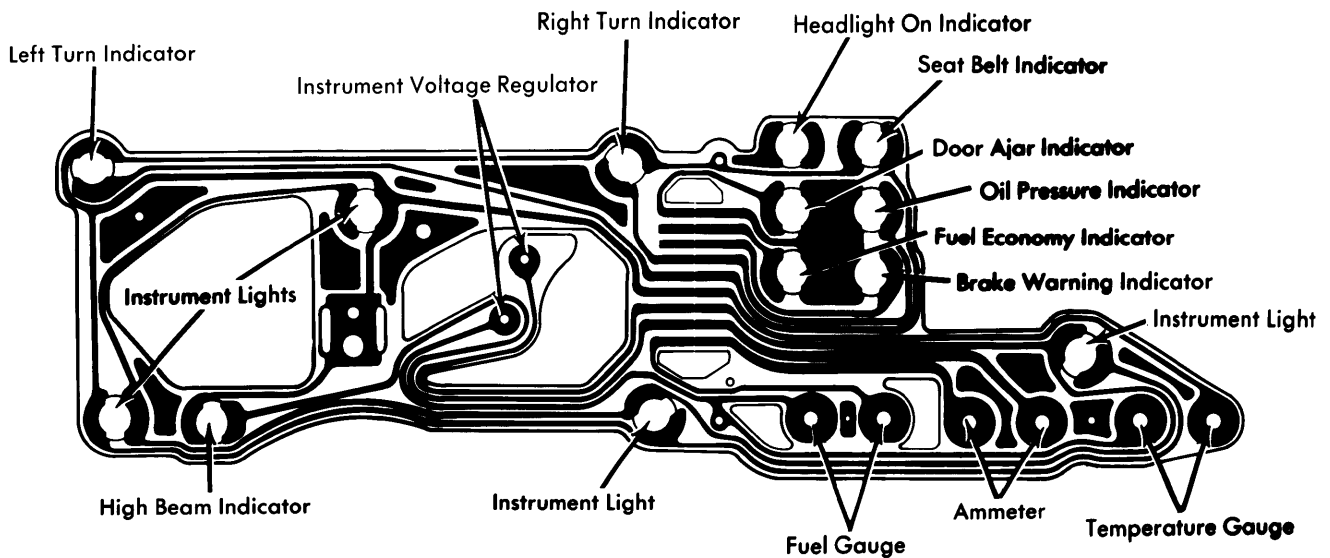


Mustang Instrument Cluster

FORD MOTOR CO. (Cont.)

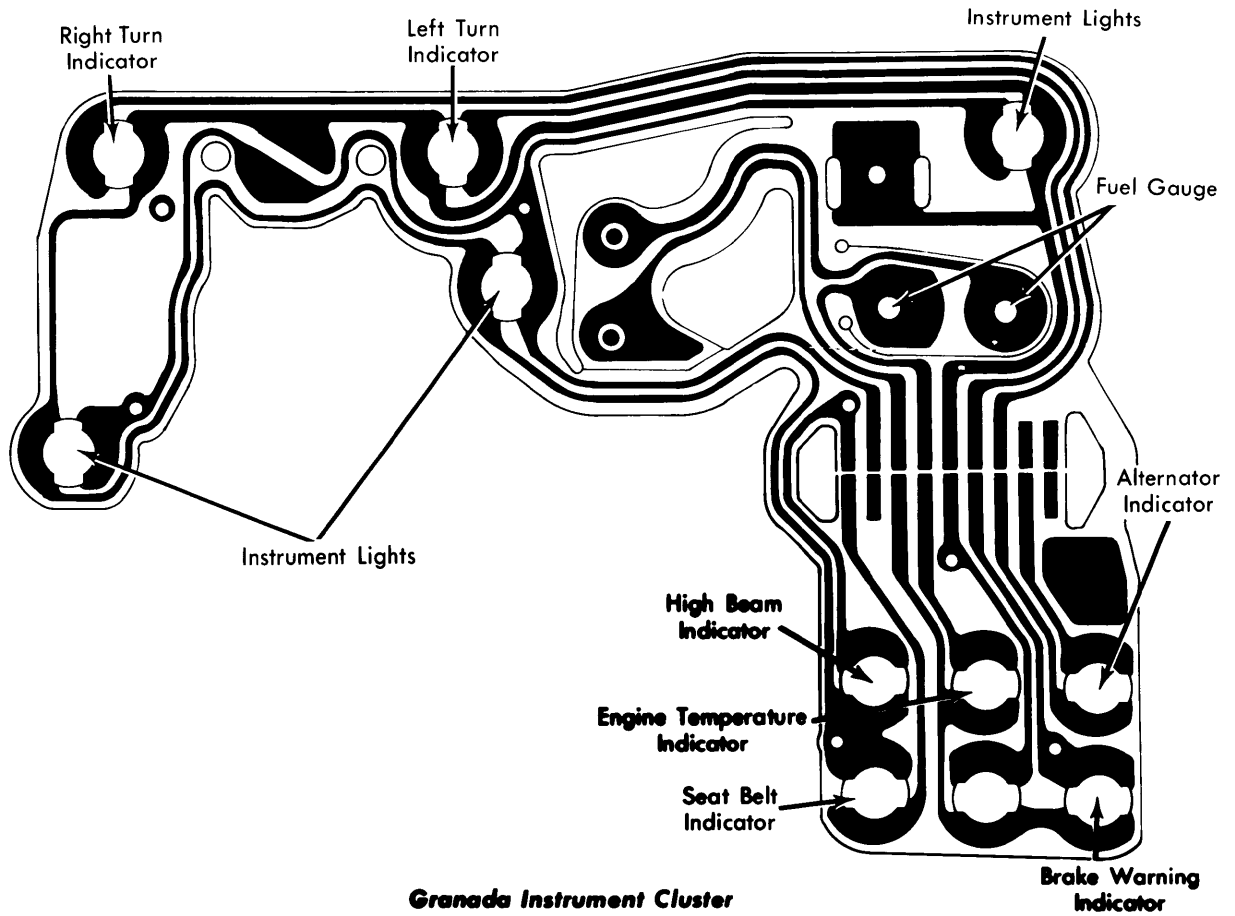


Granada Instrument Cluster

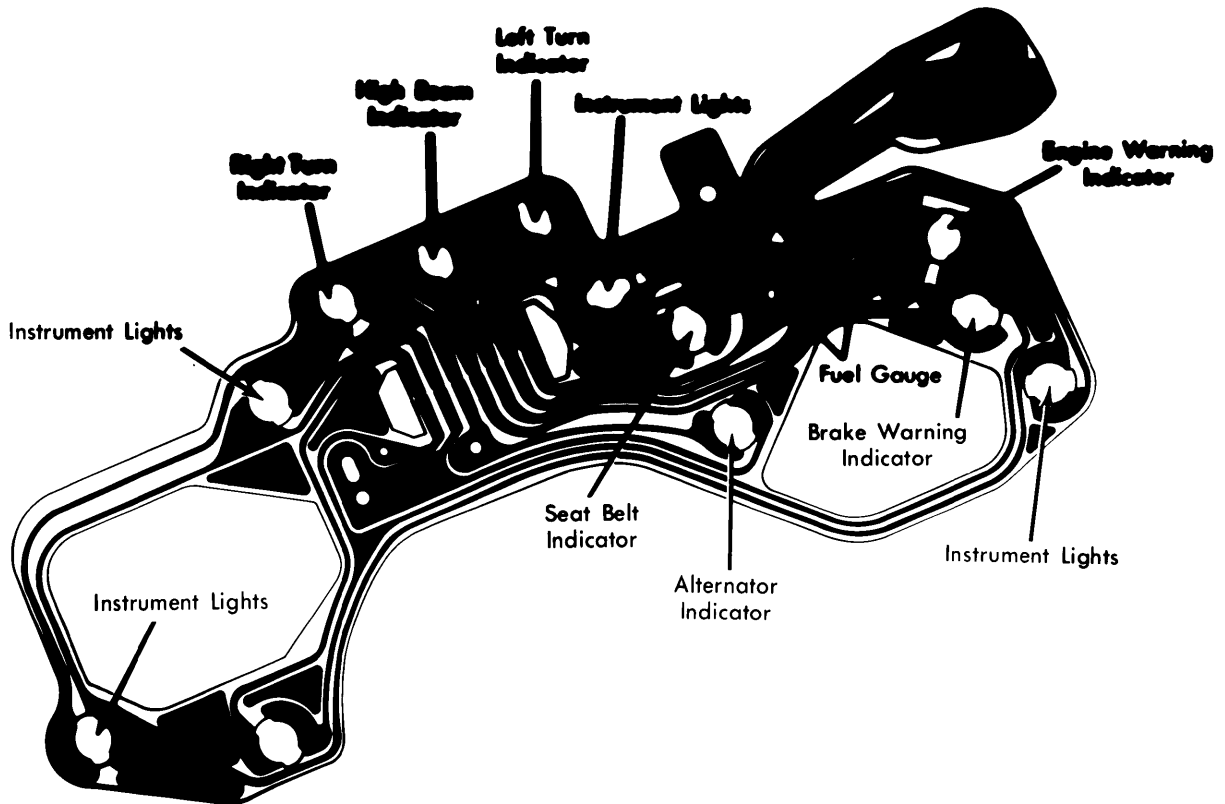


Fairmont and Zephyr Instrument Cluster

FORD MOTOR CO. (Cont.)

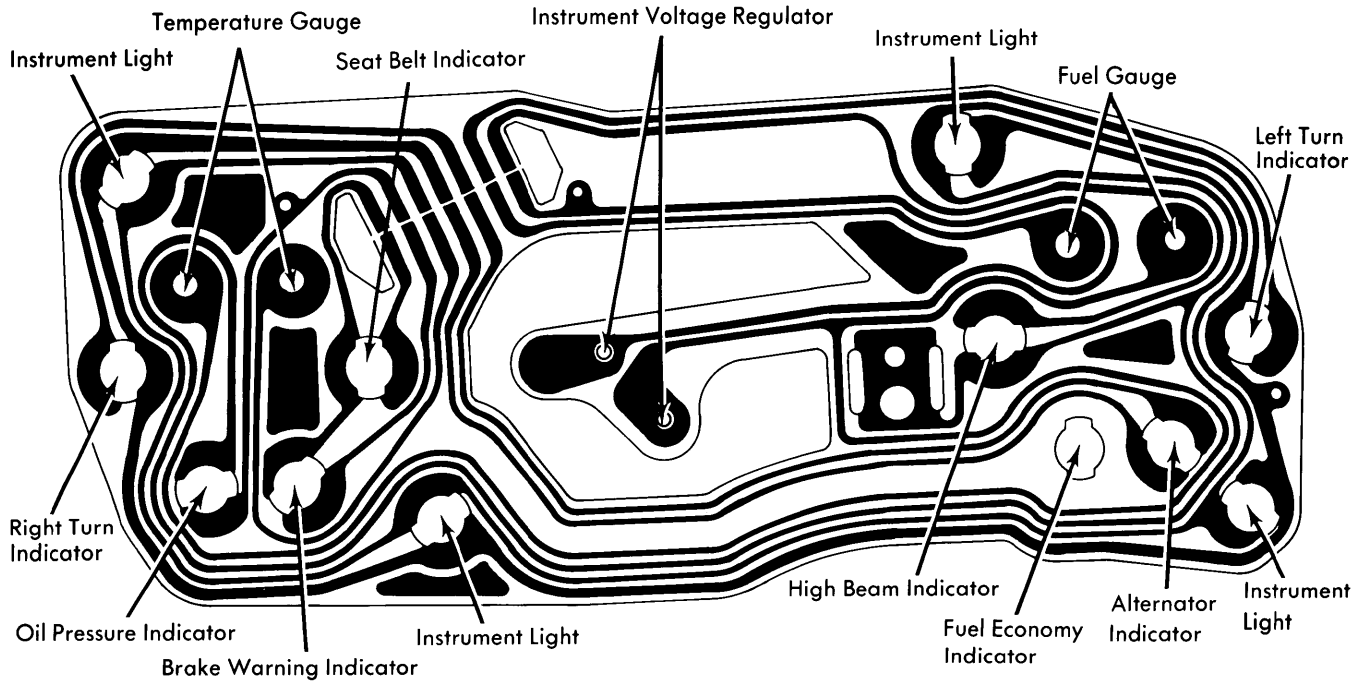


LTD II, Thunderbird, and Cougar Instrument Cluster

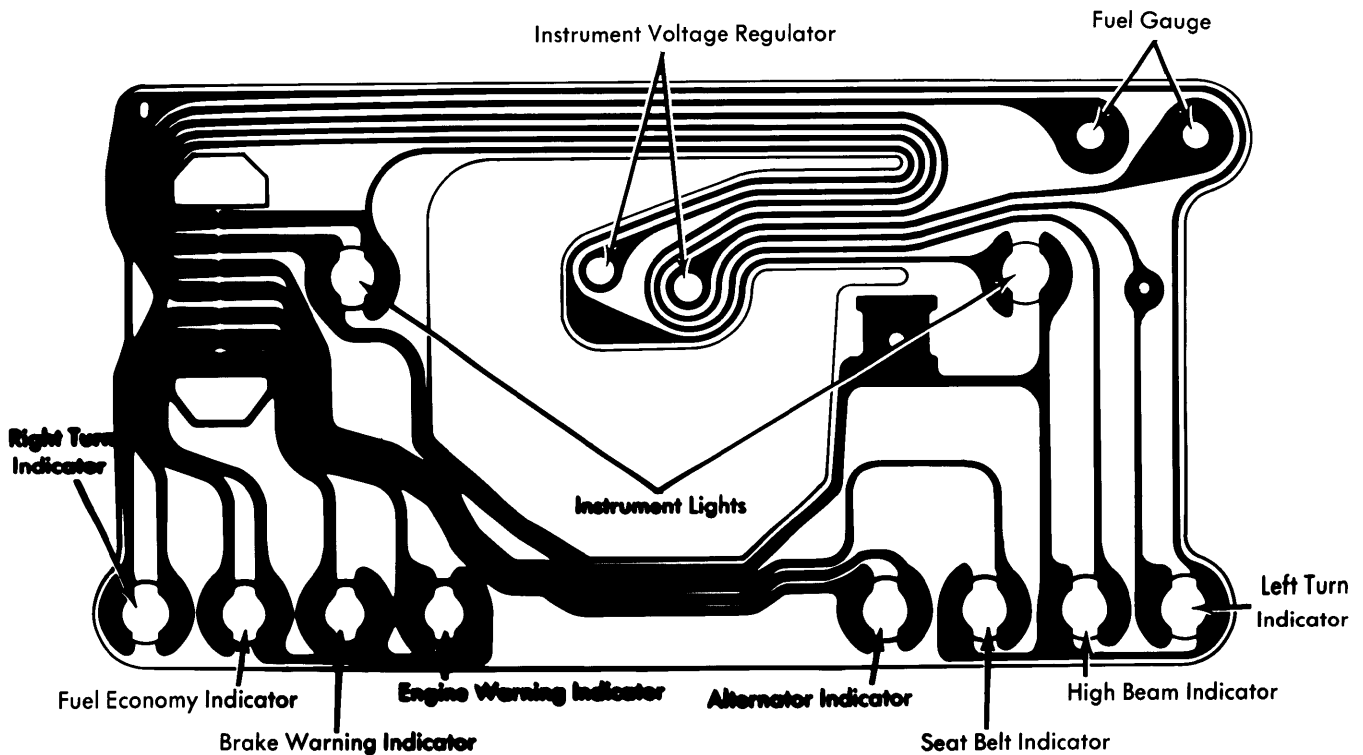

Ford and Mercury Instrument Cluster


1978 Printed Circuits

FORD MOTOR CO. (Cont.)

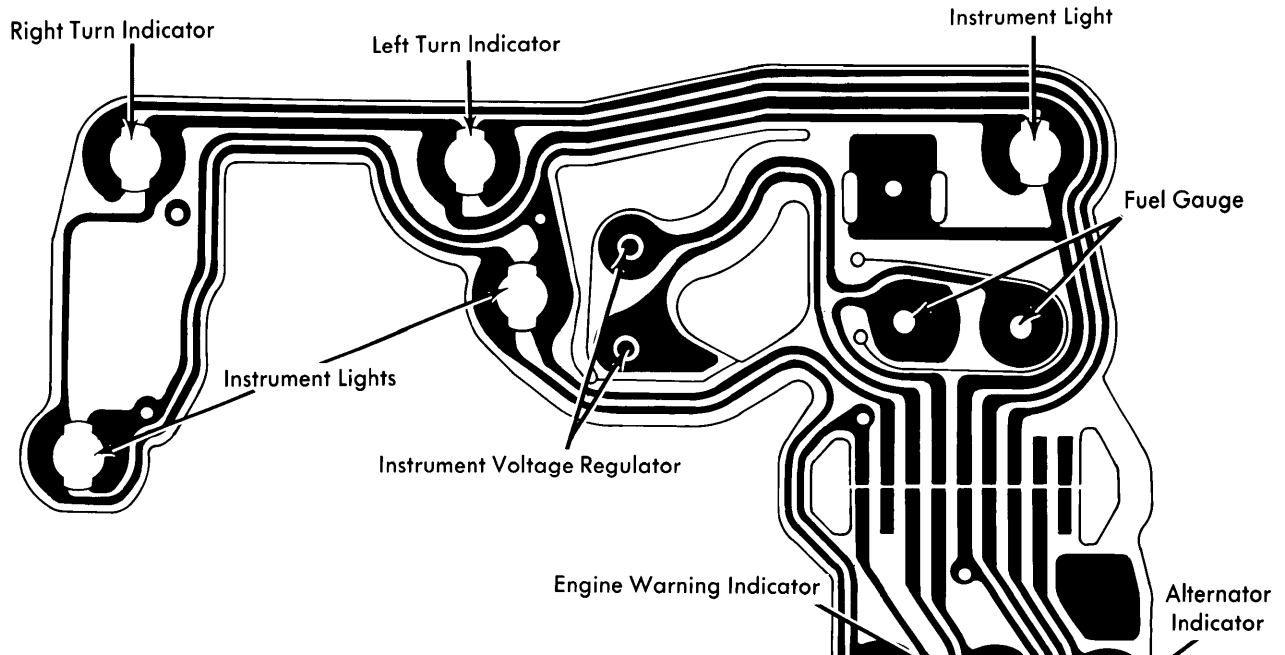


1978 Printed Circuits

FORD MOTOR CO. (Cont.)

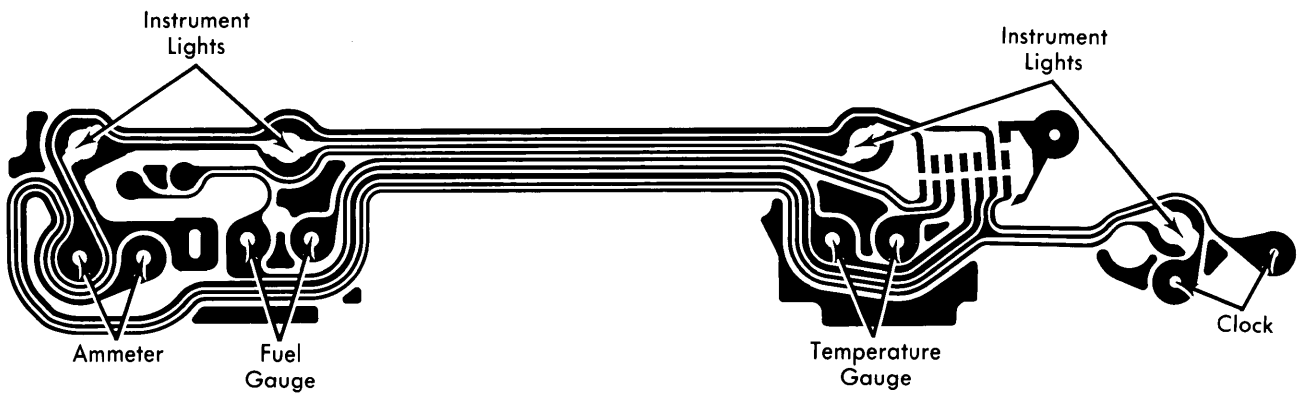


Lincoln Continental Lower Instrument Cluster

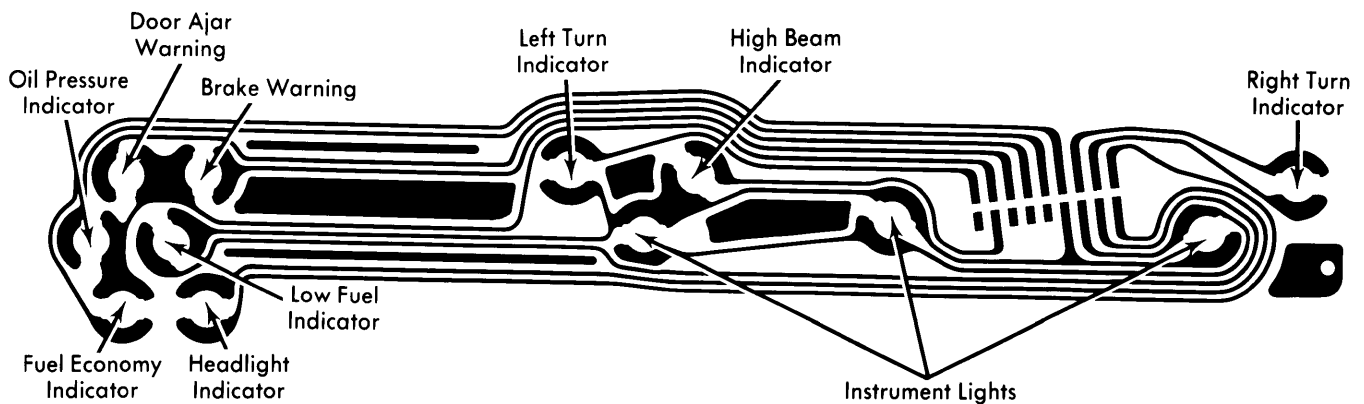


Lincoln Continental Upper (Speedometer) Instrument Cluster

OLDSMOBILE

FORD MOTOR CO. (Cont.)

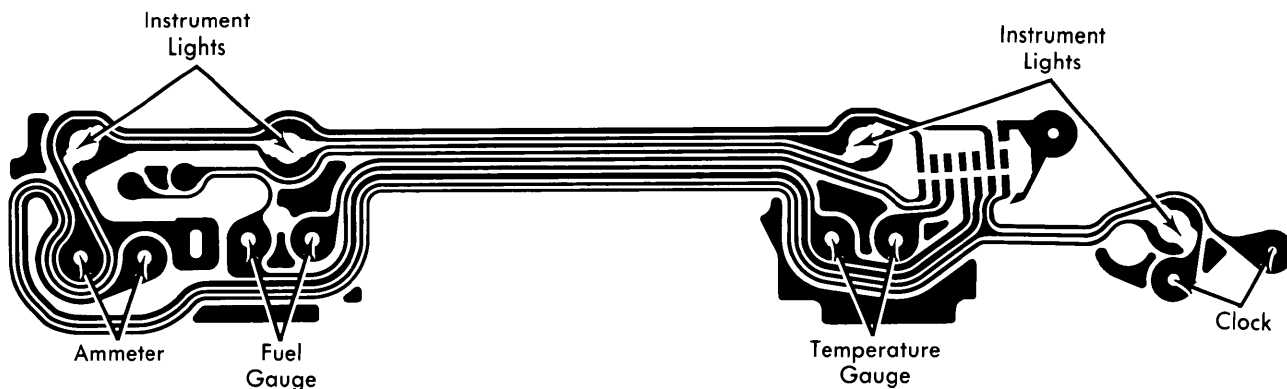


Lincoln Continental Lower Instrument Cluster

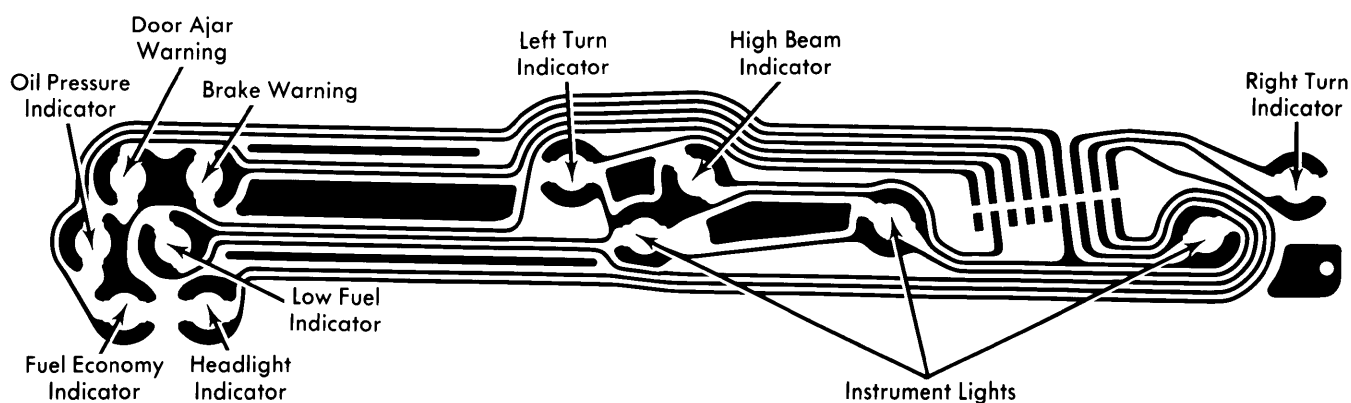

Lincoln Continental Upper (Speedometer) Instrument Cluster

OLDSMOBILE

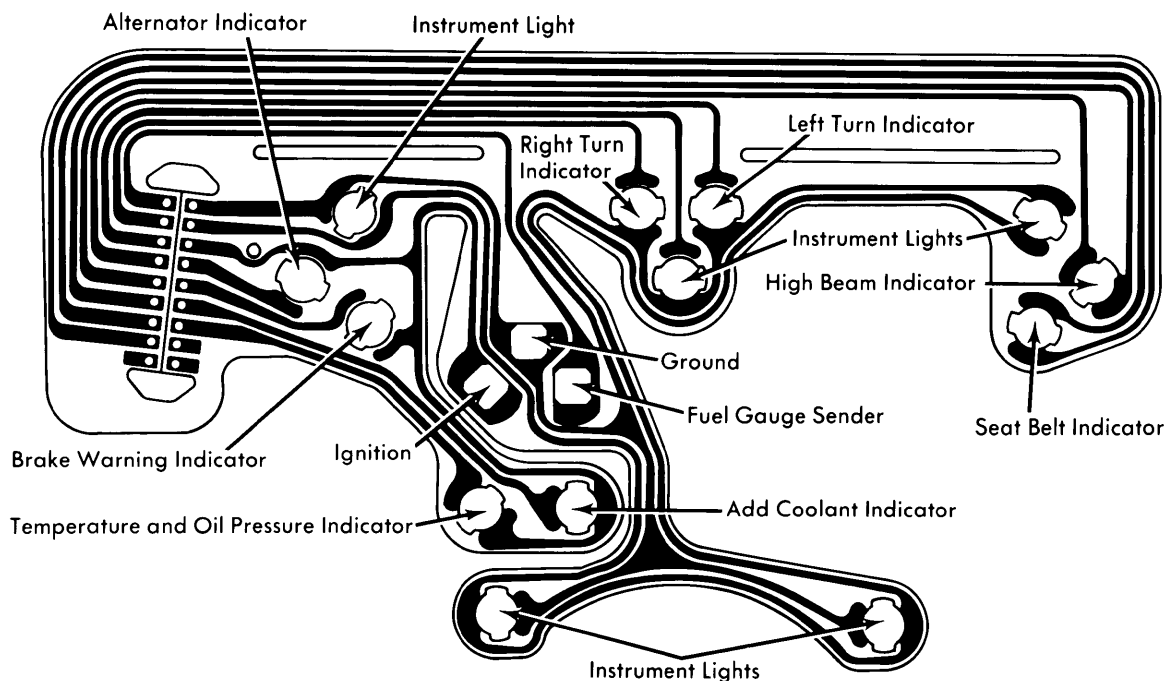

Starfire Instrument Cluster with Indicator Lights