

# Fuses & Circuit Breakers

## COLT (Cont.)

- 3 - 15 Amp. Stop Lights and Horn.
- 4 - 15 Amp. Cigarette Lighter.
- 5 - 15 Amp. Hazard Warning Flasher and Indicator.
- 6 - 5 Amp. Instrument Lights, Front Parking and Side Marker Lights.
- 7 - 10 Amp. Tail, License and Rear Marker Lights.
- 8 - 10 Amp. Right Hand High Beam and High Beam Indicator.
- 9 - 10 Amp. Left Hand High Beam.
- 10 - 15 Amp. Windshield Wiper and Washer Motors.
- 11 - 15 Amp. Turn Signals, Indicator Lights, Back-Up Lights, Gauges, Seat Belt Warning System, Ignition Coil and Fuel Cut Solenoid.

- 12 - 10 Amp. Heater, Voltage Regulator, Shift Indicator and Defogger.
- 13 - 10 Amp. Right Hand Low Beam.
- 14 - 10 Amp. Left Hand Low Beam.

### FUSIBLE LINK

**1971-72 Models** - A fusible link is installed between the battery and wiring harness and contains two separate circuit fuses in one replaceable unit. Light and ignition switch circuits are fused independently with the fusible link. Fusible link is located near battery in engine compartment.


## CORTINA

### FUSE BLOCK

**1968-70 Models** - Fuse block is located under hood and is covered with a transparent shield. Fuse block contains six fuses.

### 1968-70 MODELS

- 1 - 8 Amp. Right High Beam.
- 2 - 8 Amp. Left High Beam.
- 3 - 8 Amp. Right Low Beam.
- 4 - 8 Amp. Left Low Beam.
- 5 - 8 Amp. Right Parking, Side Marker, Tail, and Stop Lights.
- 6 - 8 Amp. Left Parking, Side Marker, Tail, and Stop Lights.

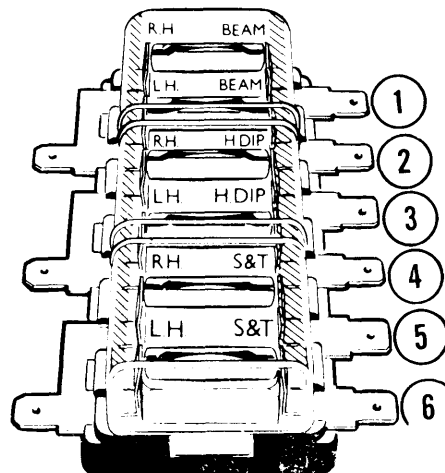

1968-70 CORTINA FUSE BLOCK

### IN-LINE FUSE

**Back-Up Lights** - Lights are protected by a 10 amp. in-line fuse.


## COURIER

### FUSE BLOCK

**1972-73 Models** - Fuse block is located under hood on left rear side of engine compartment. Block contains six fuses. Circuits protected by fuses are, from front to rear:

### 1972-73 MODELS

- 1 - 10 Amp. Heater.
- 2 - 15 Amp. Engine.
- 3 - 15 Amp. Windshield Wiper and Washer.
- 4 - 15 Amp. Gauges, Indicator Lights and Back-Up Lights.
- 5 - 20 Amp. Headlights, Front Parking, Turn Signals, & Side Marker Lights, Interior Lights, and Instrument Lights.
- 6 - 15 Amp. Horn, Hazard Flasher, Turn Signal Flasher, Stop Lights, Turn Signal Indicator, Rear Parking, Turn Signal & Side Marker Lights, Tail Lights and License Plate Lights.

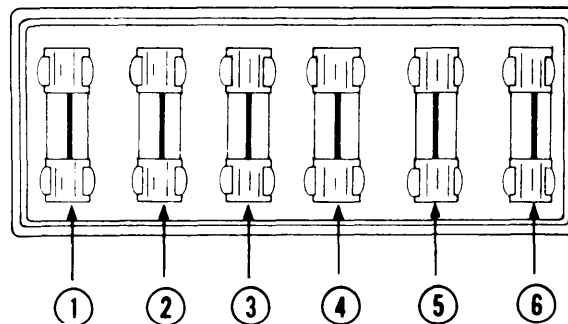

2CU05

1972-73 COURIER FUSE BLOCK

### IN-LINE FUSES

**1973 Models** - A large master in-line fuse is located on left side of firewall near battery.