

# Fuses & Circuit Breakers

## Jeep

### CIRCUIT BREAKERS

All models have a 15 amp. headlight and parking light circuit located in the headlight switch. The "C" and "K" models each have two 30 amp. circuit breakers; one circuit is to protect the tailgate window motor and the other protects the power windows. All models have the windshield wiper motor protected by a circuit breaker in addition to a fuse. The Van models have included a 35 amp. rear air conditioner circuit breaker located in the dash.

### IN-LINE FUSES

In-line fuses protect the engine compartment light and rear air conditioner circuits in all "C" and "K" models. In-line fuses are also located in the auxiliary heater circuits of all models.

### FUSIBLE LINKS

Fusible links have been used in the circuit headlight high-beam indicator, horn, air conditioner high blower and ignition circuits on all "C", "K" and "P" models. The "C" and "K" models also use fusible links to protect the starter solenoid circuit.

### FLASHER LOCATION

#### Hazard Flasher

On all models, the hazard flasher is located on the fuse block.

#### Turn Signal

On all models, the turn signal flasher is located behind the instrument panel near the steering column.

## FUSE BLOCK

### FUSE BLOCK LOCATION

#### All Models


On all Jeep models, the fuse block is located under the instrument panel on the driver's side of the vehicle.

### FUSE BLOCK CIRCUITS

#### "CJ", Cherokee, Scrambler, Wagoneer and Truck Models

- 1 — 20 amp.<sup>1</sup> Windshield wipers.
  - 2 — 15 amp. Turn signals.
  - 3 — 10 amp. Accessories.
  - 4 — 3 amp. Instrument and accessory lights.
  - 5 — 20 amp. Interior lights.
  - 6 — 20 amp. Brake, tail and parking lights.
  - 7 — 25 amp. Air conditioner, heater and electric fan.
  - 8 — 3 amp. Instruments.
  - 9 — 25 amp.<sup>2</sup> Seat belt warning and back-up lights.
  - 10 — 20 amp. Hazard flasher, clock and stop lights.
- 1 — "CJ" and Scrambler models have 4.5 amp. windshield wipers.
- 2 — Fuse No. 9 is 10 amp. on "CJ" and Scrambler 6-cyl. models and 20 amp. on 4-cyl. models.

Fig. 1: Fuse Block of all Jeep Models

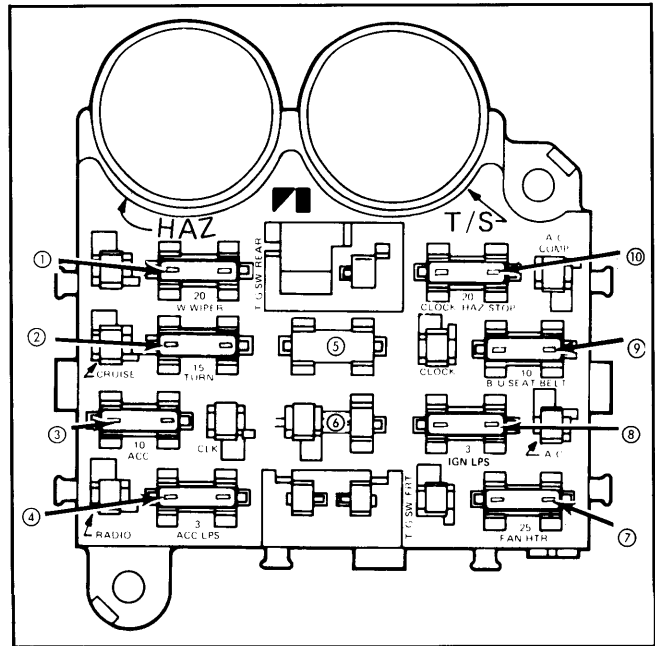

Fuse block is located under instrument panel on driver's side.

### CIRCUIT BREAKERS

A 24 amp. circuit breaker is located in the headlight switch to protect headlight circuit. Cherokee and Wagoneer models have two 30 amp. circuit breakers located in the fuse block to protect the electric tailgate window. One circuit breaker protects the instrument panel switch and the other protects the tailgate switch.

### IN-LINE FUSES

The 6-cyl. models have a 4 amp. in-line fuse protecting the cruise control. The V8 models have a 1.5 amp. in-line fuse protecting the cruise control.

### FUSIBLE LINKS

All Jeep models are equipped with fusible links, located in the engine compartment, which protect the circuits.

### FLASHER LOCATION

#### Hazard Flasher

The flasher is located on the fuse block on all models.

#### Turn Signal Flasher

Turn signal flasher is located on the fuse block on all models.