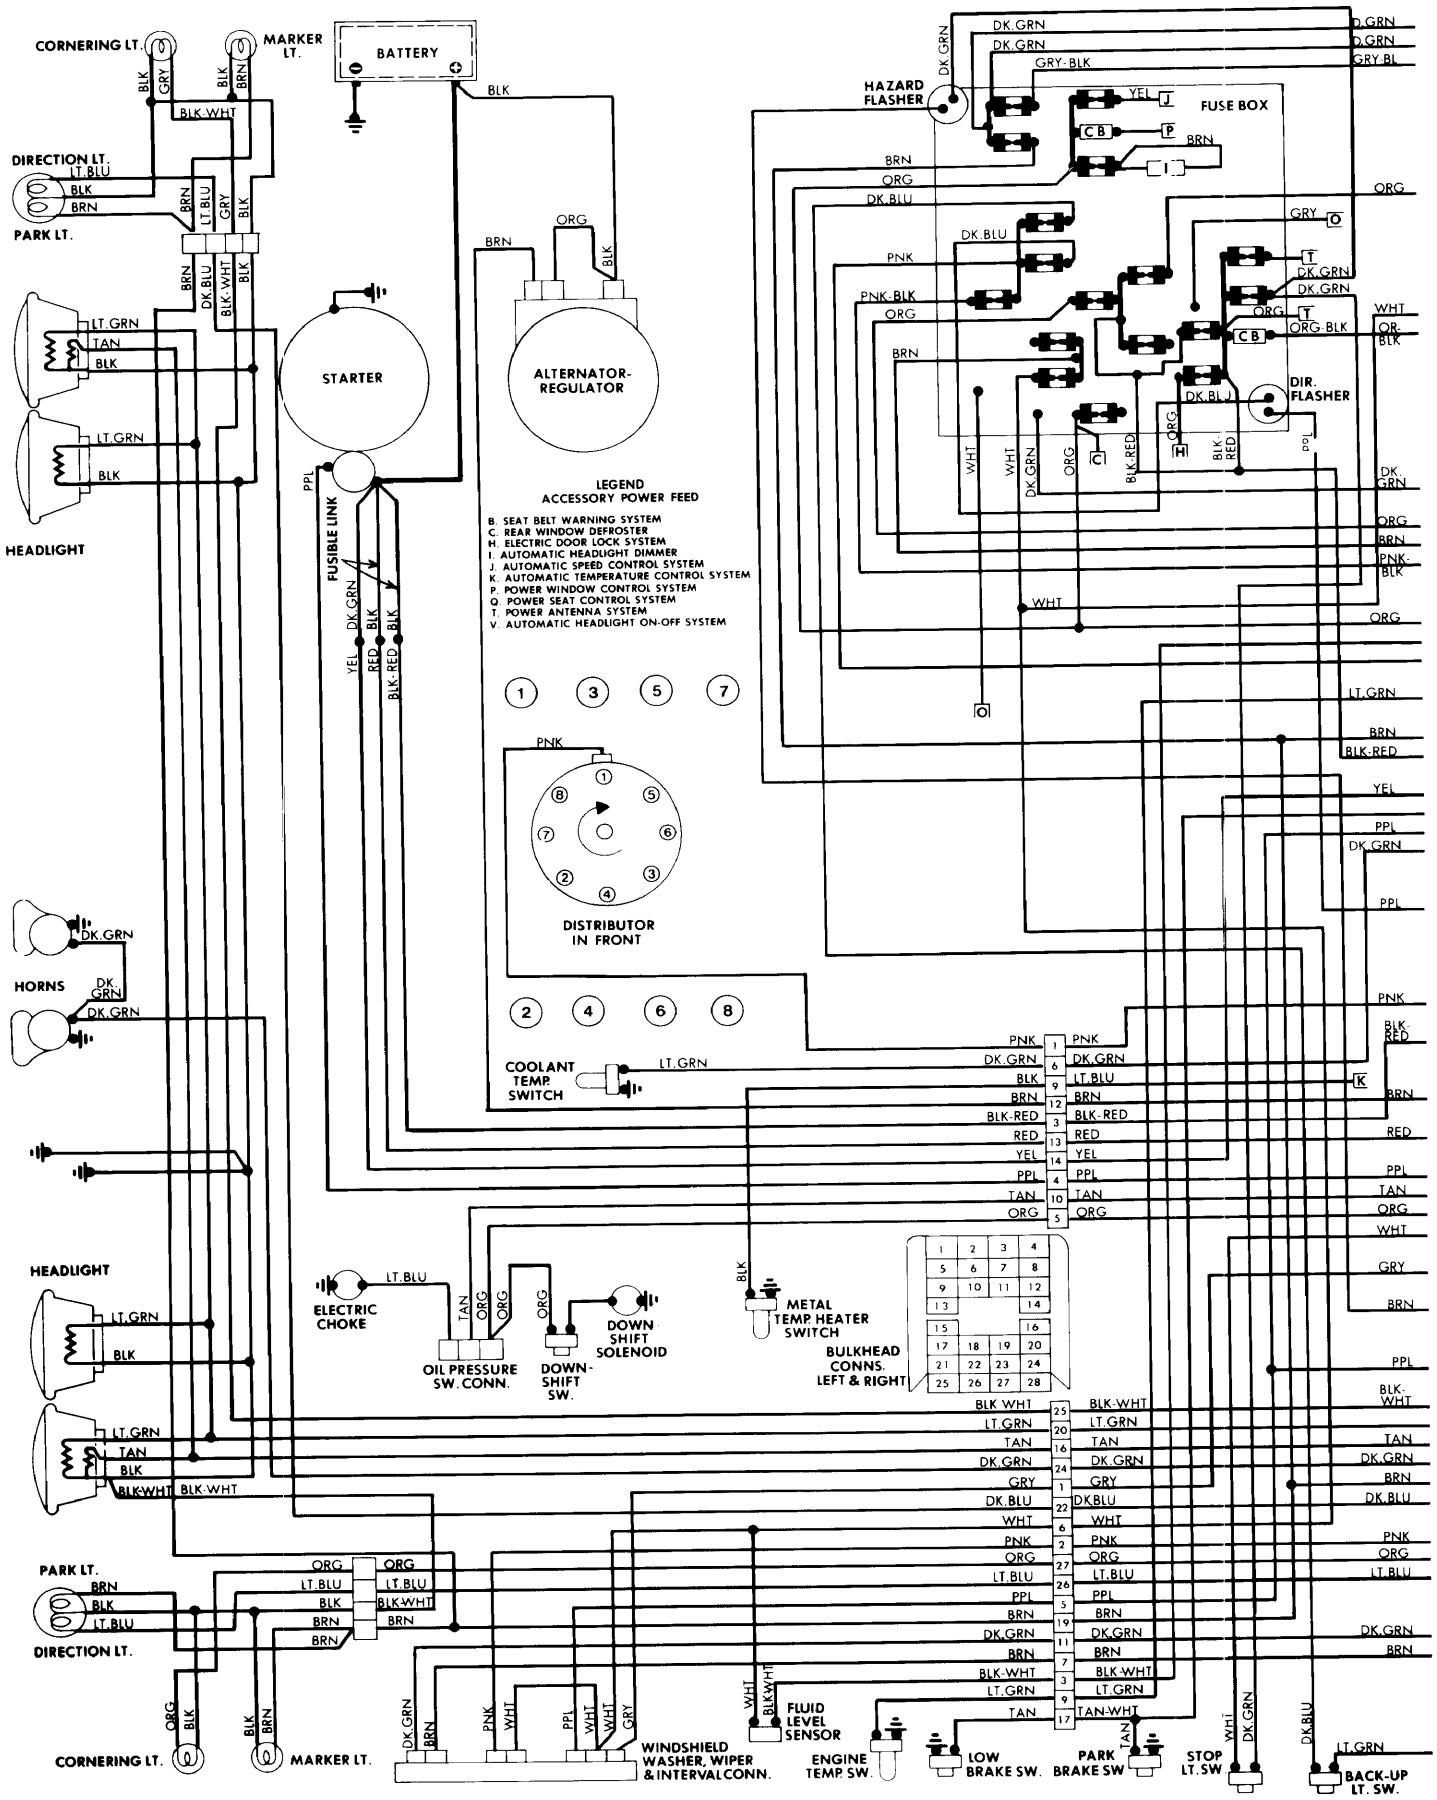
CORNERING LT.
MARKER LT.
BATTERY
DIRECTION LT.
PARK LT.
HEADLIGHT
STARTER
ALTERNATOR-REGULATOR
FUSIBLE LINK
HAZARD FLASHER
FUSE BOX
DIR. FLASHER
LEGEND
ACCESSORY POWER FEED
B. SEAT BELT WARNING SYSTEM
C. REAR WINDOW DEFROSTER
H. ELECTRIC DOOR LOCK SYSTEM
I. AUTOMATIC HEADLIGHT DIMMER
J. AUTOMATIC SPEED CONTROL SYSTEM
K. AUTOMATIC TEMPERATURE CONTROL SYSTEM
P. POWER WINDOW CONTROL SYSTEM
Q. POWER SEAT CONTROL SYSTEM
T. POWER ANTENNA SYSTEM
V. AUTOMATIC HEADLIGHT ON-OFF SYSTEM
DISTRIBUTOR IN FRONT
HORNS
COOLANT TEMP. SWITCH
ELECTRIC CHOKE
OIL PRESSURE SW. CONN.
DOWN-SHIFT SW.
DOWN SHIFT SOLENOID
METAL TEMP HEATER SWITCH
BULKHEAD CONNS. LEFT & RIGHT
WINDSHIELD WASHER, WIPER & INTERVAL CONN.
FLUID LEVEL SENSOR
ENGINE TEMP SW.
LOW BRAKE SW.
PARK BRAKE SW
STOP LT. SW.
BACK-UP LT. SW.

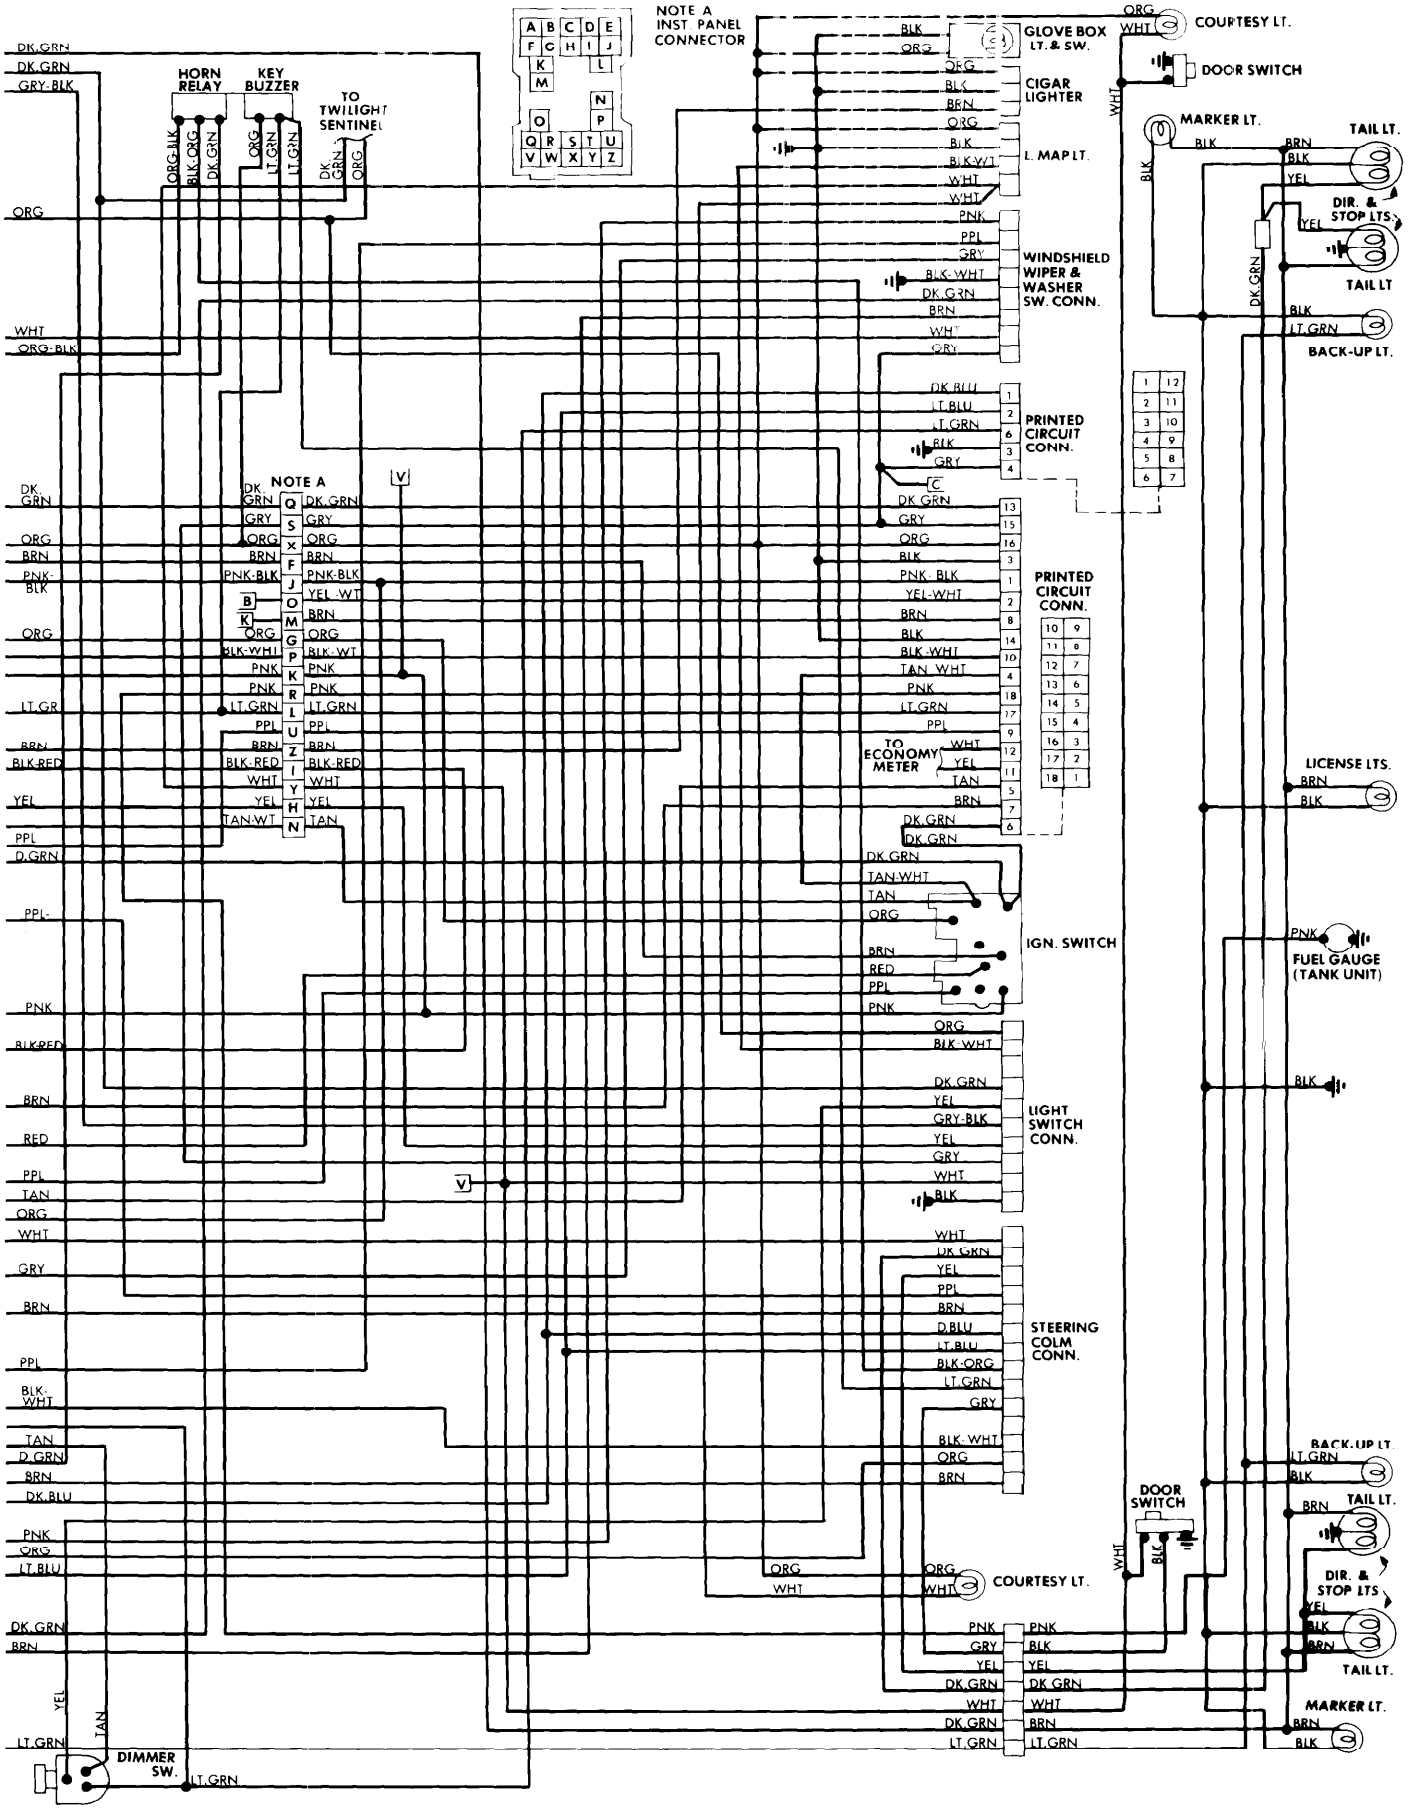
NOTE A
INST. PANEL CONNECTOR
HORN RELAY
KEY BUZZER
TO TWILIGHT SENTINEL
GLOVE BOX LT. & SW.
CIGAR LIGHTER
L. MAP LT.
WINDSHIELD WIPER & WASHER SW. CONN.
PRINTED CIRCUIT CONN.
PRINTED CIRCUIT CONN.
TO ECONOMY METER
IGN. SWITCH
LIGHT SWITCH CONN.
STEERING COLM CONN.
COURTESY LT.
DOOR SWITCH
MARKER LT.
TAIL LT.
DIR. & STOP LTS.
TAIL LT
BACK-UP LT.
LICENSE LTS.
FUEL GAUGE (TANK UNIT)
BACK-UP LT.
TAIL LT.
DIR. & STOP LTS.
TAIL LT.
MARKER LT.
DIMMER SW.