


1971-73 VEGA FRONT

Vega (1971-73)

DESCRIPTION

Ball joint independent front suspension with short and long control arms. Upper arm is bolted to front end sheet metal at inner pivot points. Lower arm attaches with cam type bolts. The coil spring is mounted between lower control arm and shock absorber tower.

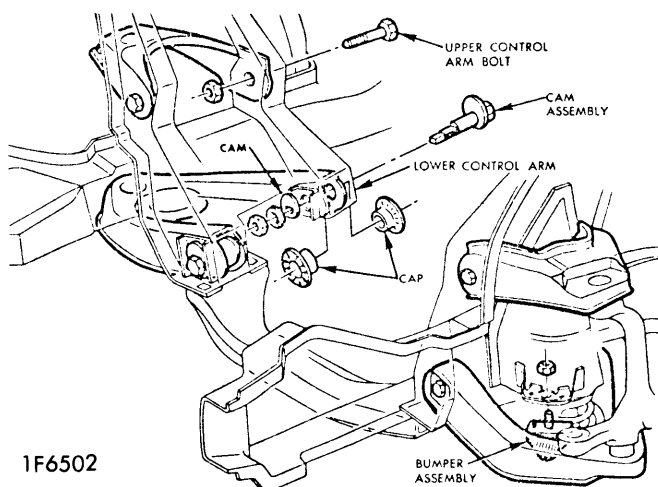

1F6502

VEGA FRONT SUSPENSION

ADJUSTMENT

Caster & Camber – See *Wheel Alignment Specifications & Adjustment* in **WHEEL ALIGNMENT** Section.

Front Wheel Bearings – See *Wheel Bearing Adjustment* in **WHEEL ALIGNMENT** Section.

REMOVAL & INSTALLATION

BALL JOINT REMOVAL (FROM STEERING KNUCKLE)

Removal – Raise vehicle on hoist and remove wheel and tire assembly. Support lower control arm with floor jack, remove cotter pin from ball joint stud, and loosen nut. Install suitable removal tool (J-23742) with cup end over lower ball joint stud nut. Turn threaded end of tool until stud is free of steering knuckle.

Installation – Reverse removal procedure, tightening nuts and bolts to specifications.

STEERING KNUCKLE


Removal – Raise vehicle on hoist. Remove wheel and tire assembly. Remove caliper assembly from disc and suspend out of way (do not disconnect brake hose). Remove hub and disc and splash shield. Disconnect tie rod end from knuckle. Free ball joints from knuckle, as previously described. Remove knuckle from vehicle.

Installation – Reverse removal procedure, tightening nuts and bolts to specifications.

UPPER CONTROL ARM

Removal – Raise vehicle on hoist. Remove wheel and tire assembly. Support lower control arm with floor jack. Remove upper ball stud nut and remove stud from knuckle, using previously described method. Remove control arm pivot bolts and withdraw arm from vehicle.

Installation – Reverse removal procedure, tightening nuts and bolts to specifications.

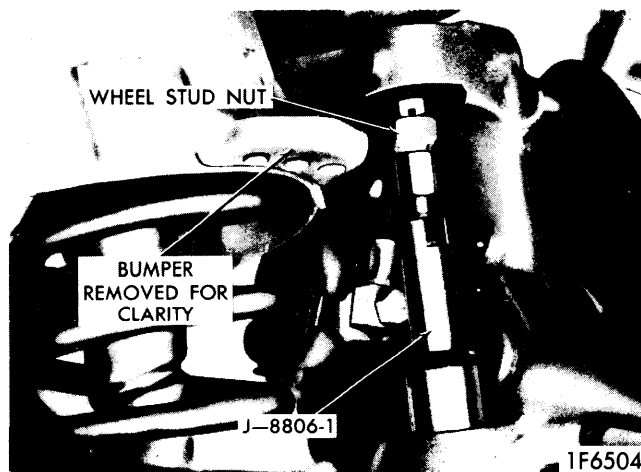

UPPER BALL JOINT STUD REMOVAL

LOWER CONTROL ARM

Removal – Raise vehicle on hoist. Remove shock absorber. Detach ball stud from steering knuckle and remove coil spring, as described. Mark position of cam bolts, then unscrew cam nuts. Remove control arm.

Installation – Reverse removal procedures, noting the following: front cam bolt (camber) must be installed with head toward front of vehicle and rear cam bolt (caster) must be installed with head toward rear of vehicle.

UPPER BALL JOINT

Removal – Raise vehicle on hoist and support lower control arm. Remove upper ball joint stud from steering knuckle, as previously described. Drill or chisel off rivet heads. Remove ball joint.

Installation – Install new ball joint, reversing removal procedure. Attach with parts supplied in service kit. Lubricate ball joint.

LOWER BALL JOINT

Removal – Raise vehicle on hoist and support lower control arm. Free lower ball joint stud from knuckle, as previously described. Install suitable removal tools (J-9519-10, J-9519-5, J-9519-17), turn hex screw until ball joint is pushed out.

Installation – Position new ball joint with bleed vent facing inward. Using suitable installation tools (J-9519-10, J-9519-16, J-9519-17), turn hex screw until new joint is seated. Lubricate joint. Reinstall joint stud to steering knuckle and torque to specifications.

Front & Rear Suspension

1971-73 VEGA FRONT (Cont.)

STABILIZER BAR

Removal - Raise vehicle on hoist. Remove nut and bolt from lower control arm. Remove stabilizer bar bracket. Withdraw stabilizer bar.

Installation - Hold bar in position and install body bushings and brackets. Install retainers, grommets, and spacers on lower control arm. Install nuts and bolts. Torque to specifications.




FRONT SPRING REMOVAL

COIL SPRING

Removal - Remove shock absorber and stabilizer bar. Raise vehicle and place jack stands under lower control arm. Install safety chain around coil spring and lower control arm. Detach lower ball joint stud from steering knuckle, as previously described. Unbolt and free tie rod end from knuckle. Lower control arm slowly and release spring.

Installation - Position spring in spring tower and lift control arm with jack. Guide lower control arm ball stud into place. Install nut and torque to specification. Remove safety chain. Install tie rod end, shock absorber, and stabilizer bar. Torque nuts and bolts to specifications.

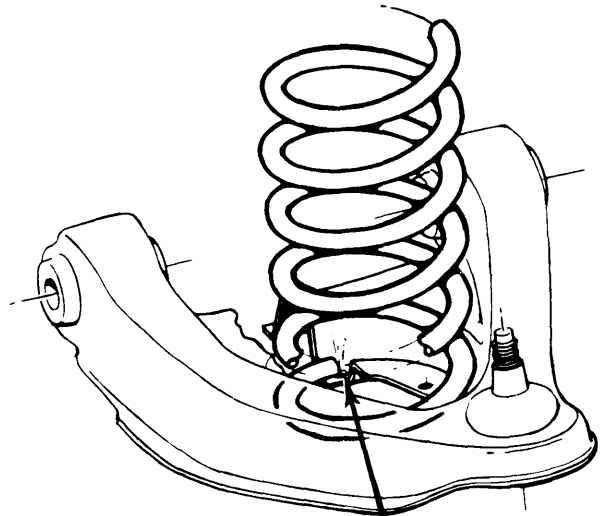

3F6016

NOTE After assembly, end of spring must be visible through hole.

COIL SPRING POSITION

TIGHTENING SPECIFICATIONS

Application	Ft. Lbs.
Upper Ball Joint Nut.....	⓪30
Lower Ball Joint Nut.....	⓪60
Upper Control Arm Pivot Nut.....	60
Lower Control Arm Cam Nut.....	125
Lower Control Arm Bumper.....	120 INCH Lbs.
Stabilizer Bar Bracket.....	30
Stabilizer Bar-to-Control Arm.....	120 INCH Lbs.
Shock Absorber (Lower Mount).....	20
Shock Absorber (Stem).....	90 INCH Lbs.

⓪ - Plus a maximum of 1/6 turn to align cotter pin hole. Do not back off nut to align hole.