

## DATSUN 280Z

280Z

### DESCRIPTION

Rear suspension is a strut type independent suspension. Rear wheels are supported with strut and transverse link. The gear carrier is aligned independently and separately from the suspension, and gear carrier is mounted directly to body with rubber insulators. Rear axle housing is welded on lower end of strut which contains a shock absorber, and its lower side is connected to the transverse link through rubber bushings. At strut midpoint, the body is suspended with coil springs. The transverse link is attached to the body with rubber cushions.

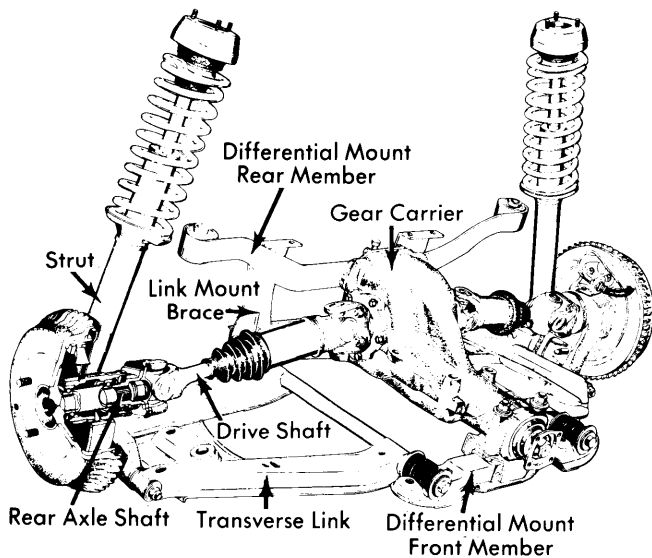


Fig. 1 Datsun 280Z Rear Suspension Assembly

### REMOVAL & INSTALLATION

#### STRUT & COIL SPRING

**Removal** - 1) Block front wheels, raise rear end of vehicle, and support at body with stands. Remove rear wheels. Disconnect brake line coupler (body side) and parking brake linkage. Disconnect stabilizer bar from transverse link.

2) Remove transverse link outer self-locking nuts and bolt from lower end of bearing housing. Withdraw spindle and separate transverse link from strut assembly.

3) Disconnect drive half-shaft at wheel side. Remove strut mounting nuts from passenger side and remove strut assembly downward. **NOTE** - When removing strut assembly, apply a jack to lower end of strut and remove it gradually.

4) For removal of coil spring, clamp strut assembly in vise with suitable strut attachment (ST35650000). Compress coil spring until strut mounting insulator can be turned by hand, then remove self-locking nut. Remove strut insulator, mounting bearing, and upper spring seat. Remove coil spring with tool still attached to spring.

**Installation** - To install, reverse removal procedure, noting the following: Tighten transverse link outer self-locking nut after rear wheels are installed and vehicle is lowered to ground.

#### TRANSVERSE LINK

**Removal** - 1) Block front wheels, raise rear end of vehicle, and remove rear wheels. Remove stabilizer bar from transverse link. Separate transverse link from strut assembly. Refer to *Strut & Coil Spring* above. Support gear carrier with a jack.

2) Loosen transverse link inner bolts for both front and rear. Remove differential mount front insulator installation nut. Remove mount front member installation nuts, and remove differential mount front member.

3) Remove link mount rear bracket and withdraw the transverse link. Detach inner bushing and outer bushing from link.

**Installation** - To install, reverse removal procedure, noting the following: Tighten transverse link inner bolts and outer self-locking nut only after rear wheels are replaced and vehicle is under standard load (on the ground).

#### REAR SUSPENSION ASSEMBLY

**Removal** - 1) Remove strut assemblies from both sides as previously outlined. Detach main muffler. Disconnect stabilizer bar from body. Separate propeller shaft from final drive. Loosen transverse link inner bolts for front and rear. Support gear carrier with jack.

2) Remove differential mount front member installation bolts. Unscrew link brace mounting bolt and differential mount rear insulator attaching bolt (for both sides). Lower jack slowly and remove rear suspension assembly.

**Disassembly** - 1) Remove link mount rear bracket and remove transverse link (for both sides). Unscrew drive shaft installation bolt (in gear carrier side), and separate drive shaft from gear carrier (both sides).

2) Extract inner and outer bushings from transverse link. Remove differential mount rear member and differential mount front insulator from gear carrier. Drift out differential mount rear insulator from rear member.

**Reassembly & Installation** - Assemble and install rear suspension assembly in reverse of disassembly and removal procedures, while noting the following: When replacing transverse link inner bushing, position bushing to link shaft and align projection on bushing horizontally. Align center of bushing to center of bracket and temporarily tighten transverse link inner bolts. Do not fully tighten inner bolts until installation is complete and vehicle has been lowered to ground. When differential carrier front insulator is installed, ensure arrow points toward front.

#### TIGHTENING SPECIFICATIONS

Application	Ft. Lbs. (mkg)
Transverse Link Outer Self-Locking Nut .....	54-68(7.5-9.4)
Transverse Link Inner Bolt .....	101-106(14-16)
Strut Upper Mounting Nuts .....	18-25(2.5-3.5)
Strut Rod Self-Locking Nut .....	54-69(7.5-9.5)
Gland Packing .....	51-94(7-13)
Drive Shaft Installation Bolts .....	36-43(5-6)